Installation Guide


Front lower Control Arm—Front & Rear Bush

Suits: Toyota Corolla ZRE140 (05/07-0N)

:Toyota Corolla ZRE150 (05/07-ON)

:Toyota Tarago ACR50 (03/06-ON)

(Always refer to the current catalogue for complete application listings). N.B.This install quide should be used in conjunction with the workshop manual.

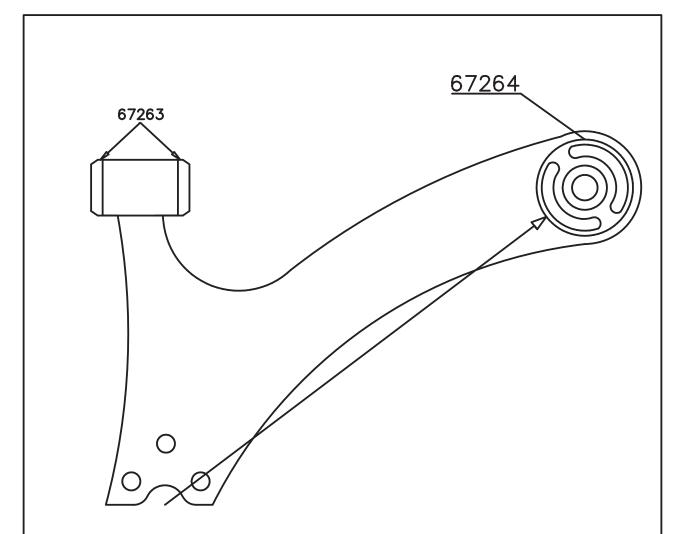

place voiding inline with ball joint as indicated by arrow.

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are follwed in addition to the above.