

Installation Guide

LOWER INNER REAR BUSH

Z 5167


Suits: Holden Captiva 10/06 - on

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

Bush void and crush tube orientation.

Standard replacement

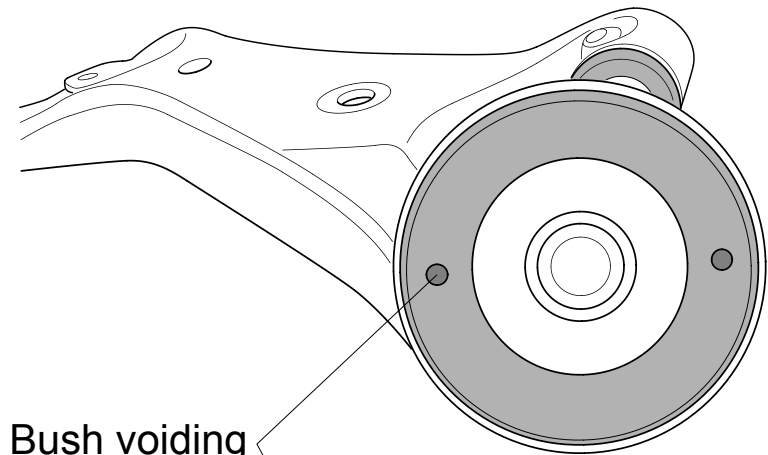


Bush voiding

Bush voiding and offset crush tube should be on a horizontal plane as pictured. Note: Offset bushing kit offers the ability to make live caster adjustment for fine tuning if required.

Note: supplied washer to be installed under the OE nut.

Caster offset

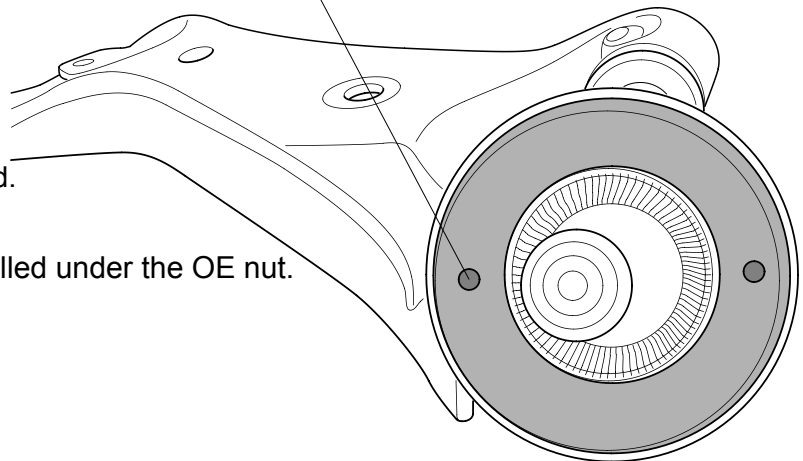

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.