
Z 5083

## Installation Guide Front Upper Control Arm Bush

Suits: Nissan D40 Navara 12/05 - on

(Always refer to the current catalogue for complete application listings)

N.B: These instructions should be used in conjuction with the workshop manual.

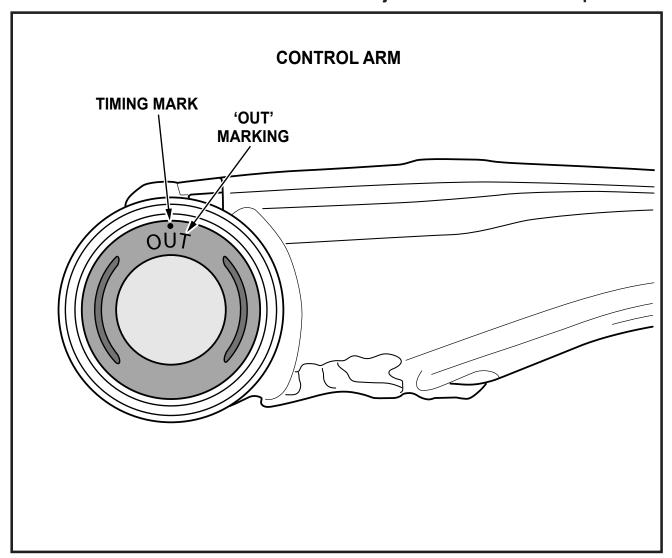

Press bush into eye with timing mark toward top of arm and 'OUT' marking facing away from centre of arm as shown.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.


## Installation Guide Front Lo wer Cont rol Arm Bush - Offset

Z 5100

Suits: Nissan D40 Navara 12/05 - on

(Always refer to the current catalogue for complete application listings)

N.B: These instructions should be used in conjuction with the workshop manual.

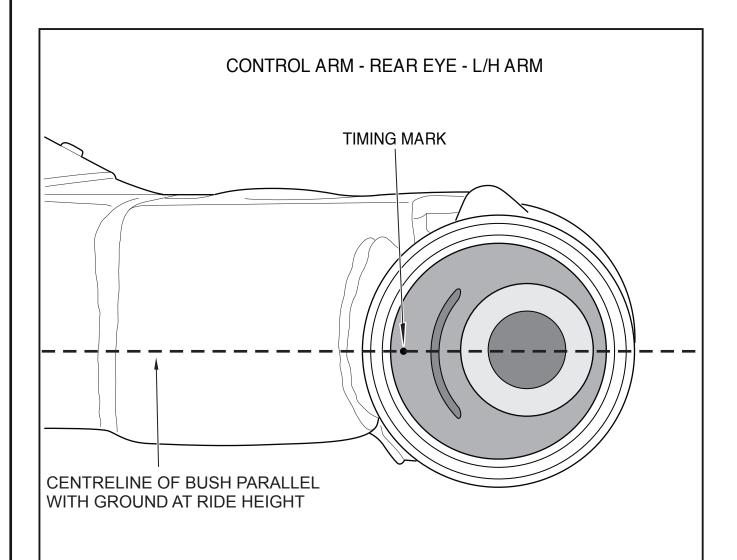

- 1. Press bush into eye with timing mark facing towards balljoint as indicated to achieve maximum camber.
- 2. Bush must be pressed into arm with timing mark facing to outside of arm to ensure the longer bush flange faces to front and rear of vehicle when arm is installed.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.