

Installation Guide

Front Lower Control Arm Rear Bushing

Suits: Holden Captiva

Z5567
Rev. A


(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.


Instructions

1. Raise vehicle evenly and safely support.
2. Remove front wheels, disconnect ball joints and proceed to un-bolt front control arms.
3. Once arm is removed, confirm chassis clevis's are clean of any dirt.
4. Grease supplied bushings ID's and faces with supplied grease.
5. Confirm rear bushing/bracket fitment by referring images below.

OE Bushing

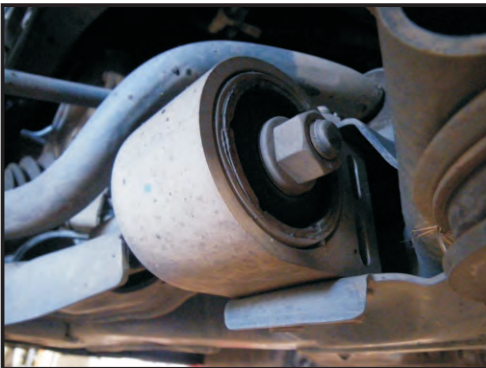

New Supplied Bushing

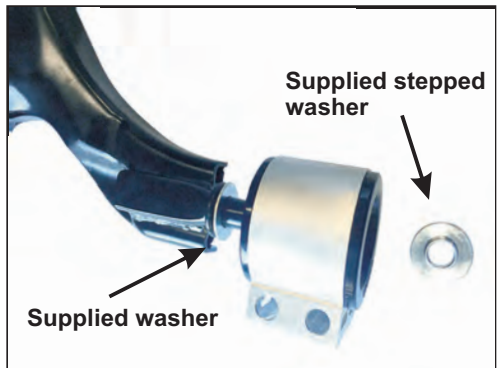

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.