

Instructions

Front Control Arm

- Rear Bushing

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Nissan Tiida
- 2007-2012


Always refer complete catalogue listing

Contents - 2x Vertical Axis bushings

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- Proceed to un-bolt wheels.
- Loosen ball joint nut, but don't remove yet. Strike hub with hammer to break ball joint taper.
- Un-bolt and remove front bushing and rear bushing bolts - refer image below.
- Using a hydraulic Press, press out the rear vertical mount bushing.
- Clean control arm from any burs or oil. Proceed to press in new supplied bushings.
- Re-fit arms to vehicle. Refer Torque spec below.
- a whe

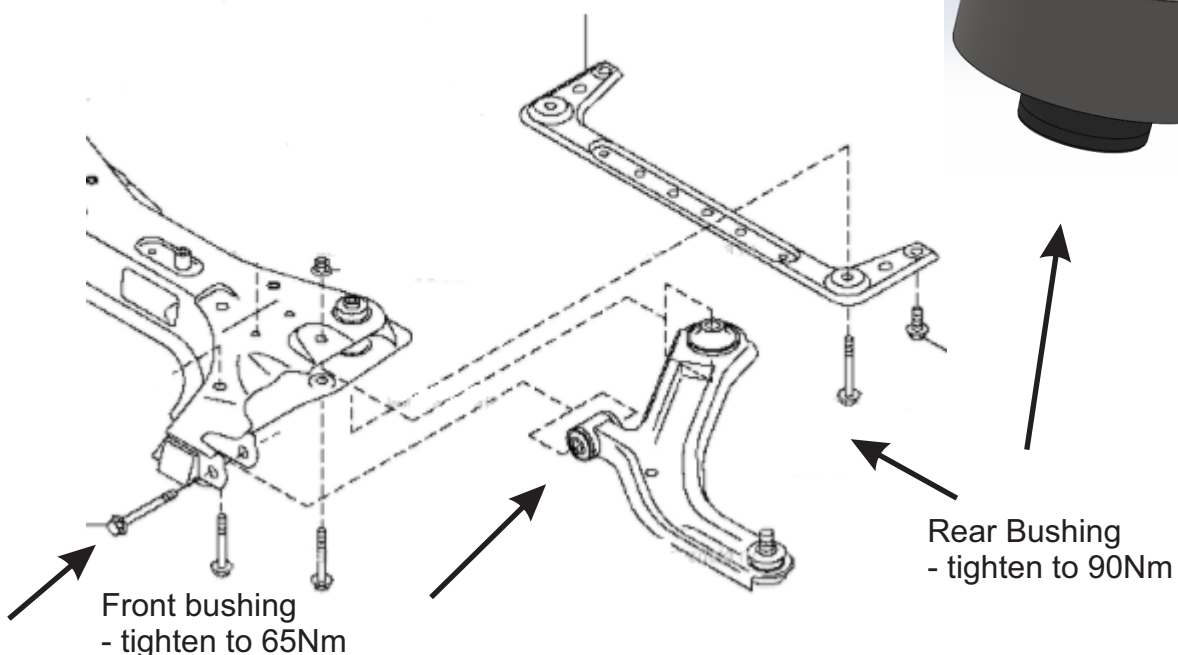

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.