


Installation Guide

Rear Sway Bar Link Assembly

Suits : Toyota Landcruiser 78/79 Series
: Toyota Landcruiser 200 Series

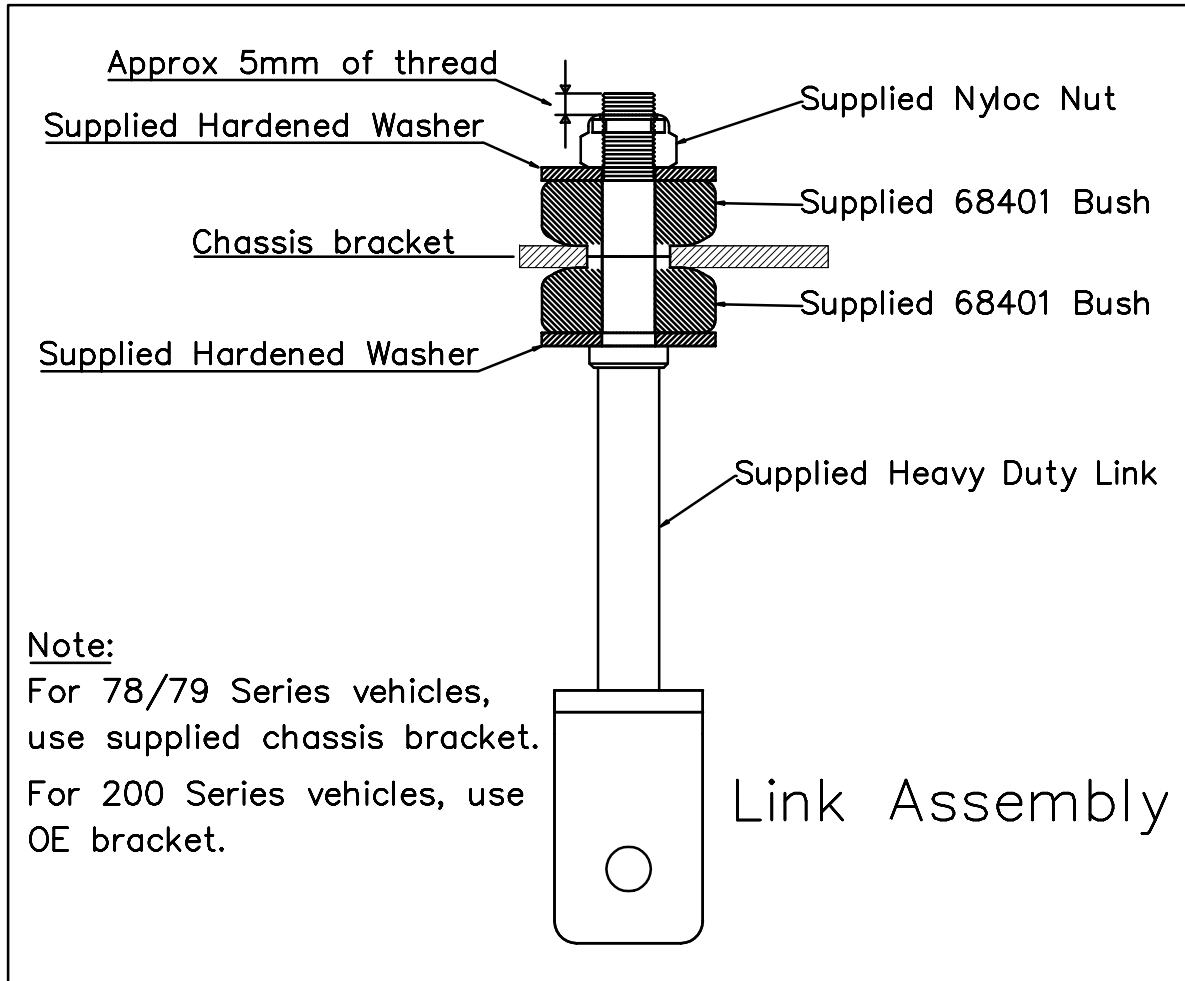

Note: Installed Bushing Pre-load

Assemble all supplied components hand tight on the vehicle as seen in the assembly drawing.

With the vehicle at ride height, tighten the nut ONLY 1 FULL TURN to preload the bushes.

There will be approximately 5mm of thread exposed once the nut is tightened.

Incorrect pre-load procedure may result in premature link and/or bushing failure.

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.