


# Installation Guide

## Front Upper Shock Mount Bushing

Suits : Mitsubishi Pajero NM – NW 5/00–on..  
 : Mitsubishi Montero NM – NW 5/00–on..  
 : Mitsubishi Shogun NM – NW 5/00–on..

(Always refer to the current catalogue for complete application listings).  
 N.B. This install guide should be used in conjunction with the workshop manual.

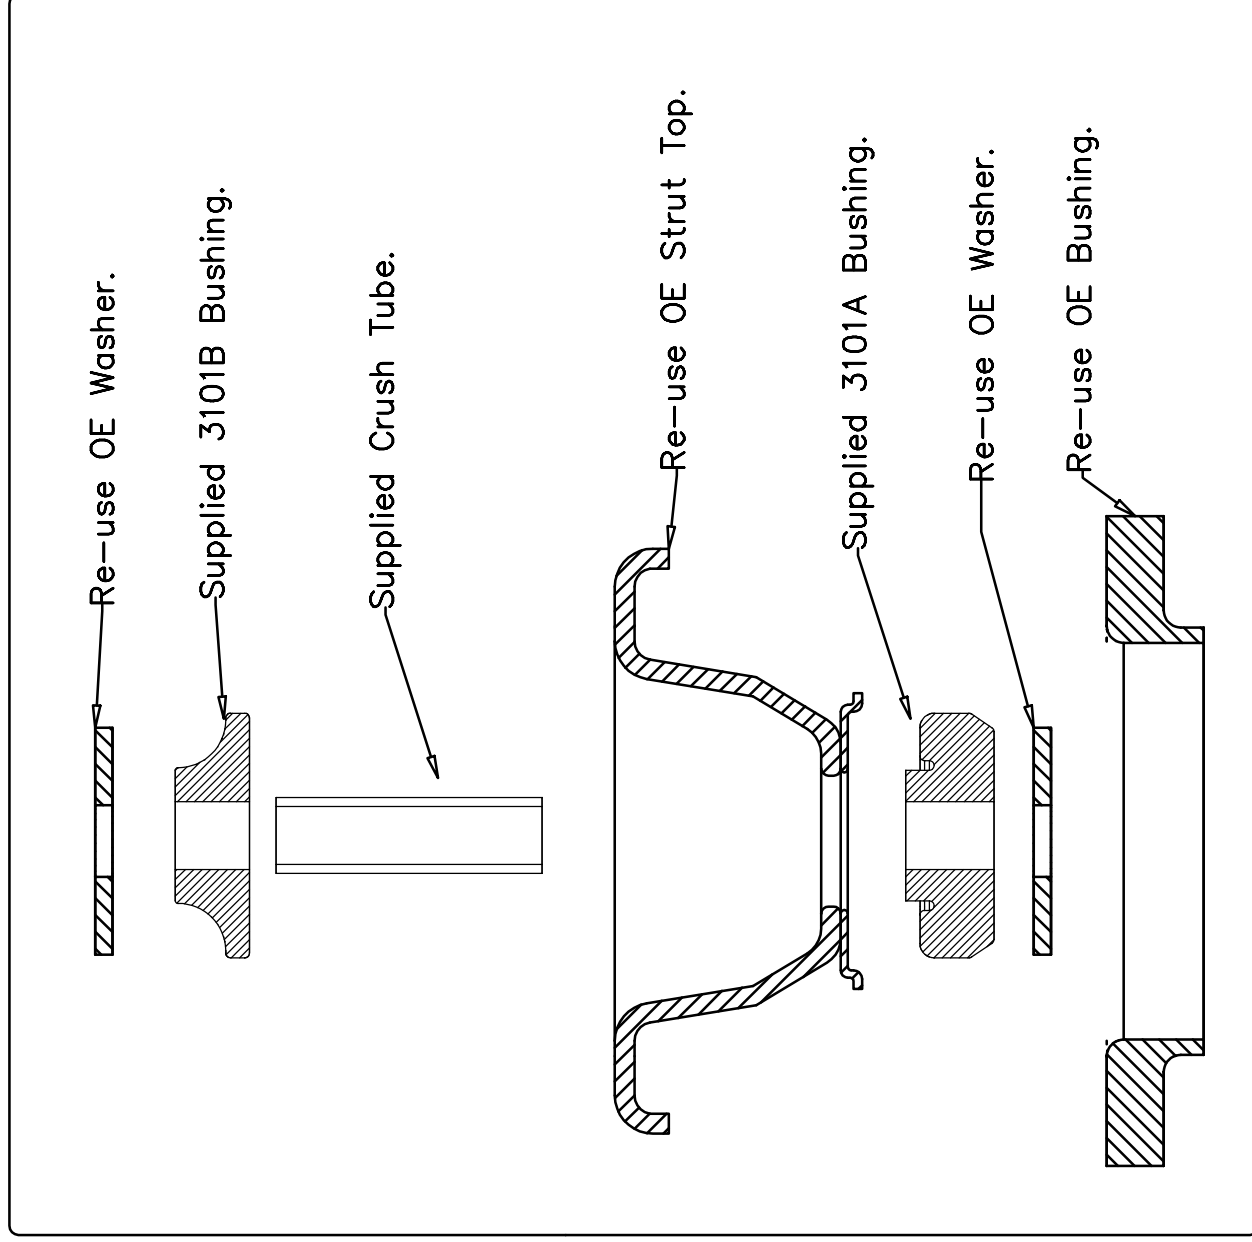

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.