

Instruction Sheet

Auxillary - Transfer Shaft


Z5260

Suits: Tarago TCR series

N.B: This instruction sheet should be used in conjunction with the workshop manual

1. Raise vehicle and safely support.
2. Un bolt coupling.
3. Press out worn bushings.
4. Before pressing in replacement units, note voiding and tube length.
5. Refer figures 1 and 2 for voiding alignment and tube length from both sides of coupling.
6. Press bushings in position - take care to not damage the small bushings.
7. Re fit to vehicle.
8. Re check all bolts after initial 100kms.

Note every 2nd bushing to be pressed in 180 degrees opposed

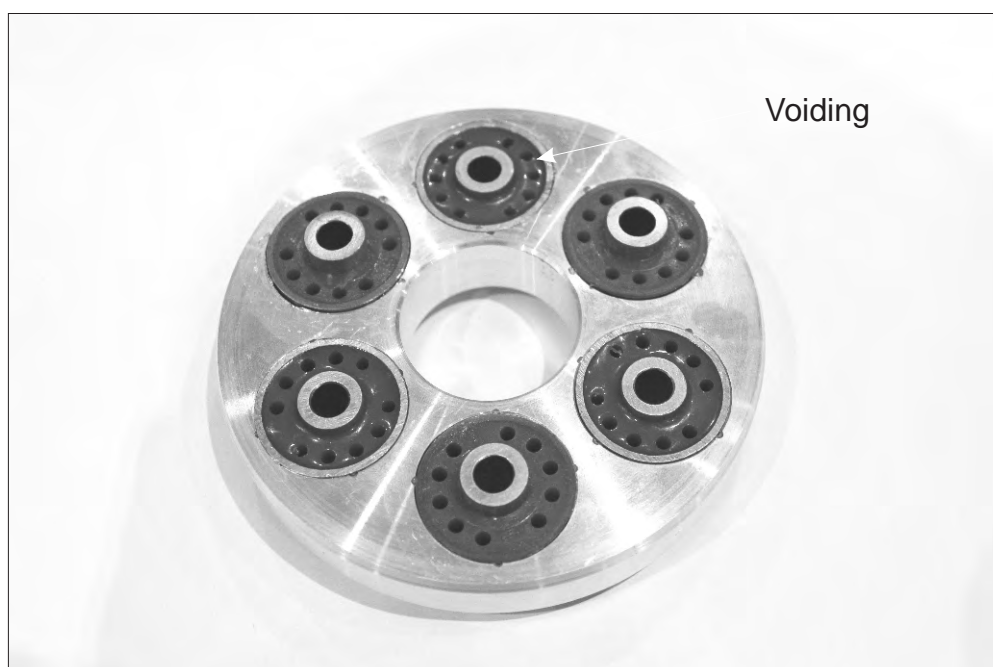

N.B: It is recommended that a licensed workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.