


K-RMTH-01 RAPID SHOVEL HOLDER

PN	DESCRIPTION	QTY
1	RAPID CLAMP HOLDERS	2
2	M6 x 23mm BTN HEAD SCREW	2
3	M6 FLAT WASHER	2
4	M6 T-NUT	2

Tools Required:
Tape measure

Tools Supplied:
5mm Allen Tool

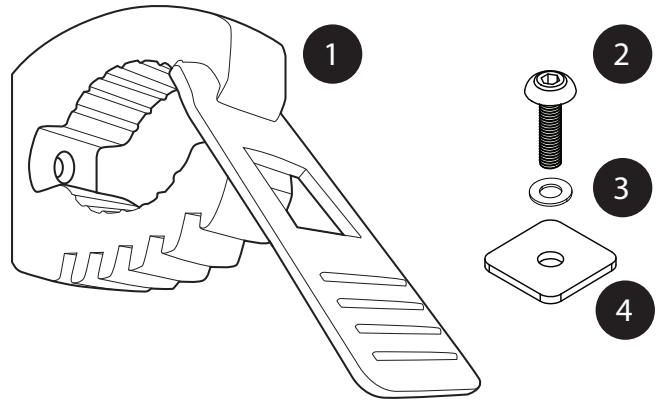


1 Insert T-nuts into the desired channel of the Platform.

2 Measure size of tool to be carried.

3 Using the M6 hardware provided, loosely fix the Rapid Clamp holders to the platform.


K-RMTH-01 RAPID SHOVEL HOLDER

4 Slide the holders to accommodate the tool to be carried ((X)mm).

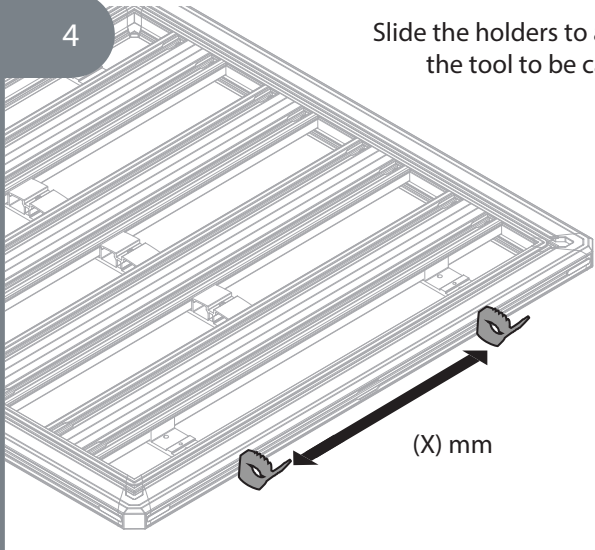


(X) mm

Fix the holders in place with a 5mm allen tool.

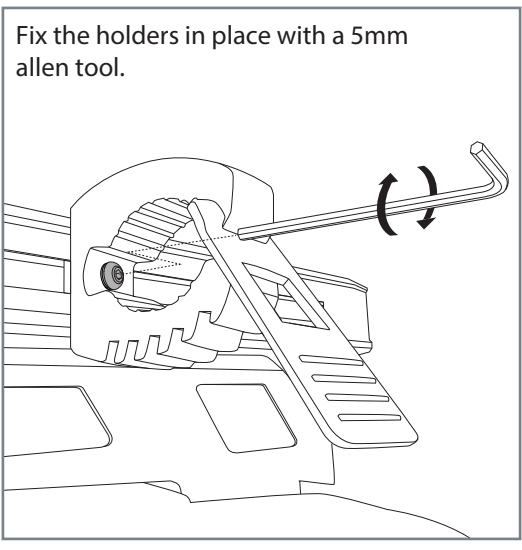

5 Place tool within the carriers.

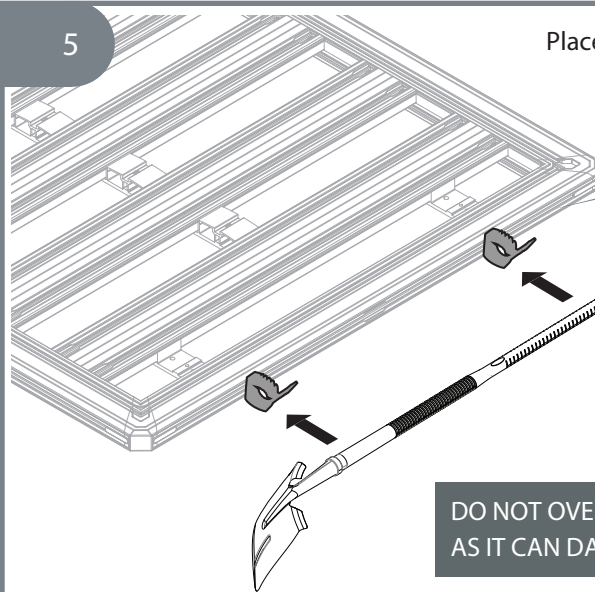

DO NOT OVERSTRETCH THE STRAP AS IT CAN DAMAGE THE PRODUCT.

The Rapid Clamp strap, wraps around the handle of the tool. Pull the strap tight and lock with the teeth on the opposite side of the holder as shown.

