



SUBARU XV GX5 HYBRID SUV
CARGO BARRIER 'FRONT POSITION KIT'
INSTALLATION INSTRUCTION - Part # 705127
 VEHICLE YEARS OF MANUFACTURE - FROM DEC 2019





Use this kit with Cargo Barrier part number 705125 only.
Kit will enable the barrier to be installed in the behind 1st row seats position.

Installation time approximately 15 Mins.

"The estimated fitting time is based on an experienced fitter conversant with the fitment procedure"

Parts List

Item	Component Name	Part No.	Qty
1	Bush - Pivot Saddle	752680	2
2	Pivot Saddle	752700	2
3	Bolt - Hex Head, M10 x 1.5 x 20mm ZP	912205	2
4	Nut - Hex, Nyloc, M10 x 1.5 ZP	922090	2
5	Milbolt - M10 x 1.5 x 19mm	912820	6
6	Flat Washer - 10mm ZP	932006	2
7	Velcro Tie	904003	4
8	Lateral Support Headrest Attachment	753199	2
9	Bottom Strap	771991	2
10	Tube Extension Strap (Top)	771982	2

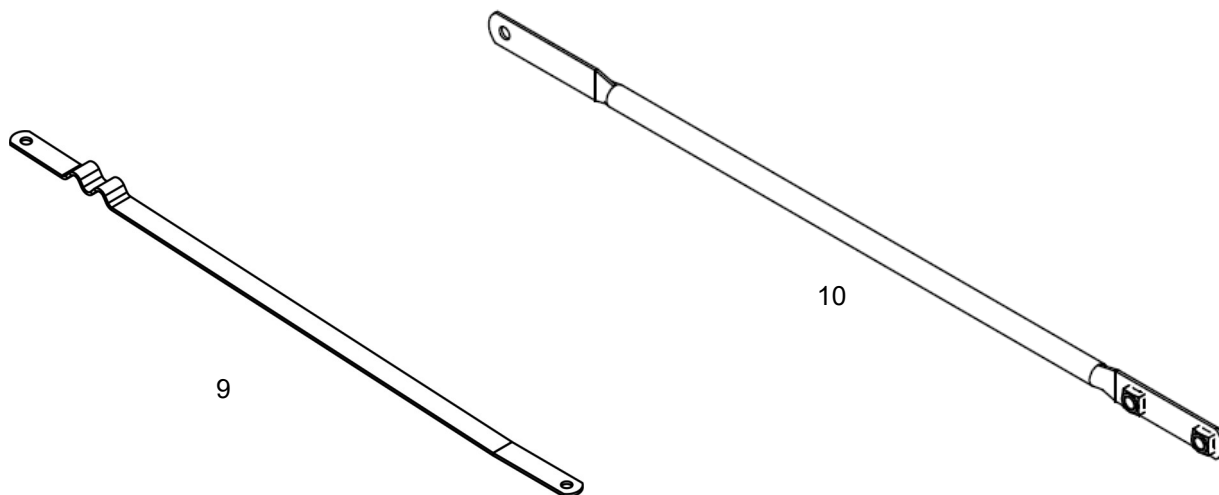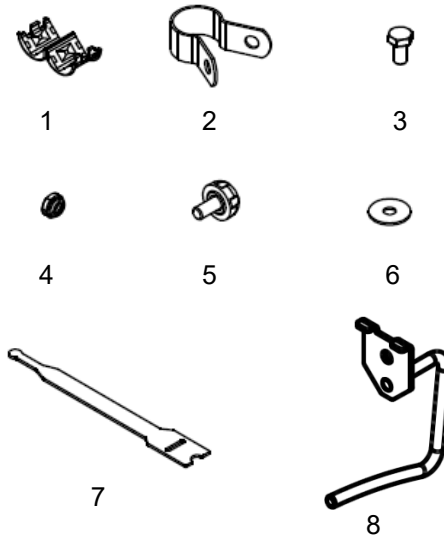


TOOLS REQUIRED

- Socket Wrench
- 17mm A/F Hex Socket
- 16mm A/F Spanner


E and OE—Errors and Omissions Excepted




SECURE BOTTOM STRAPS TO CARGO BARRIER ASM

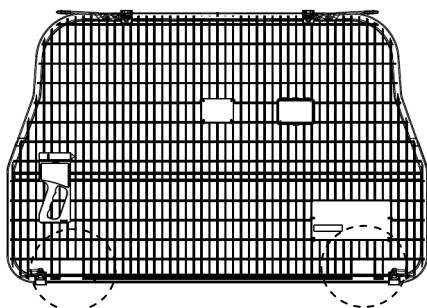


1. Locate the open apertures in the cargo barrier mesh at the bottom of the cargo barrier.

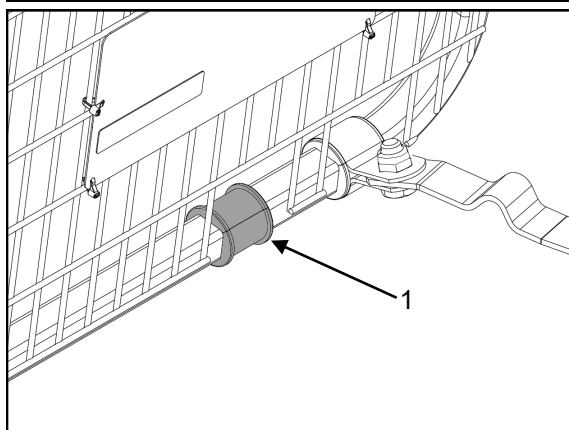

2. Place a saddle bush (1) over the cargo barrier frame as shown.

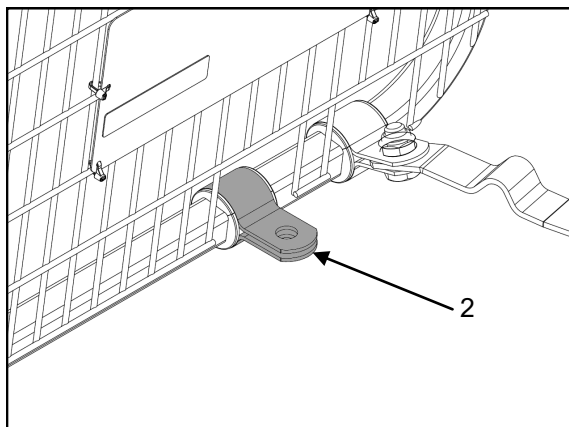

3. Place a pivot saddle (2) over the saddle bush then push the ends together.

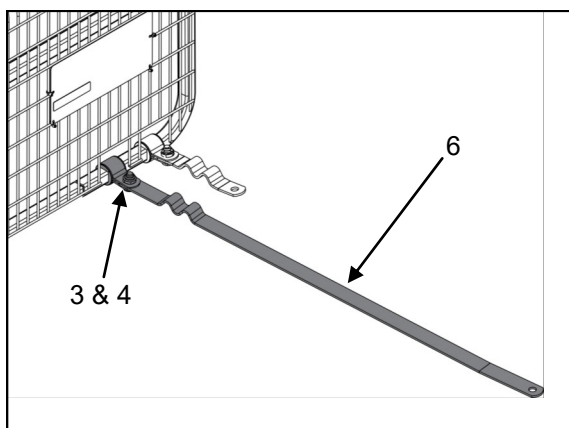

4. Place a bottom front position strap (6) in between the saddle as shown then secure with an M10 bolt and nut (3 & 4).
5. Tighten the nut and bolt until the strap is firm in the saddle but can still be pivoted.
6. Repeat the above on the other side.
7. Pivot the long bottom straps across the meshed side of the cargo barrier then secure using Velcro ties (5).