

INSTALLATION INSTRUCTION



PART DESCRIPTION: FRONT POSITION STRAP KIT—(TO SUIT OUTLANDER CARGO BARRIER 306100)

PART NUMBER: 306104

YEARS OF MANUFACTURE: NOV. 2006 ONWARDS



CARGO BARRIER MUST NOT BE FITTED TO FRONT POSITION IN VEHICLES EQUIPPED WITH SIDE CURTAIN AIR BAGS.

There is a strong possibility of severe personal injury or death if this instruction is not followed.


The front position strap kit contains sufficient components to convert the cargo barrier to a two position barrier. Do not substitute any components. A high degree of technical competence is necessary to correctly install this product. We recommend the cargo barrier be converted by an authorised outlet to ensure the barrier installation complies with AS/NZS 4034 Standard.

TOOLS REQUIRED


- 17mm AF Socket & Wrench
- 16mm AF Ring Spanner

PARTS SUPPLIED


ITEM	COMPONENT NAME	PART NUMBER	QTY.
1	Strap—753mm L/H Side (Non Sunroof)	775110	1
2	Strap—753mm R/H Side (Non Sunroof)	775115	1
3	Strap—609mm L/H Side (Sunroof)	775130	1
4	Strap—609mm R/H Side (Sunroof)	775135	1
5	Strap—560mm Bottom	772955	2
6	Webbing Strap with Side Release Buckle (Stabiliser strap)	305641	2
7	Velcro Fastener	904001	4

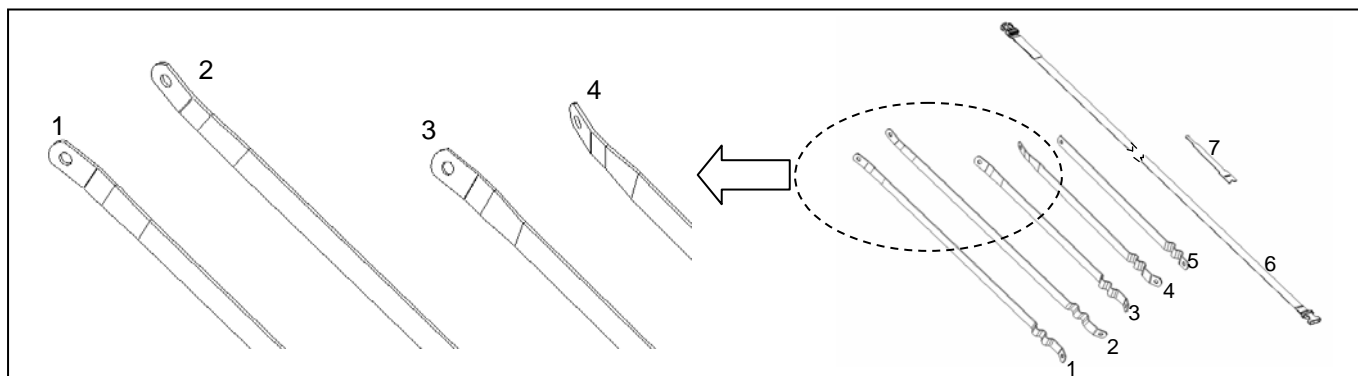


PART DESCRIPTION: FRONT POSITION STRAP KIT— 306104

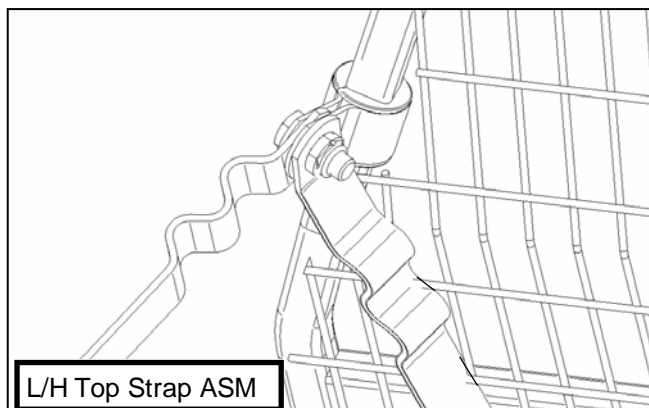


L/H Top Strap ASM

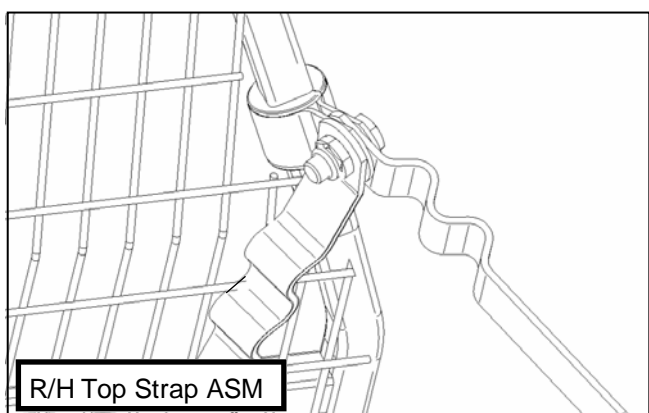

R/H Top Strap ASM

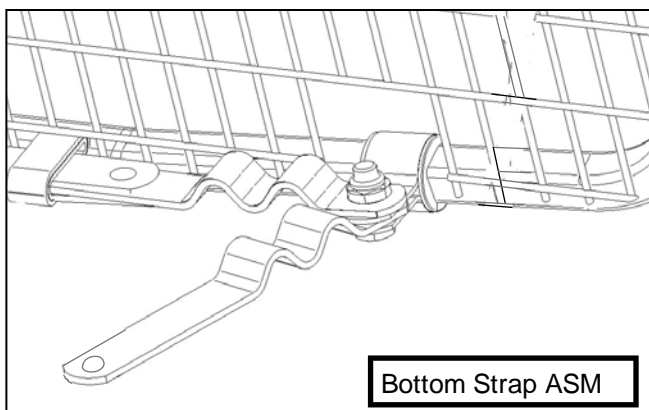

Bottom Strap ASM

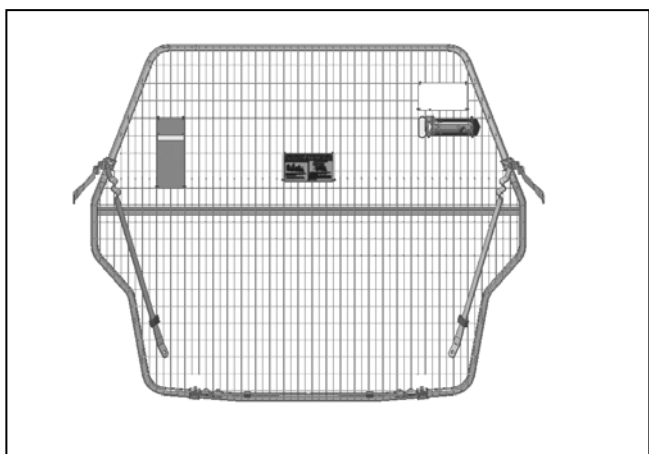

1. INSTALL FRONT POSITION STRAPS TO CARGO BARRIER

1. Select correct top straps to suit particular vehicle to which cargo barrier is to be installed. (Sunroof or Non Sunroof)
2. Identify L/H and R/H top straps. **Correct orientation is important.**
3. One strap at a time remove Nyloc nut from saddle assembly, place strap over screw and replace Nyloc nut. Tighten until straps are firm but can still be rotated.
4. Repeat procedure for bottom straps.
5. Secure straps to barrier mesh using Velcro fasteners supplied, if not required for immediate use.
6. Webbing stabiliser straps can be either attached to barrier mesh or stored in a safe place in vehicle. Use when cargo barrier is in front position. **Refer User Instruction for correct use.**