



TOYOTA COROLLA HATCHBACK CARGO BARRIER 'FRONT POSITION KIT 'INSTALLATION INSTRUCTION

Part # 607202

VEHICLE YEARS OF MANUFACTURE - FROM JUNE 2018








**Use this kit with Cargo Barrier part number 607202 only.
Kit will enable the barrier to be installed in the behind 1st row seats position.**

Installation time approximately 10 Mins.

"The estimated fitting time is based on an experienced fitter conversant with the fitment procedure"

Parts List

Item	Component Name	Part No.	Qty
1	Screw - Hex Head M10 x 1.5 x 25	912215	2
2	Washer - Crinkle 3/8"	932125	2
3	Milbolt - M10 x 1.5 x 19mm	912820	4
4	Milbolt - M10 x 1.5 x 24mm	912825	2
5	Top Link Strap	771008	2
6	Top Strap LHS	776047	1
7	Top Strap RHS	776049	1
8	Lift Panel ASM (with lateral support bracket)	753134	1
9	Bottom Strap LHS	776243	1
10	Bottom Strap RHS	776244	1

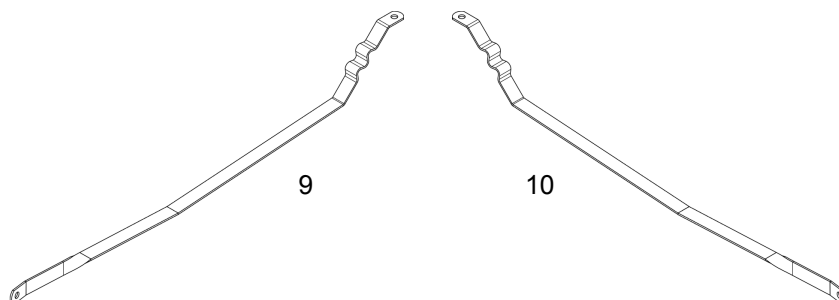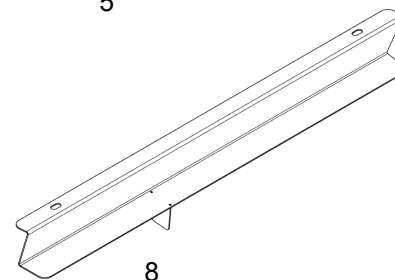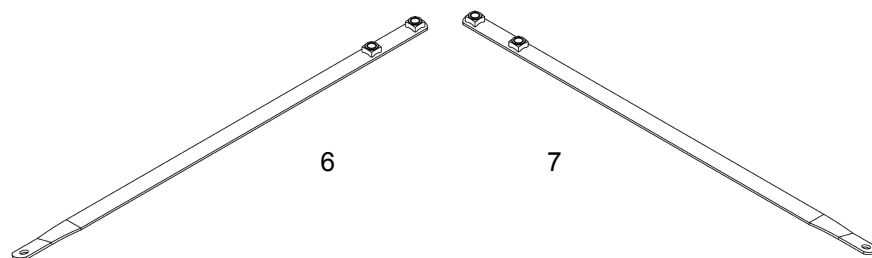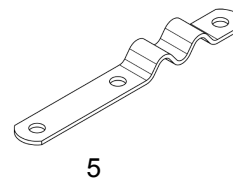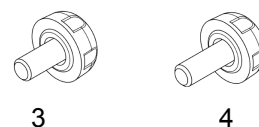


TOYOTA COROLLA HATCHBACK CARGO BARRIER 'FRONT POSITION KIT 'INSTALLATION INSTRUCTION

Part # 607202


VEHICLE YEARS OF MANUFACTURE - FROM JUNE 2018




ASSEMBLE LINK STRAPS TO CARGO BARRIER

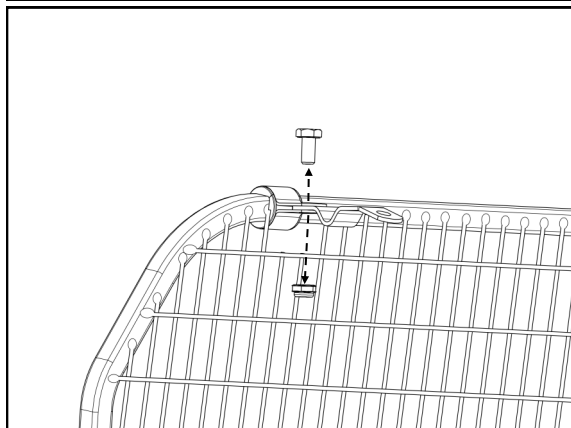

1. Unscrew the bolt and nut from the top strap. Leave the rear position strap in place at the moment. Discard the 20mm long saddle screws.

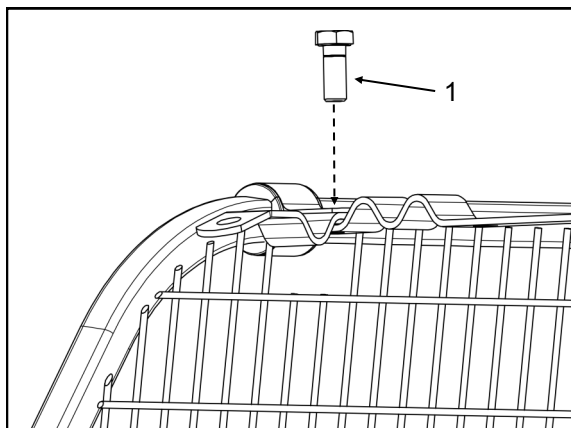


2. Replace the saddle screw with item 1.

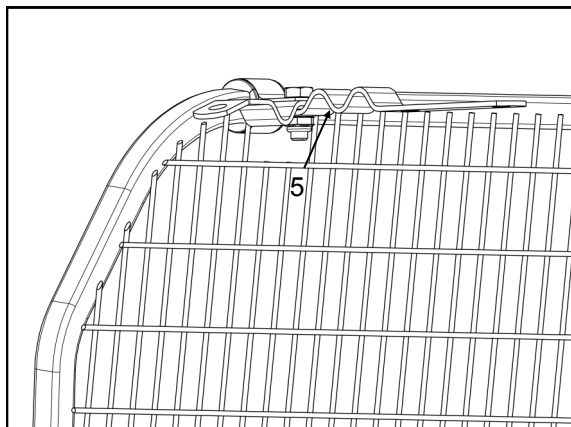

3. Attach a top strap (5) underneath the pivot saddle, and secure the nut back onto the screw. Tighten until the strap is firm but can still be pivoted.

Note: If installing in the front position immediately, continue through steps below. Otherwise, install in rear position as per rear position installation instructions.

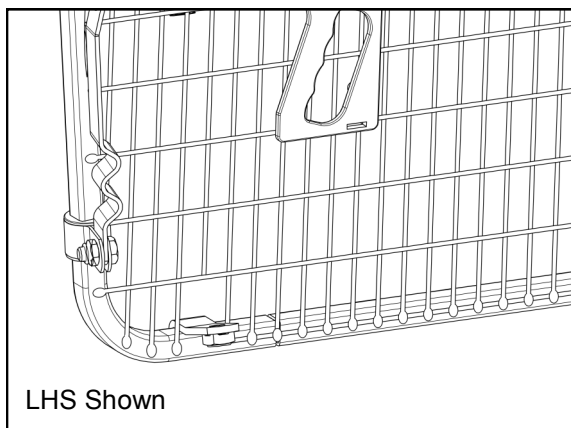


LHS Shown

4. Put the seats down in the second row.
5. Lay the cargo barrier front side down.


TOYOTA COROLLA HATCHBACK CARGO BARRIER 'FRONT POSITION KIT 'INSTALLATION INSTRUCTION

Part # 607202


VEHICLE YEARS OF MANUFACTURE - FROM JUNE 2018

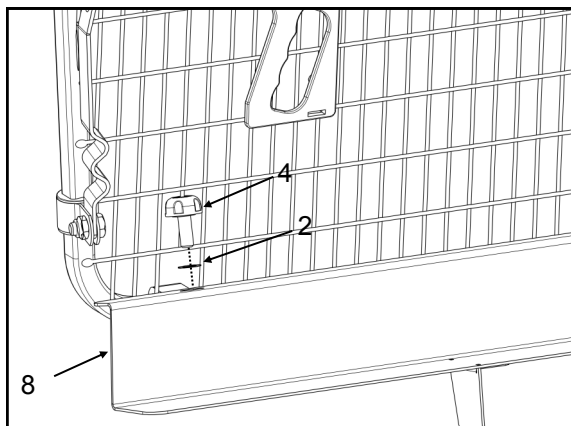

6. Attach the lift panel ASM (8) to the bottom cargo barrier brackets using 24mm Milbolts (4) and washers (2).
7. Lift the cargo barrier up, with the lift panel ASM sitting on the rear seats.

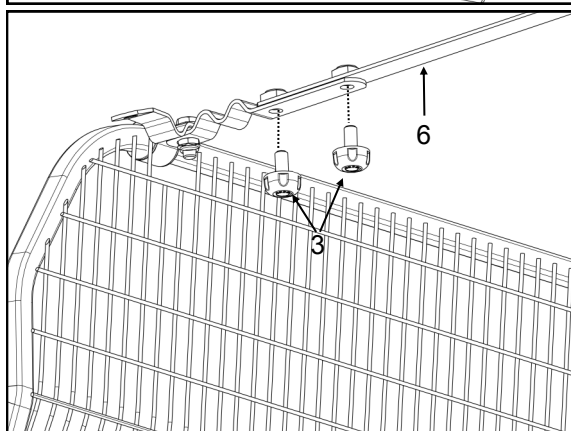


8. Attach the LHS top strap (6) to the top strap on the cargo barrier using 19mm Milbolts (3) as shown.
9. Repeat on RHS.

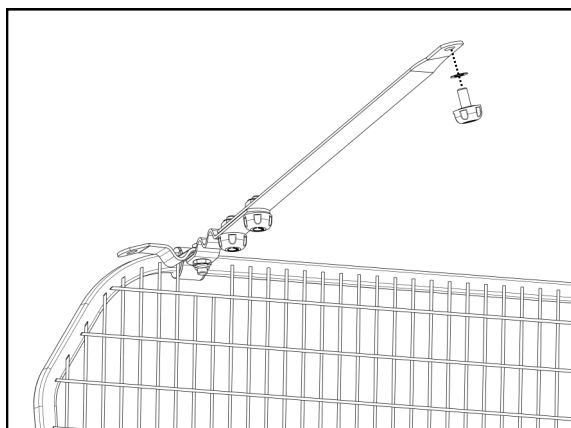

10. Secure the top straps to the top mounts at the rear of the vehicle with the Milbolts used for the rear position as shown.

INSTALLATION PROCEDURE FOR LOWER STRAPS

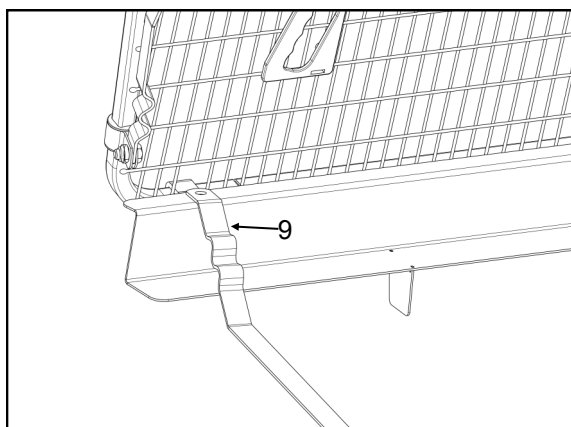


11. Remove the Milbolt and washer attached to the LHS of the lift panel ASM and place a LHS bottom strap (9) as shown.


TOYOTA COROLLA HATCHBACK CARGO BARRIER 'FRONT POSITION KIT 'INSTALLATION INSTRUCTION

Part # 607202

VEHICLE YEARS OF MANUFACTURE - FROM JUNE 2018

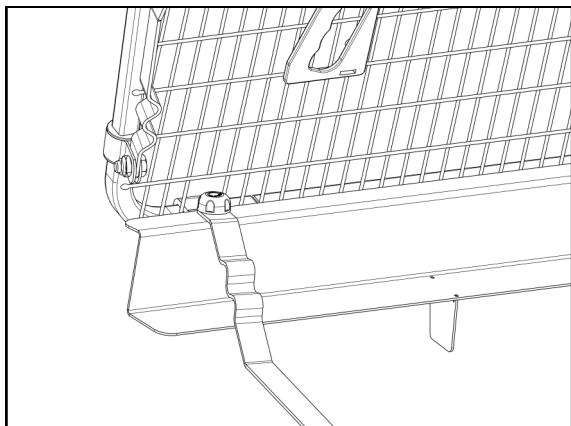

12. Reinsert the Milbolt and washer and tighten.
13. Repeat on the RHS.

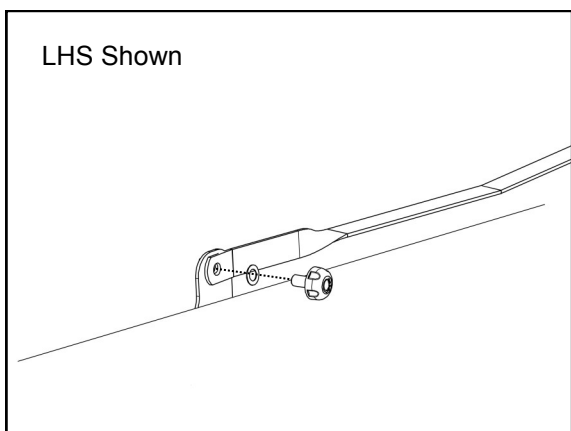

14. Secure the bottom LHS to the bottom mount using the Milbolt used for the rear position as shown.
15. Repeat on RHS.
16. Firmly tighten all Milbolts.

Note: Reserve the procedure to move the cargo barrier to the rear position or remove from the vehicle.


**TOYOTA COROLLA HATCHBACK
CARGO BARRIER 'FRONT POSITION KIT'
'INSTALLATION INSTRUCTION**

Part # 607202

VEHICLE YEARS OF MANUFACTURE - FROM JUNE 2018



**INSTALLATION OF CARGO BARRIER
'Behind front row of seats'**

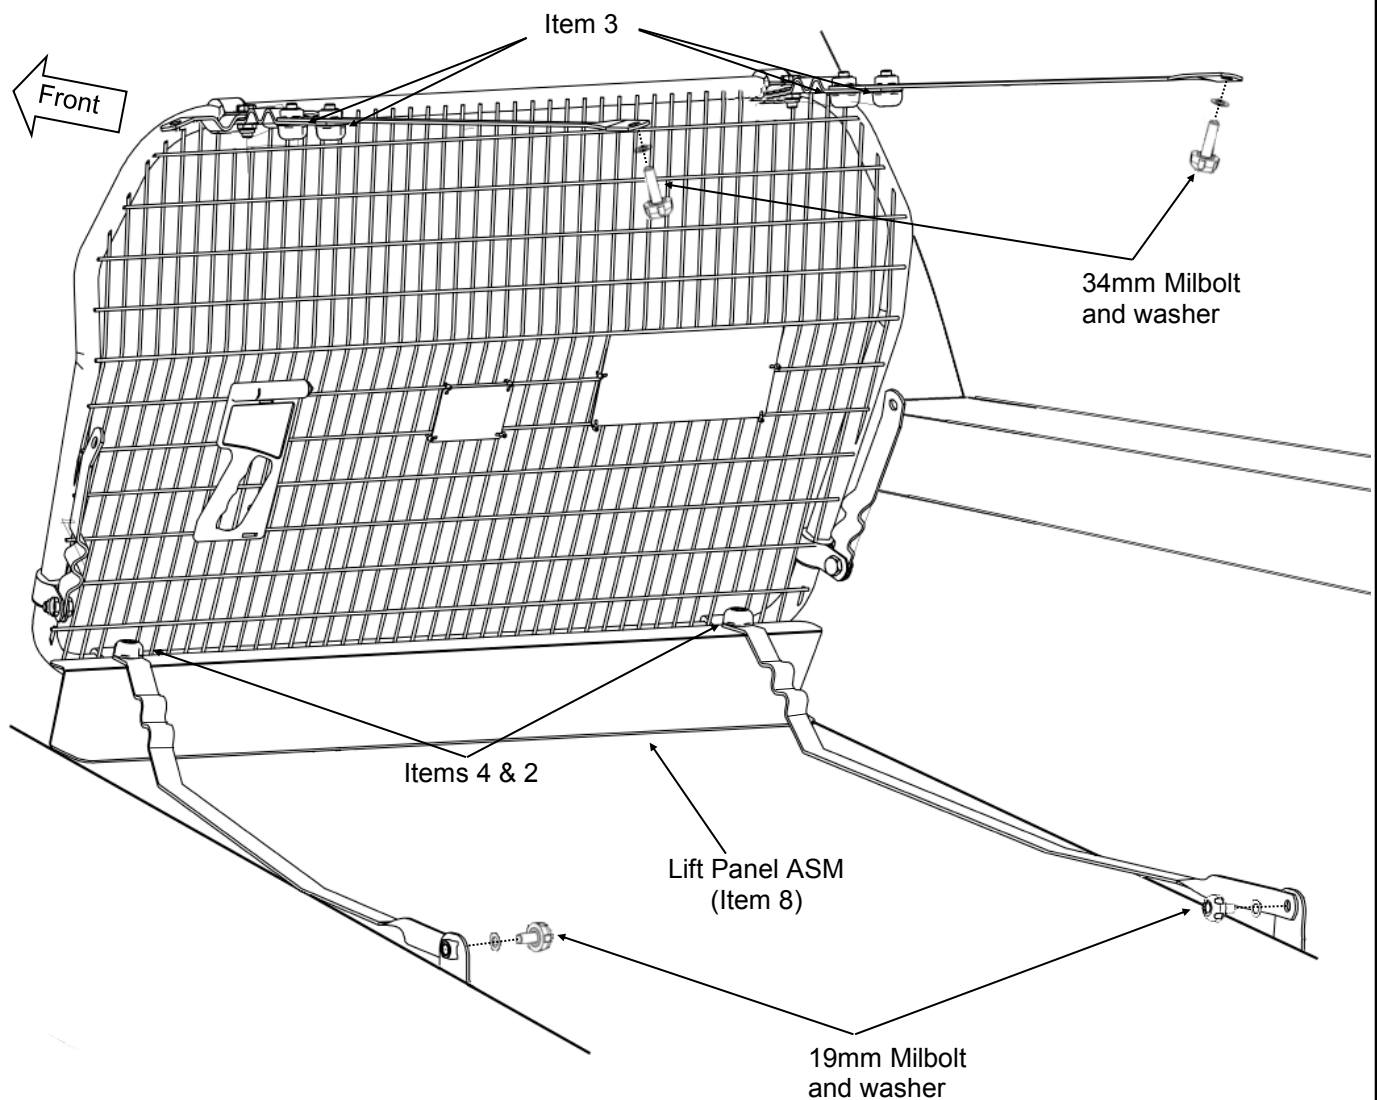

IMPORTANT NOTE: Check that all bolts and screws are tight and re check periodically.