



TOYOTA COROLLA HATCHBACK FRONT POSITION KIT INSTALLATION INSTRUCTION Part # 609752



(For use with cargo barrier PN 609750)



IMPORTANT: The installation kit contains sufficient components to allow cargo barrier part number 609750 to be installed behind the 1st row of seats. A high degree of technical competence is necessary to correctly install this product. We recommend the components be installed by an authorised outlet to ensure the barrier installation is correct. These instructions must be read and clearly understood before commencing installation. Check contents of kit before commencing fitment and report any discrepancies or damage.

Parts List

Item	Component Name	Part No.	Qty
1	Milbolt - M10 x 1.5 x 14mm	912816	4
2	Milbolt - M10 x 1.5 x 19mm	912820	1
3	Velcro Tie	904003	4
4	Lateral Support Bracket	753973	1
5	Flat Washer - 10mm x Ø32mm OD	932006	1
6	Bottom Front Position Strap - LHS	776814	1
7	Bottom Front Position Strap - RHS	775815	1
8	Top Front Position Tube Extension Strap	776817	2

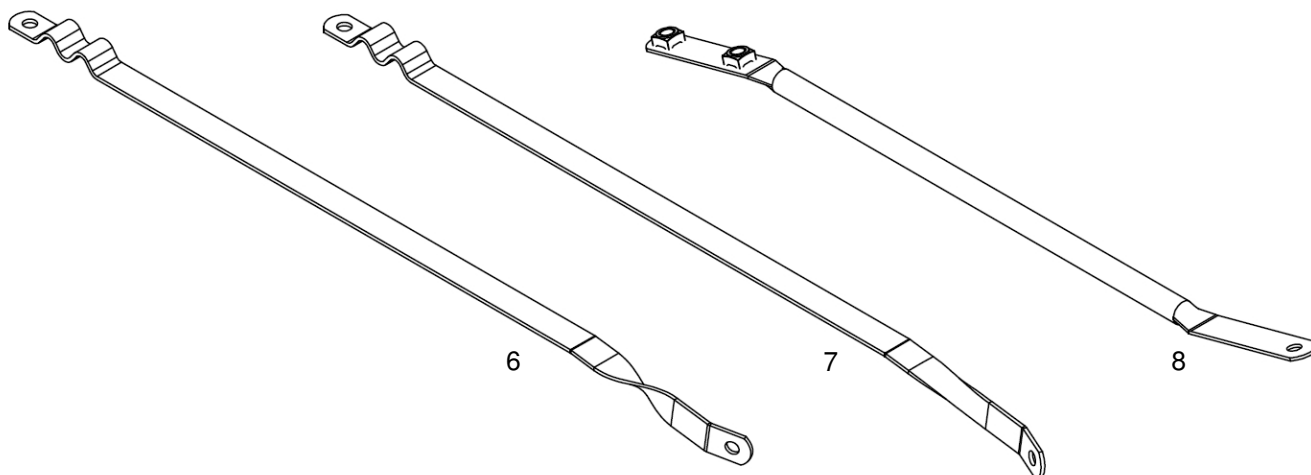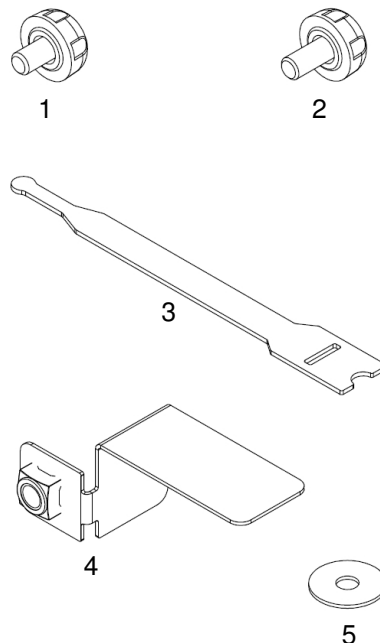

Installation time approximately 10 Minutes

E and OE—Errors and Omissions Excepted


"The estimated fitting time is based on an experienced fitter conversant with the fitment procedure"

TOOLS REQUIRED


- ☐ Socket wrench
- ☐ 17mm AF hex socket
- ☐ 16mm AF spanner




FRONT POSITION BOTTOM STRAPS INSTALLATION

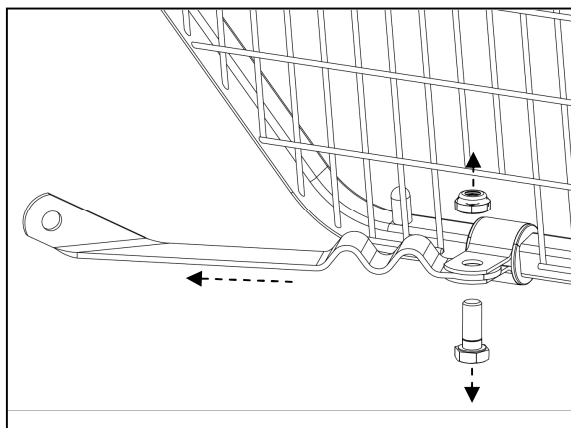

1. Undo the M10 nyloc nuts on the bottom saddle screws.
2. Remove the M10 screws from the saddles.
3. Remove the rear position straps.

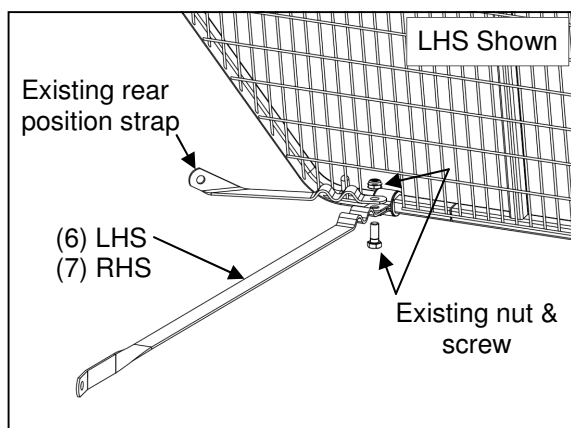

4. Position the correct front position bottom straps in between the bottom saddles as shown.
5. Replace the screw in the saddle.
6. Place the correct rear position bottom strap on top of the saddle as shown.
7. Replace the nyloc nuts.
8. Tighten the nuts until the straps are firm in the saddles but can still be rotated easily.

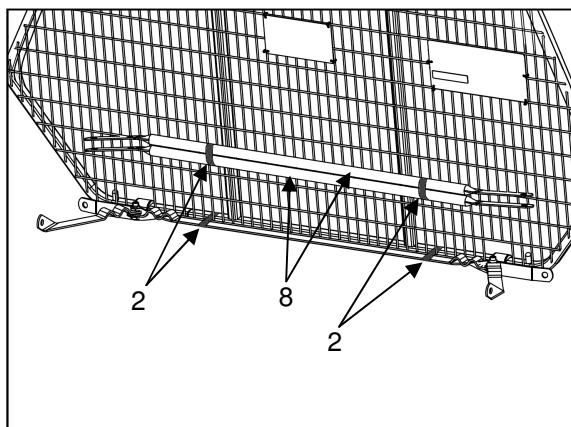

9. If not using immediately, tie the bottom front position straps to the cargo barrier using the Velcro ties (2) x2.
10. If not using immediately tie the front position top tube extension straps to the cargo barrier mesh using Velcro ties (2).
11. Store all other kit items in the vehicle as required by the customer.