




**TOYOTA COROLLA HATCHBACK, CARGO BARRIER  
FRONT POSITION KIT INSTALLATION INSTRUCTION**  
**Part # 609577**  
FOR USE WITH CARGO BARRIER P/N 609575 ONLY



**Parts List**

Item	Component Name	Part No.	Qty
1	Bottom Strap—Front Position LHS	776691	1
2	Bottom Strap—Front Position RHS	776692	1
3	Top Link Strap—Front Position	776630	2
4	Top Tube Extension Strap ASM	776563	2
5	Milbolt—M10 x 1.5 x 14mm	912816	4
6	Velcro Ties	904003	4
7	Lateral Support Bracket	753973	1
8	Milbolt—M10 x 1.5 x 19mm	912820	1
9	Washer—Flat ZP	932006	1

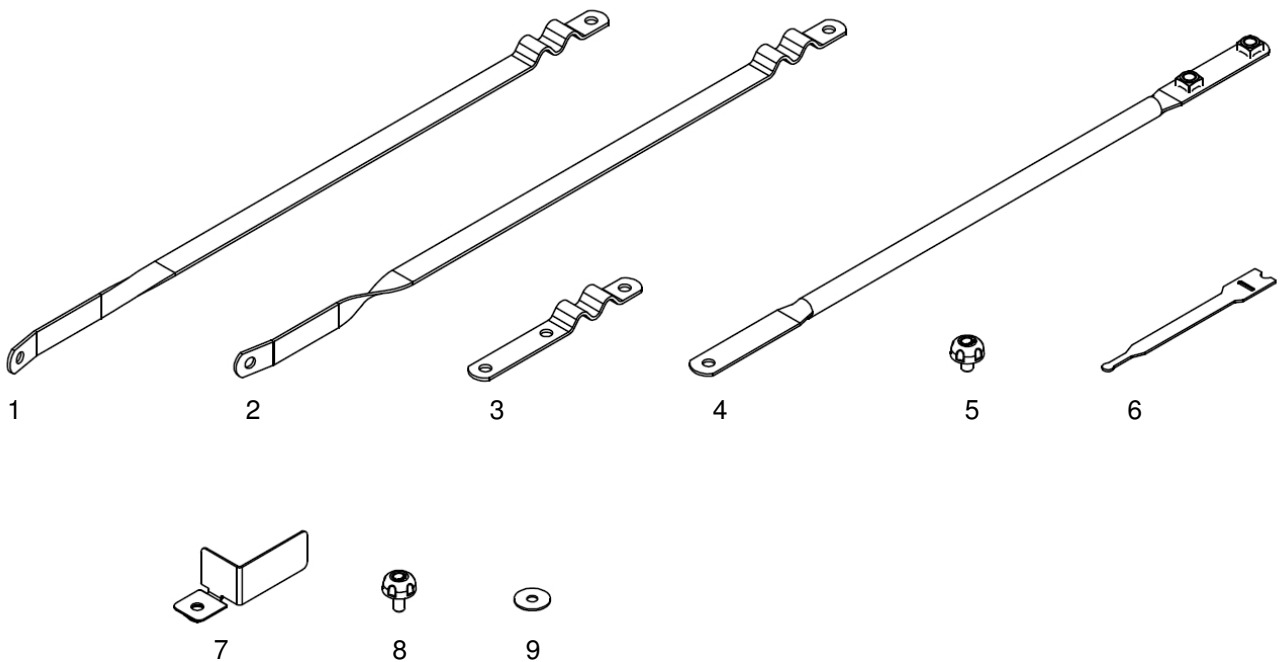

**TOOLS REQUIRED**

- ☐ Socket wrench
- ☐ 17mm A/F hex socket
- ☐ 16mm A/F spanner

***E and OE—Errors and Omissions Excepted***


## TOYOTA COROLLA HATCHBACK, CARGO BARRIER FRONT POSITION KIT INSTALLATION INSTRUCTION

**Part # 609577**

FOR USE WITH CARGO BARRIER P/N 609575 ONLY




### INSTALLATION PROCEDURE FOR TOP LINK STRAPS

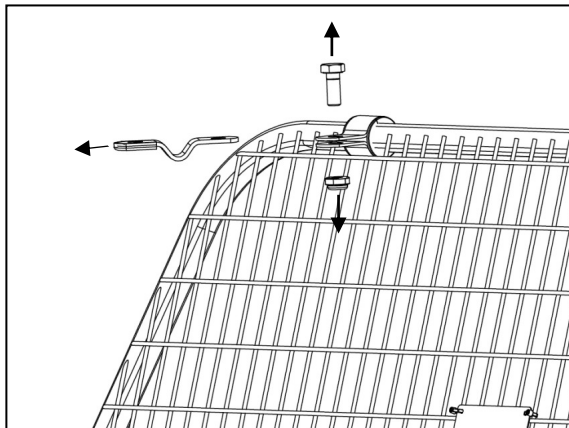


#### Prior to installing cargo barrier in vehicle -

1. Undo the nyloc nuts securing screws & straps in the top saddles.

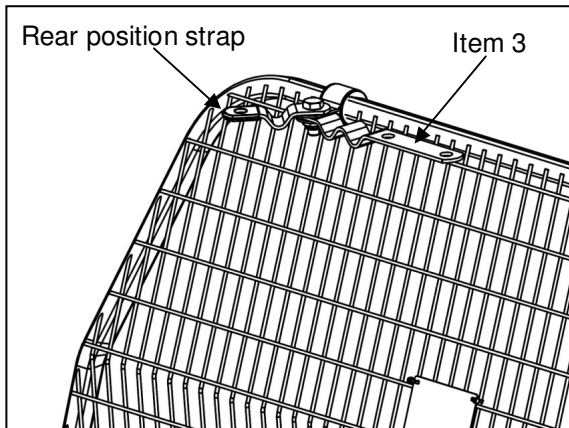

2. With the link strap (Item 3) inside saddle & the rear position top strap on top of saddle as shown, re insert the M10 screw then secure in place using nyloc nut removed earlier.
3. Tighten until straps are firm in/on saddle but can still be pivoted.
4. Repeat procedure on other side.

### INSTALLATION PROCEDURE FOR BOTTOM FRONT POSITION STRAPS

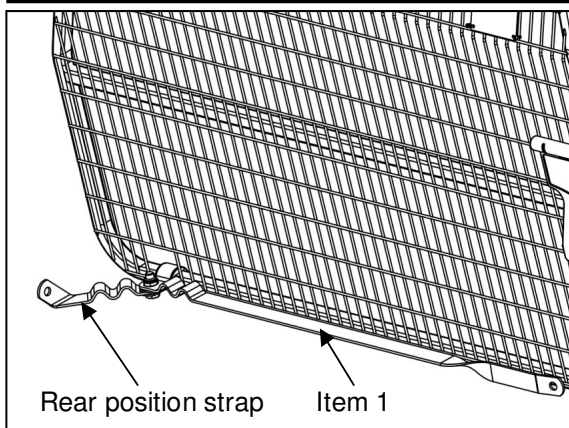

5. Undo the nyloc nuts securing screws in the bottom saddles. *No need to remove screw.*
6. With the correct front position strap on the correct side (Item 1 LHS—Item 2 RHS) place strap over screw as shown.
7. Replace nyloc nut then tighten until straps are firm in/on saddle but can still be pivoted.
8. Repeat on other side.
9. If not required immediately secure the long bottom straps across the cargo barrier mesh using velcro ties (Item 6).

### INSTALLATION OF OTHER ITEMS

10. If not required immediately secure the tube extension straps (Item 4) across the cargo barrier using velcro ties (Item 6).
11. Lateral support bracket (Item 7) can be attached to back of cargo barrier with Items 8 & 9 or put in glove box with Milbolts (Item 5).