



**TOYOTA LANDCRUISER PRADO 5 SEAT
(WITHOUT SUNROOF)
FRONT POSITION KIT INSTALLATION
INSTRUCTION—Part # 609395
FOR USE WITH CARGO BARRIER PART NUMBER 609375 ONLY**



The installation kit contains sufficient components for conversion of part number 609375 into a two position cargo barrier for vehicles without sunroof fitted. A high degree of technical competence is necessary to correctly install this product.

We recommend this kit be installed by an authorised outlet to ensure the cargo barrier installation complies with AS/NZS 4034 Standard.

Installation time approximately 1/4 Hour



WARNINGS

- Strict compliance with fitting instructions is essential for this safety product to meet its rated capacity. Refer user instructions regarding correct usage of the cargo barrier.
- Do not modify cargo barrier in any way.
- Do not use this cargo barrier in any other vehicle for which it is not designed.
- Modifications to the cargo barrier or its fixings or use in any other vehicle for which it is not designed may void the load rating and warranty.
- Do not attach the cargo barrier to the vehicle using seat, seat belt or child restraint anchorage's.
- Where high tensile threaded fasteners are used, the cargo barrier must be installed using the size and grade fasteners specified by Milford Industries.
- Do not drill, rivet, adhere or attach objects to the front or rear of the cargo barrier.
- Do not place smaller items, that may bypass the cargo barrier in the event of heavy braking or collision, near the edges of the barrier.
- Position the load against the cargo barrier.
- When load is positioned against cargo barrier, secure the load with a restraint system.
- During a collision moving cargo may damage seat belts or tether straps of a child restraint device, or its anchorage. Load should be carefully positioned so as not to come in contact with these items.
- Do not obstruct seat belts or child restraints, or their operation.
- Long thin items of cargo should be positioned in the vehicle with the long axis across the vehicle to minimise the penetration risk.
- If involved in an accident or accidentally damaged, the cargo barrier should be replaced and the anchorage's repaired to as new condition.
- Clean with soap and water only. Do not use solvents or chemicals. Discard cargo barrier if it becomes rusted. Do not expose to direct sunlight for long periods.
- It is extremely dangerous to ride in the cargo area of the vehicle behind the cargo barrier. It is recommended that the cargo barrier be removed. In a collision people or children riding unrestrained in these areas are more likely to be seriously injured or killed.
- Never leave a child in the vehicle unattended, particularly in the rear cargo area. The cargo area should never be used as a play area for children.
- The cargo barrier may deform and significantly intrude into occupant's space in an accident.
- Remember that the tailgate cannot be opened from inside the cargo area.
- The fixed labeling should not be removed from the cargo barrier.
- Failure to comply with warning notes may prevent the barrier protecting the occupants.
- Parents should explain to children how and when to use **EMERGENCY ESCAPE HAMMER** attached to cargo barrier.
- Do not remove the rating plaque from the cargo barrier.

NOTICE TO INSTALLERS & DISTRIBUTORS

Please ensure User Instructions are left with vehicle owner after installation.






**TOYOTA LANDCRUISER PRADO 5 SEAT
(WITHOUT SUNROOF)
FRONT POSITION KIT INSTALLATION
INSTRUCTION—Part # 609395
FOR USE WITH CARGO BARRIER PART NUMBER 609375 ONLY**



IMPORTANT: The installation kit contains sufficient components to fit the cargo barrier. A high degree of technical competence is necessary to correctly install this product. We recommend this cargo barrier be installed by an authorised outlet to ensure the barrier installation is correct. These instructions must be read and clearly understood before commencing installation. Check contents of kit before commencing fitment and report any discrepancies or damage.

Parts List


Item	Component Name	Part No.	Qty
1	Milbolt—M10 x 1.5 x 24mm	912825	2
2	Milbolt—M10 x 1.5 x 14mm	912816	4
3	Screw—Hex Head— M10 x 1.5 x 20	912205	2
4	Hex Nut—Nyloc M10 x 1.5	922090	2
5	Support Leg ASM	776430	2
6	Long Tube Strap ASM (Top extension—L/H)	776366	1
7	Long Tube Strap ASM (Top extension—R/H)	776371	1
8	Long Flat Strap—Bottom	776345	2
9	Velcro Fastener	904001	2

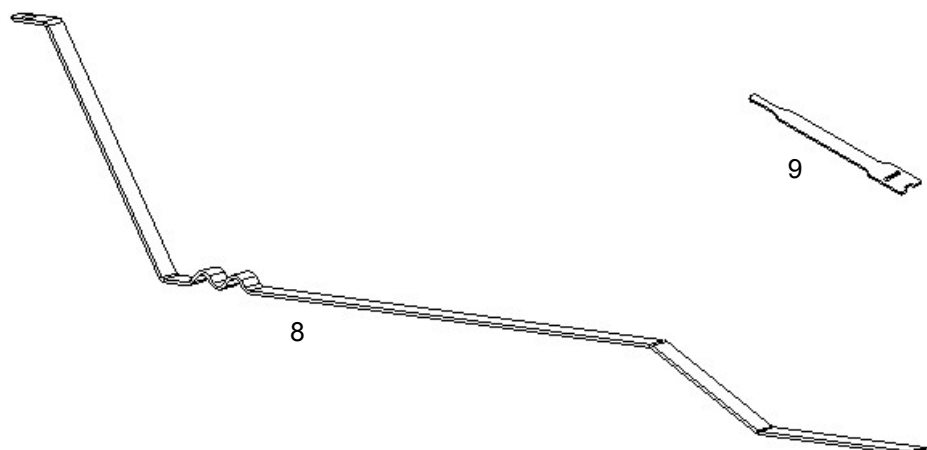

**TOYOTA LANDCRUISER PRADO 5 SEAT
(WITHOUT SUNROOF)
FRONT POSITION KIT INSTALLATION
INSTRUCTION—Part # 609395
FOR USE WITH CARGO BARRIER PART NUMBER 609375 ONLY**




INSTALLATION OF SUPPORT LEGS

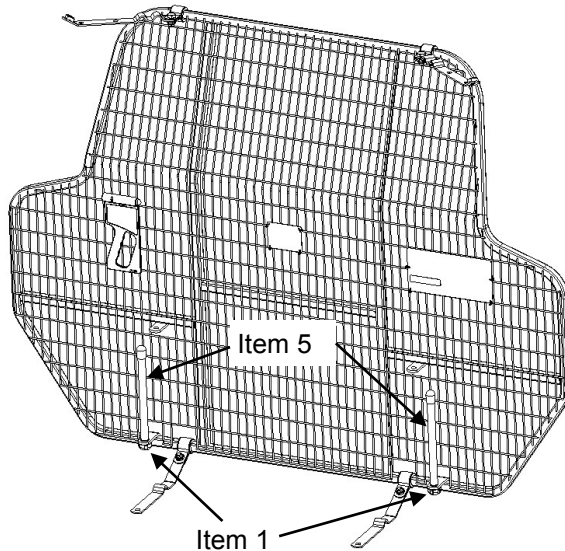

Attach support leg assemblies (Item 5) to frame brackets (Item 1) to frame brackets as shown using 24mm Milbolts (Item 1) .

Note: If installing cargo barrier in front position refer to user instructions for details of support leg attachment, etc.

ASSEMBLY OF CARGO BARRIER IN FORWARD POSITION

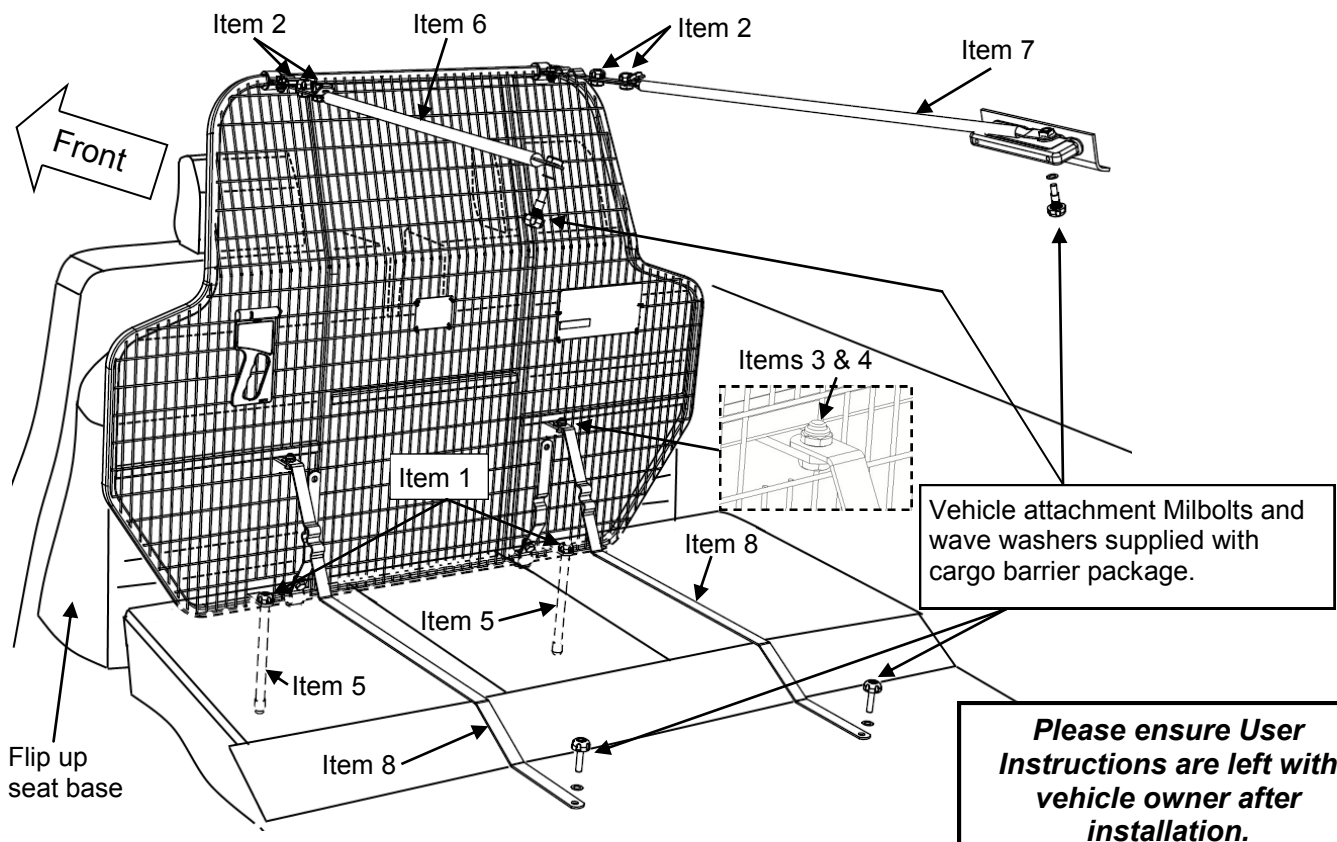

IMPORTANT NOTE: Check that all bolts and screws are tight and re check periodically.