

Instructions

Rear Swaybar Link


N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

1. Raise vehicle evenly and safely support.
2. Un-bolt both LH and RH swaybar links.
3. Push/press out original rubber bushing - confirm all rubber material has been removed.
4. Using soapy water, press in supplied bushings - solid flat surface is best.

Regarding the lower bushing, please see image below. Image below is of the RHS.

5. Re-fit links to vehicle - note 2 supplied washers. These to be fitted to lower link bolt.

6. Tighten all bolts to manufacturers spec - re-check after initial 100kms travelled.

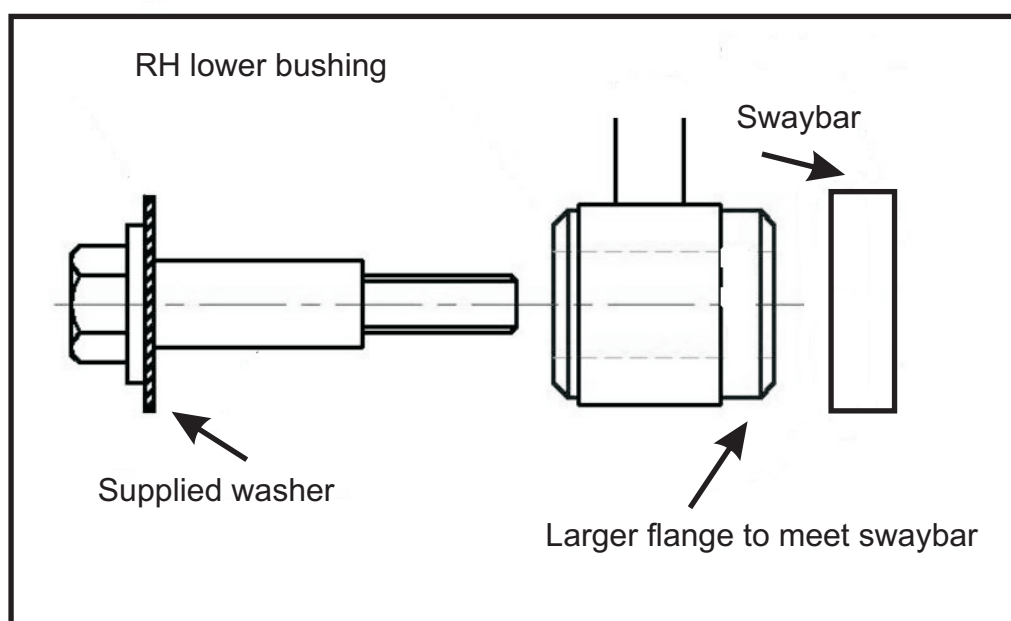

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.