


Fitting Instructions #3575IS

TOYOTA LANDCRUISER 100 SERIES

IFS FRONT LOWER DIFF SUPPORT BUSH

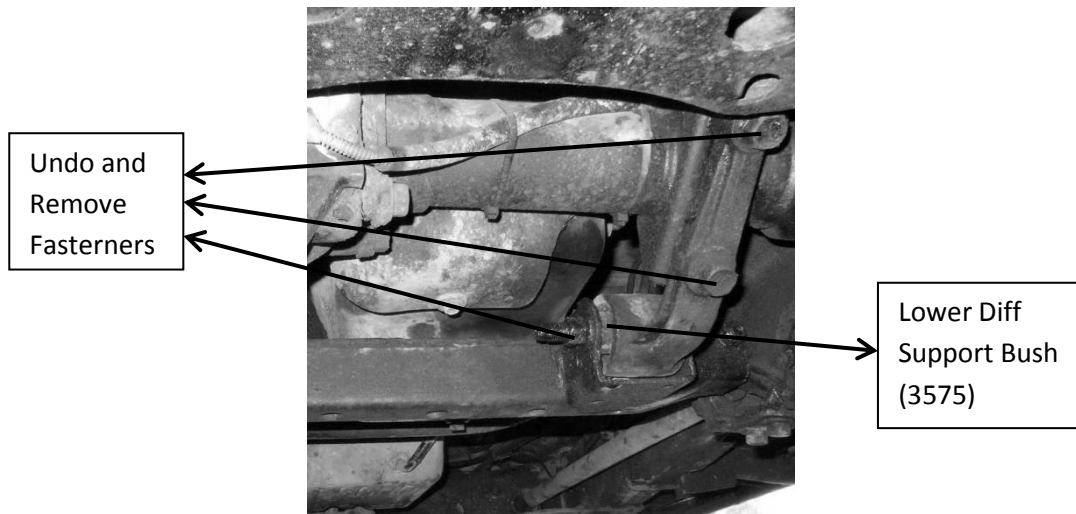

- Jack vehicle up and put on stands/hoist. Then, use a bottle jack or similar to support the differential;
- Undo the fasteners as marked above and remove the lower diff support arm;
- With the use of a hydraulic press and suitable pressing tools, press out the factory rubber bush including the shell.
- Clean and remove any burrs in the housing area.
- Press in the new polyurethane steel shell part into the housing.
- Apply grease supplied onto the side faces of the bush and also the contact area with the bush and install the arm back into the vehicle.
- Ensure all fasteners are torque to manufacturer's specification.

