


# Fitting Instructions #2044IS


## Universal Part

### Bump Stop


---

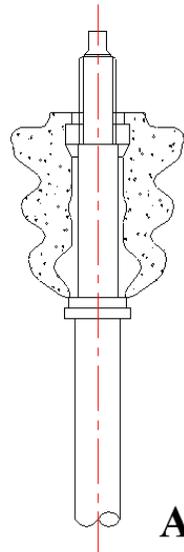

**A**

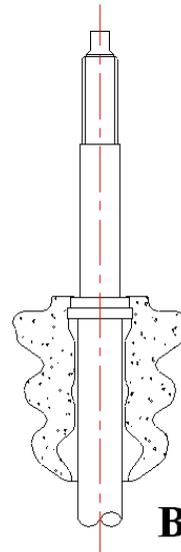

**B**

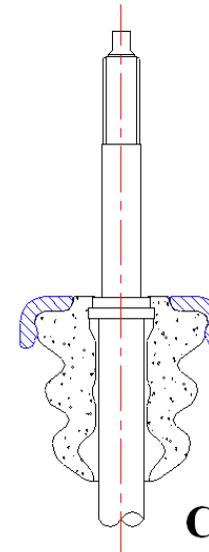

**C**

- With strut vertical on a non slip surface, place compression bumper on shaft with plastics cup removed - See "A";
- Pull compression bumper downwards sharply to snap over locating flange until located as "B". Pulling down smoothly will only result in the shaft being pushed into the shock absorber;
- A small amount of a silicon based lubricant applied to the inside of the compression bumper may make application easier;
- With compression bumper correctly located as at "B" clip plastics cup in place as "C".