

# Fitting Instructions #2188IS

Triumph Italia

## Bonnet Buffer Bush Kit



NOTE: Supplied bonnet buffers may need to be trimmed to correct length.

- Remove original/perished bonnet buffers;
- If necessary, trim supplied bonnet buffers to the correct length;
- Install supplied bonnet buffers as per orientation in figure 1;
  - Flat sides of part to face against sides of vehicle channel;
- For bonnet buffer retention method, see figure 2.

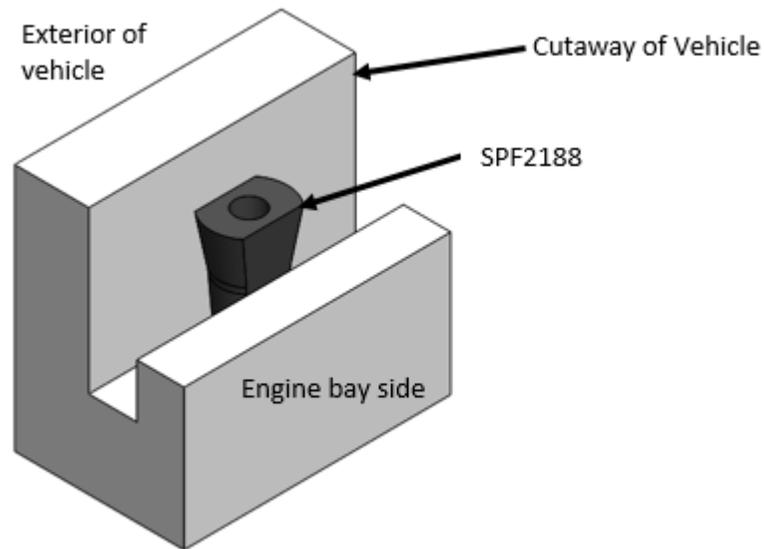


Figure 1: Orientation diagram of SPF2188

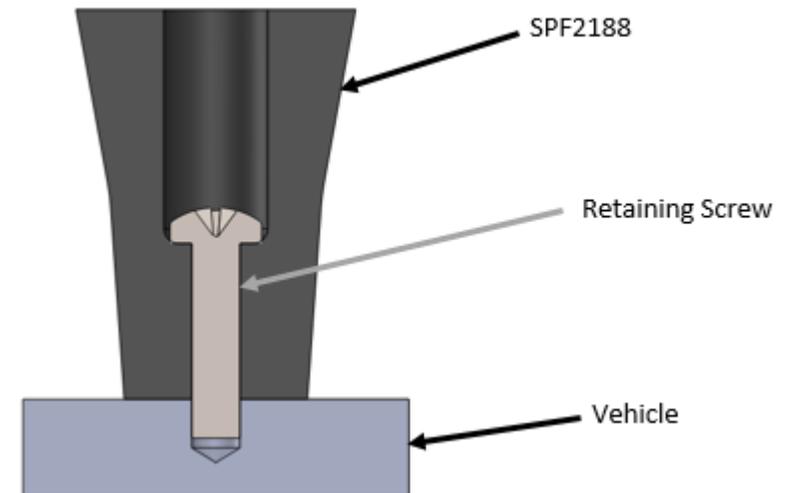


Figure 2: Installation diagram of SPF2188