


Fitting Instructions #3881IS

Toyota Landcruiser 100 Series

Front Lower Control Arm Rear Bush – In Chassis

REVA

Front of Vehicle

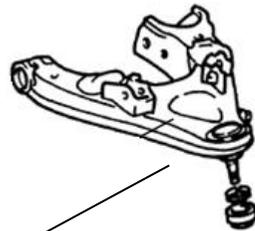


Lower Control Arm

Note: Polyurethane bushes must be fitted to both sides of the vehicle.

- Following manufacturers recommendations remove front lower control arms from the vehicle.
- The front lower control arm rear bush is located in the Chassis. An air chisel would be an ideal tool to remove the factory bushes out from the chassis.

- Clean housing areas to remove any old original bushing materials before installing new bushes. Apply the grease supplied to the housing and the outside of the bush, then push the new bushes in (As shown in the diagram below).

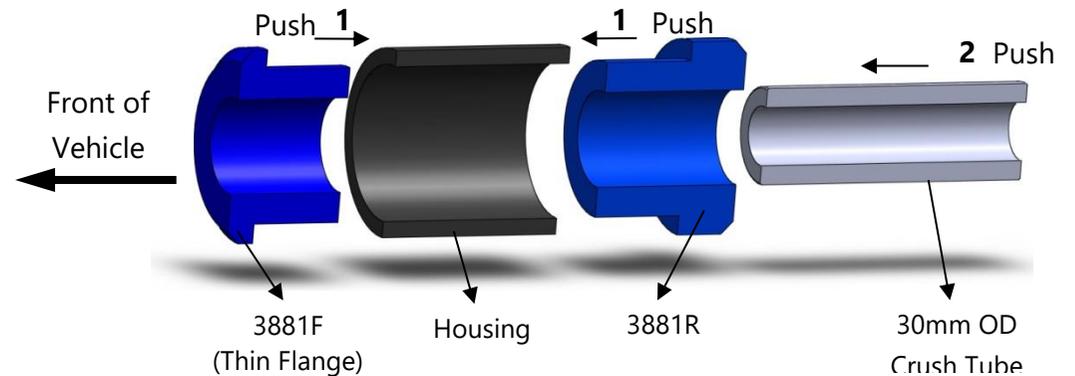

- To fit the crush tube into the bushes, apply the grease supplied to the bore of the bush and the outside of the crush tube. Then, push it in. Note: use a pair of multi grips to aid installation if necessary;
- Repeat process to install the rest of the bush;
- Refit the control arms into the vehicle. Tighten all fasteners to the manufacturer's specifications with the vehicle at ride height and wheel align vehicle.