

Fitting Instructions #2755SIS


Various

Universal Sway Bar Link / Universal Shock Absorber Bushing



Universal Shock Absorber Bushing

- With the vehicle on jack stands/hoist, remove rear wheels and then remove the rear shock absorbers from the vehicle;
- Remove OE bushing;
- Use grease supplied to lubricate all metal to polyurethane contact surfaces;
- **Note:** The washers are to be fitted with concave towards to the poly bushes as shown in the diagram below.
- Reinstall the shock absorbers and the wheels;
- Carry out wheel alignment if necessary.

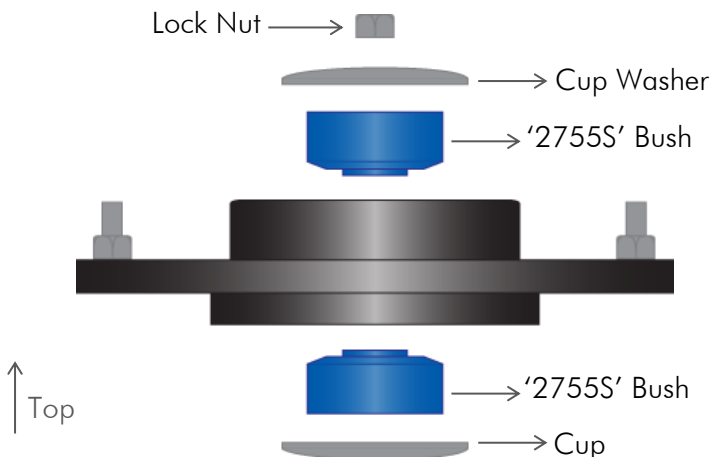

Universal Sway Bar Link Bushing

- Remove the sway bar link;
- Remove the old bushes, clean it and install the new SuperPro bushes;
- **Note:** The washers are to be fitted with concave away from the poly bushes as shown in the diagram below.
- Re-install the sway bar link and tighten all the bolts to the manufacturer's specifications.

