

Install Guide

Front Control Arm - Rear Bushing

Install Guide

- Raise vehicle evenly and safely support with a hoist or stands.

Never rely on a Jack only

- Proceed to remove front wheels.
- Next - remove front control arms from vehicle.


Check the smaller front bushing condition - replace also in need.

- Using a hydraulic press, press out the original bushing, including the steel outer shell.

Application - Holden Barina XC-TK
 - 2001-2011
 - Holden Combo
 - 2002-2013

(Always refer current catalogue listing)

Contents - 2x Vertical Axis bushings
 - (82010)

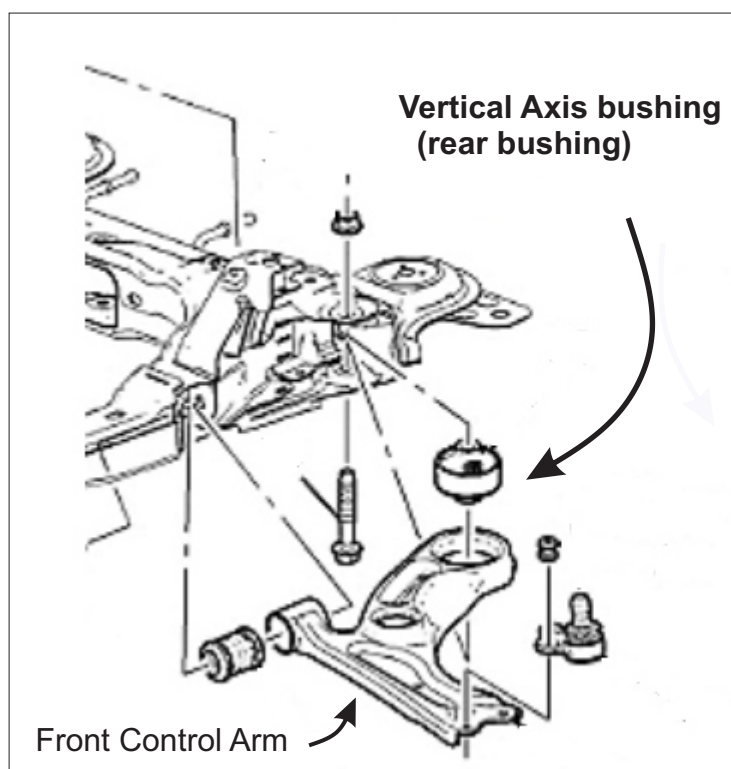

- Check the arms for any burrs or cracks.

- Press in the new supplied bushing.

Note - press on new outer shell only

Press in so the bushing is "central" in the arm eye-ring.

- Re-fit arm to vehicle with original bolts.

- A wheel alignment will be required. Re-check all bolts after 500kms

Note: These components must be fitted by a qualified person only, as per the manufacturers service manual. Also, that all relevant safety procedures are followed in addition to above.