

Install Guide

Front Lower Control Arm Rear Bush (to suit RHD)

Nissan Dualis/Dualis+2 J10

Nolathane[®]

Note: These components must be fitted by a qualified person only, as per the manufacturers' service manual. Also, all relevant safety procedures are followed in addition to the following. Photos are an indication and may vary slightly in appearance from the actual product.

Kit Contents:

Standard Alignment Kit (45803)

- 2 x 82022

Single Offset Alignment Kit (45832)

- 1 x 82022
- 1 x 82090

Double Offset Alignment Kit (451035)


- 2 x 82090

Note: Polyurethane bushings must be fitted to both sides of the vehicle.

1. Wheel align the vehicle before starting and note settings.
2. Raise and support vehicle on jack stands/hoist. Remove the front wheels and remove the lower control arms.

Note: Undoing the lower sway bar link makes the removal/install easier.

3. Remove the original shell part from the housing using a press and suitable press tools, making sure to not stretch the arm. Clean the housing and remove any remaining bush material from the arm.
4. With reference to the diagrams below and the settings required, align the bushing in the bracket so that the hole of the bush is positioned to give the desired result.

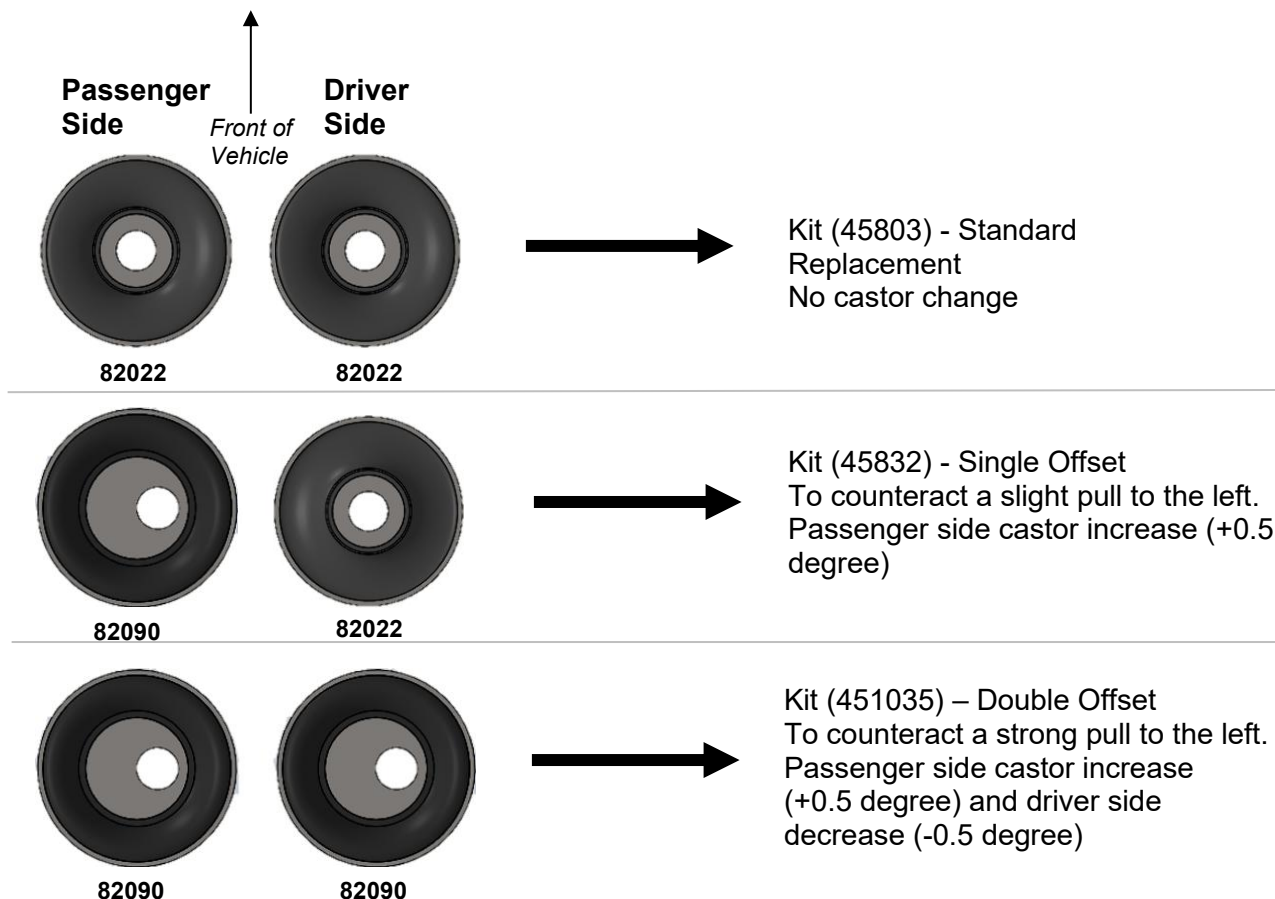

Install Guide

Front Lower Control Arm Rear Bush (to suit RHD) Nissan Dualis/Dualis+2 J10

Nolathane[®]

5. Press the bushes into the housing with suitable press tools, making sure to leave 5mm of the shell from the top of the control arm.
6. Refit the control arms and sway bar links. Ensure all mounting bolts are torqued to manufacturers specification.
7. Carry out wheel alignment and check new settings.