

Instructions

Extension Brackets

- Swaybar, Head-light Sensor and Brake Line Extension

Page 1 of 3

Note - this kit can be installed at ride height or while lifted.

Application - Nissan Navara
- NP300

Always refer complete catalogue listing

Contents - 2x link brackets
- 1x head-light sensor bracket
- 2x M12 x 35mm bolt
- 1x M8 x 25mm bolt
- 2x flat washers
- 2x spring washers
- 2x brake line extensions

- Un-bolt upper swaybar link nut.



- Using supplied brackets, M12 bolts and washers - bolt up bracket as per image.

- Place washers and nut on the inside.

- Bolt up original swaybar link to lower hole as per image.

RH side bracket shown



It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Instructions

Extension Brackets

- Swaybar, Head-light Sensor and Brake Line Extension

Continued - Page 2 of 3



- Un-bolt original head-light bracket.

Discard bracket but retain original bolt.

Note - supplied bracket has 2 holes.

- upper hole suited for 2 inch lifted.
- lower hole suited for OE height.

- Bolt up new supplied bracket as per image.

Use supplied M8 bolt.

*Refer page 3 for
brake line extension -*



It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.



Instructions

Extension Brackets

- Swaybar, Head-light Sensor and Brake Line Extension

Continued - Page 3 -

- Refer RH and below images for fitment of poly brake line extension.

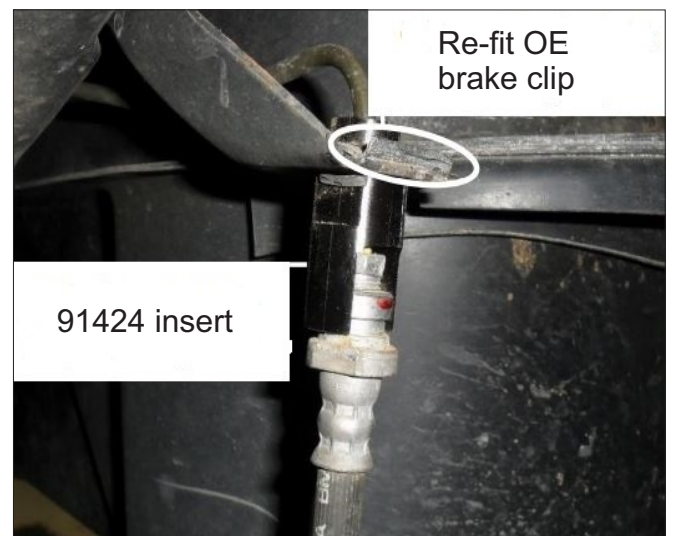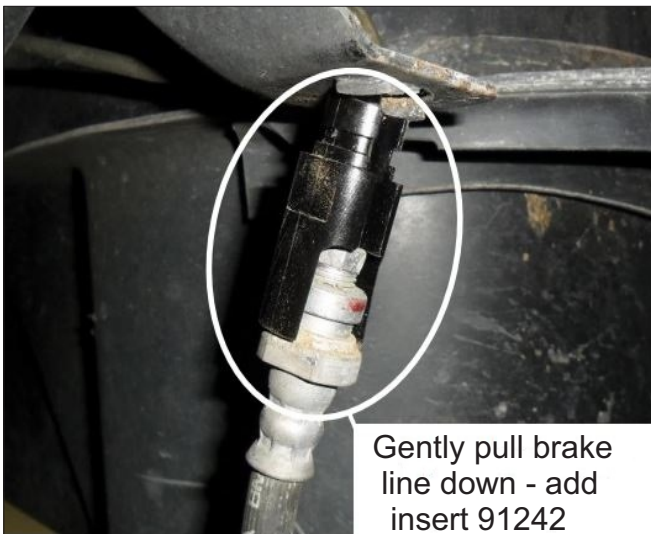

- Re-check fitment after 500kms travelled.

It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.