# Install Guide
# Lower Control Arm Centre Bush
# Porsche Cayman/Boxster/911

**Note:** These components must be fitted by a qualified person only, as per the manufacturers' service manual. Also, all relevant safety procedures are followed in addition to the following. Photos are an indication and may vary slightly in appearance from the actual product.

**Kit Contents:**


- 2 x Bushes
- 2 x Tubes
- 1 x Grease Packet

1. Raise vehicle on level ground and support with jack stands. Never rely on jack alone.

2. Unbolt lower control arm from vehicle by removing inner and centre bolt as shown below



3. Remove ball-joint nut and Strike knuckle where indicated to remove arm from vehicle completely

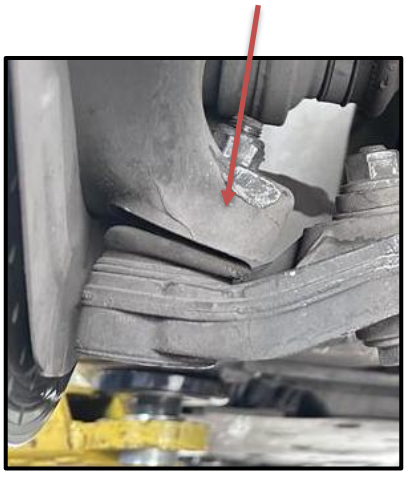

4. Push OE bush out from arm using hydraulic press or portable press kit

Copyright ABN 99 124 177 297

# Install Guide
# Lower Control Arm Centre Bush
# Porsche Cayman/Boxster/911

5. Generously grease outside of bush and bore of arm before pressing bush into arm



6. Grease inner of bush and insert tube




7. Install arm back into vehicle



8. Carry out wheel alignment immediately on vehicle

Copyright ABN 99 124 177 297