

Fitting Instructions #Z7223-N

Ford Falcon FG



Front Strut Bar to Sub Frame Bushing


Note: Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- With the vehicle on jack stands/hoist, remove the strut bars according to the maintenance manual;
- Use a hydraulic press to remove the O.E. bush (Note direction as per diagram on the following page);
- Press in the new bush to the dimensions on the following page;
- Using the grease supplied lubricate the bore of the bush and the outside of the crush tube, then push the crush tube into the bush;
- Refit the strut bar to the vehicle, tighten all bolts using manufactures torque settings and carry out a wheel alignment.


Note: The ID of the arm has a taper, pay close attention to the direction that components are assembled and disassembled.

Nolathane®

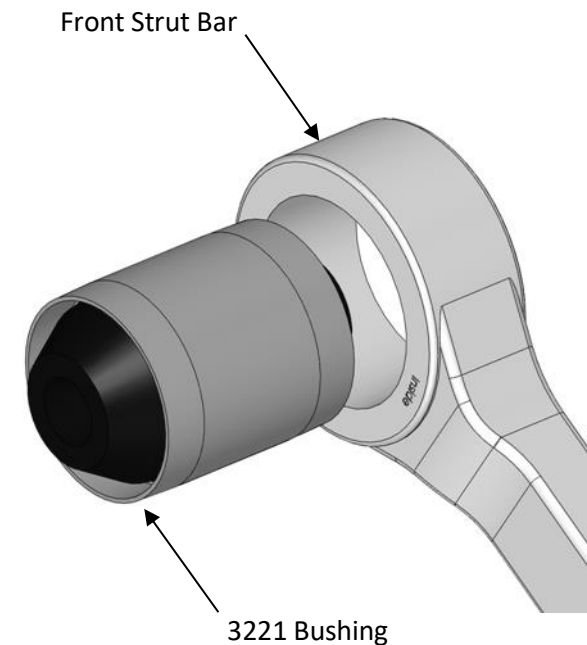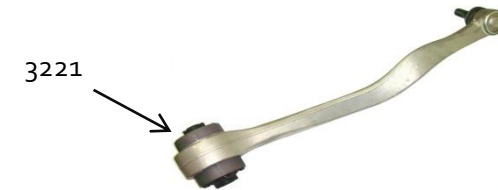

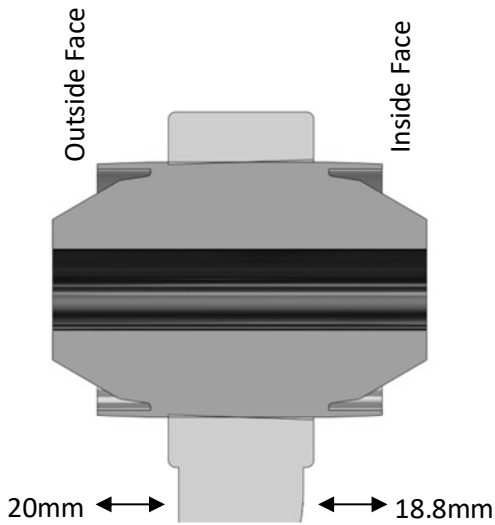

Installation dimensions

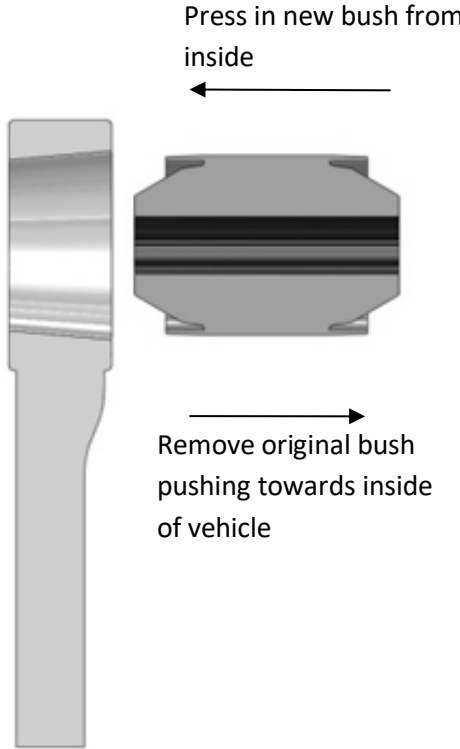

Removal and fitting detail