



MG HS FRONT POSITION KIT CARGO BARRIER INSTALLATION INSTRUCTION Part # 41446R



This installation kit is for use only with MG HS Cargo Barrier (#SAC0320138)

The installation kit contains sufficient components to allow the cargo barrier P/N (#SAC0320138) to be installed behind the 1st row seats. A high degree of technical competence is necessary to correctly install this product. We recommend this kit be installed by an authorized outlet to ensure the barrier installation is correct. These instructions must be read and clearly understood before commencing installation. Check contents of kit before commencing fitment and report any discrepancies or damage.



Installation time - Approximately 15 Minutes

"The estimated fitting time is based on an experienced fitter conversant with the fitment procedure"

WARNINGS






- Strict compliance with fitting instructions is essential for this safety product to meet its rated capacity. Refer user instructions regarding correct usage of the cargo barrier.
- Do not modify cargo barrier in any way.
- Do not use this cargo barrier in any other vehicle for which it is not designed.
- Modifications to the cargo barrier or its fixings or use in any other vehicle for which it is not designed may void the load rating and warranty.
- Do not attach the cargo barrier to the vehicle using seat, seat belt or child restraint anchorage's.
- Where high tensile threaded fasteners are used, the cargo barrier must be installed using the size and grade fasteners specified by Milford Industries.
- Do not drill, rivet, adhere or attach objects to the front or rear of the cargo barrier.
- Do not place smaller items, that may bypass the cargo barrier in the event of heavy braking or collision, near the edges of the barrier.
- Position the load against the cargo barrier.
- When load is positioned against cargo barrier, secure the load with a restraint system.
- During a collision moving cargo may damage seat belts or tether straps of a child restraint device, or its anchorage. Load should be carefully positioned so as not to come in contact with these items.
- Do not obstruct seat belts or child restraints, or their operation.
- Long thin items of cargo should be positioned in the vehicle with the long axis across the vehicle to minimize the penetration risk.
- If involved in an accident or accidentally damaged, the cargo barrier should be replaced and the anchorage's repaired to as new condition.
- Clean with soap and water only. Do not use solvents or chemicals. Discard cargo barrier if it becomes rusted.
- Do not expose to direct sunlight for long periods.
- It is extremely dangerous to ride in the cargo area of the vehicle behind the cargo barrier. It is recommended that the cargo barrier be removed. In a collision people or children riding unrestrained in these areas are more likely to be seriously injured or killed.
- Never leave a child in the vehicle unattended, particularly in the rear cargo area. The cargo area should never be used as a play area for children.
- The cargo barrier may deform and significantly intrude into occupant's space in an accident.
- The fixed labeling should not be removed from the cargo barrier.
- Failure to comply with warning notes may prevent the barrier protecting the occupants.
- Do not remove the rating plaque from the cargo barrier.

MG HS FRONT POSITION KIT CARGO BARRIER INSTALLATION INSTRUCTION Part # 41446R




PARTS LIST

Important: Check contents of kit before commencing fitment and report any discrepancies or damage.

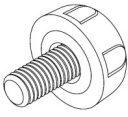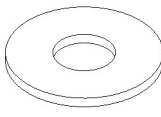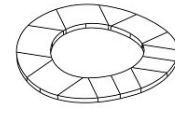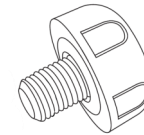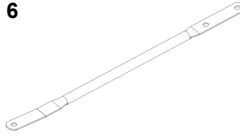1  Milbolt M10 x 24mm x 4	2  M10 Washer x 2	3  Wave Washer x 2	4  Milbolt M10 x 14mm x 4	5  Lateral Support Headrest Bracket x 2
6  Tube Strap Extensions x 2	7  Bottom Strap x 2	8  Velcro Tie x 4	9  User Instruction x 1	

Exploded View

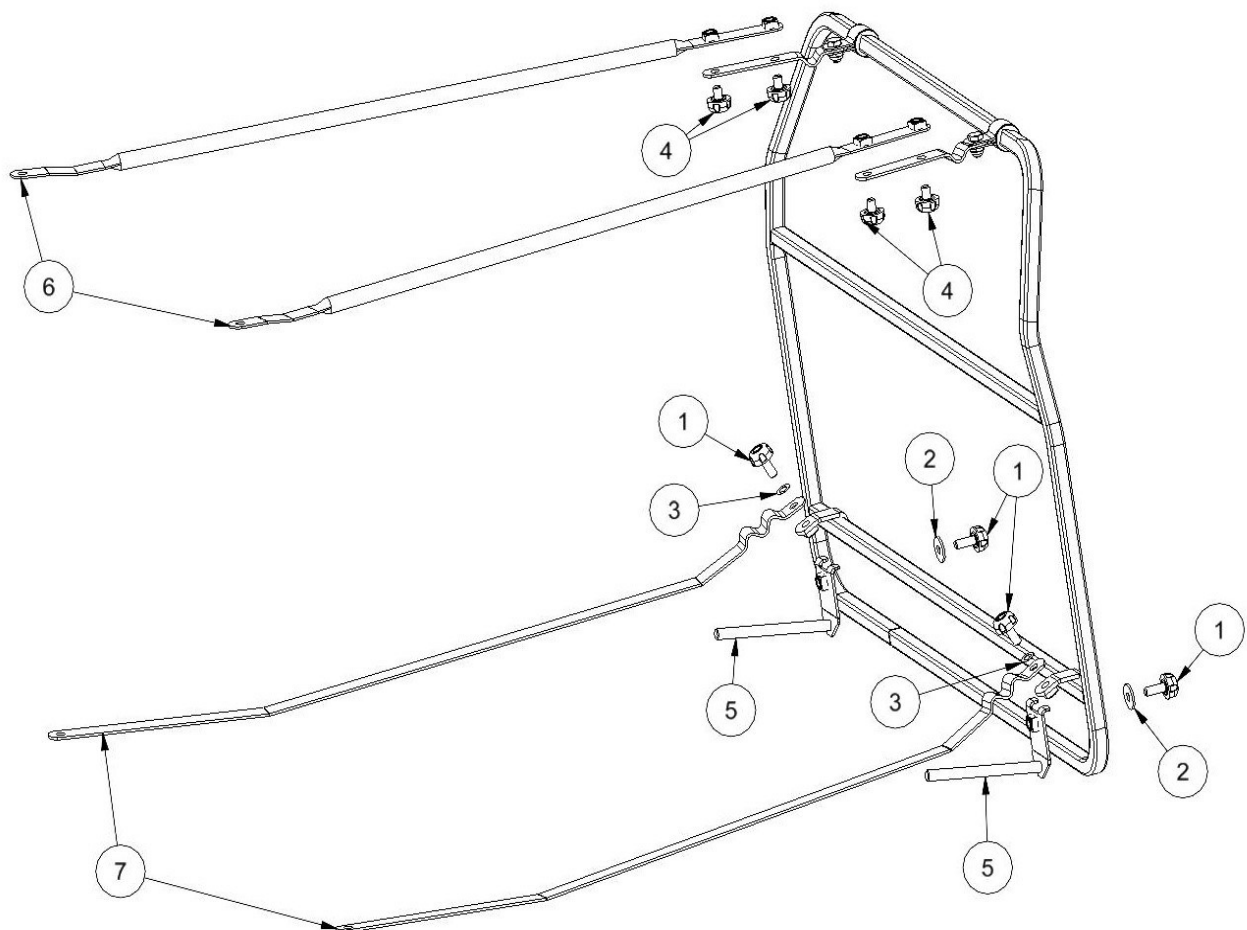


MG HS FRONT POSITION KIT CARGO BARRIER INSTALLATION INSTRUCTION Part # 41446R




Step 1

- Read through the fitting instructions before installation of accessory.
- Install the accessory following the fitting instructions. Failure to do so may cause damage to the vehicle or the accessory.

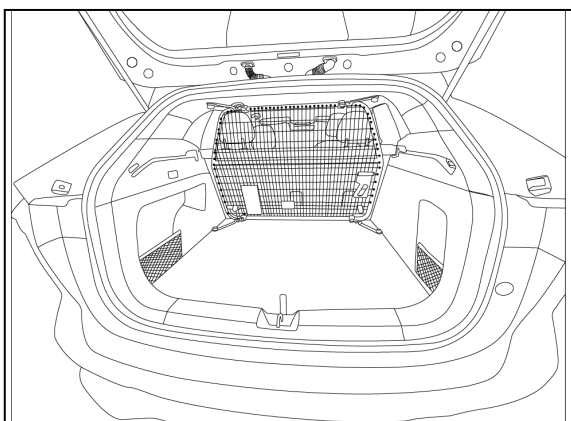


Step 2

- The Cargo barrier if fitted in the rear position has to be removed from the car.
- Otherwise, follow the instruction from step 6.

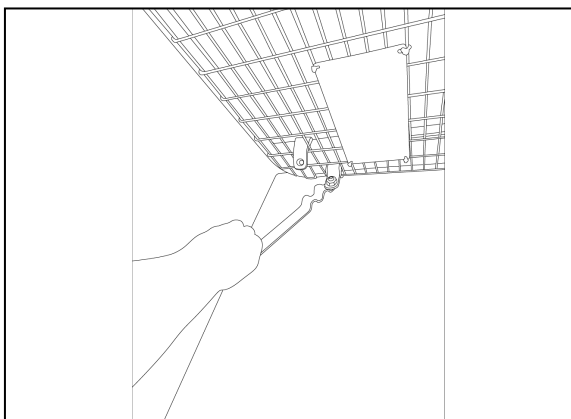

Step 3


- Remove the Milbolts and washers from bottom bracket passenger's side.
- Do the same for driver's side.

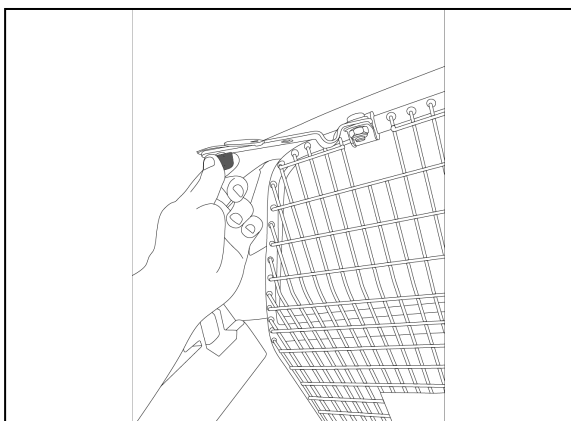

Step 4


- Remove the Milbolts and washers from the top bracket passenger's side.
- Do the same for driver's side.
- Keep all Milbolts and washers safe as they will be used again for mounting the barrier in the front position.

MG HS FRONT POSITION KIT CARGO BARRIER INSTALLATION INSTRUCTION Part # 41446R

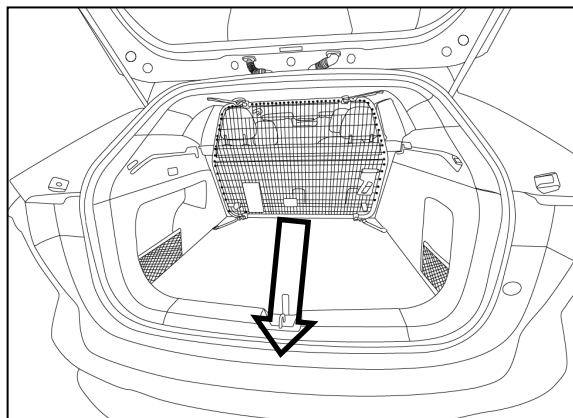


Step 5

- Once all the Milbolts that hold the cargo barrier have been removed, slowly remove the cargo barrier from the car.

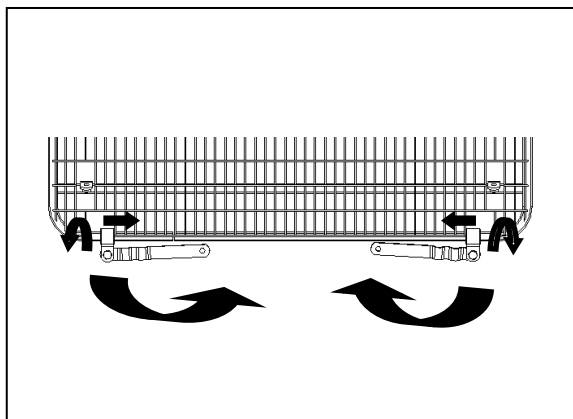

Step 6

- Push the saddle bush towards inside of the cargo barrier.
- Fold the existing bottom straps in towards the barrier and rotate it downwards, so that straps are out of the meshed area of the barrier.

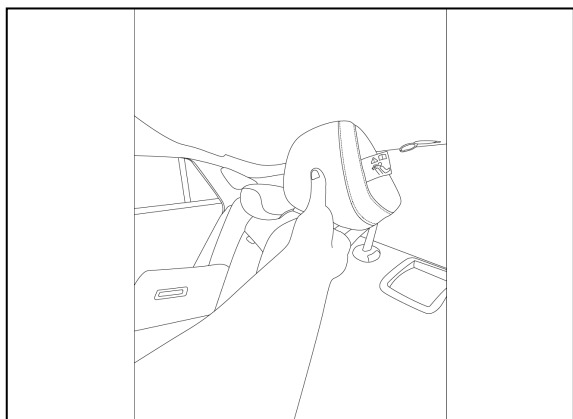


Step 7

- Remove the second row headrest restraints and store in a safe place inside the vehicle.

Important




Head restraints must be fitted when seats are in use.

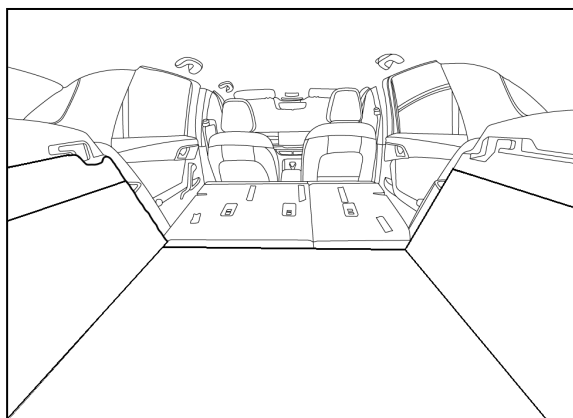

Step 8


- Fold the rear seats down flat.

MG HS FRONT POSITION KIT CARGO BARRIER INSTALLATION INSTRUCTION Part # 41446R

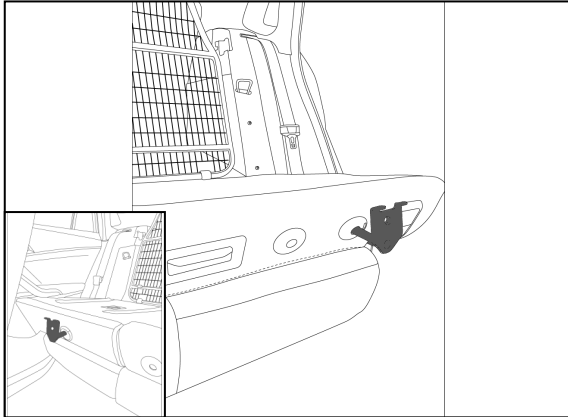


Step 9

- On passenger's side, place 1x Lateral support headrest bracket (5) on the **outer** headrest hole on the 2nd row seats as shown.
- On driver's side, place 1x Lateral support headrest bracket (5) on the **inner** headrest hole on the 2nd row seats as shown.

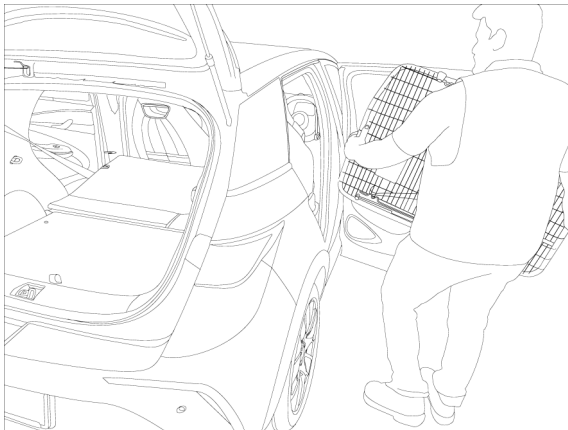


Step 10

- Take the barrier to the inside of the vehicle through one of the passenger doors.

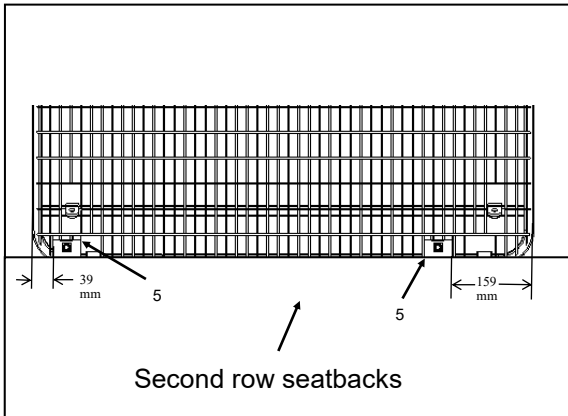

Step 11


- With the help of another technician, centre the cargo barrier and rest the front of the mesh on the Headrest Support Brackets (5) at the locations shown.

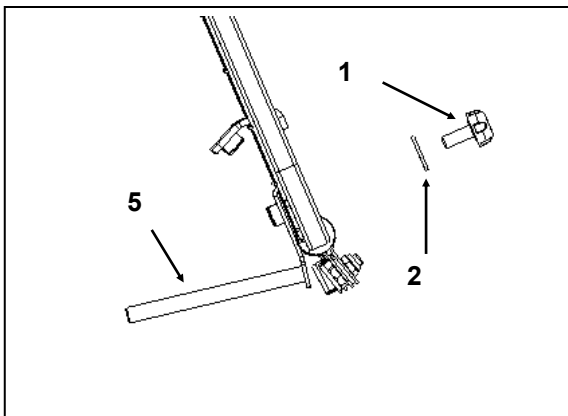

Step 12


- On driver's side, insert 1 x Milbolt M10 x 24mm (1) and 1 x M10 washer (2) to secure the barrier to the Headrest support Bracket (5) to the barrier mesh as shown.
- Repeat the same on passenger's side.

MG HS FRONT POSITION KIT CARGO BARRIER INSTALLATION INSTRUCTION Part # 41446R

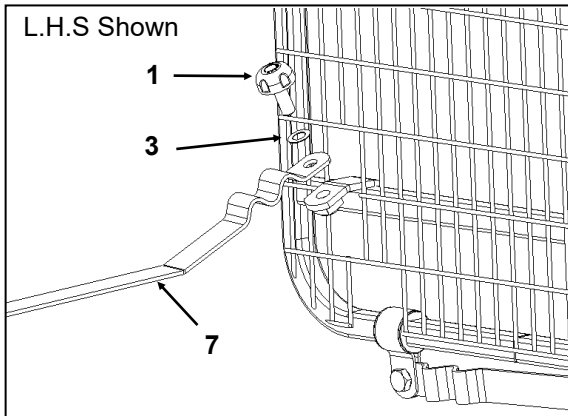


Step 13

- Attach 1 x bottom strap (7) to the barrier using 1 x Milbolt M10 x 24mm (1) and 1 x wave washer (3).
- Repeat the same on the other side.

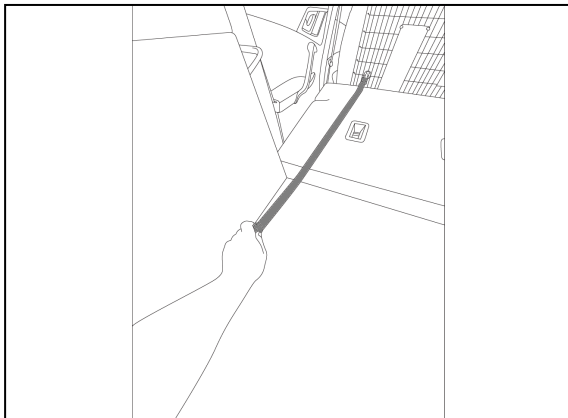


Step 14

- Attach free ends of the bottom straps (7) to bottom mounts protruding through the cargo area floor using the Milbolts with wave washers under the heads removed in step 3.

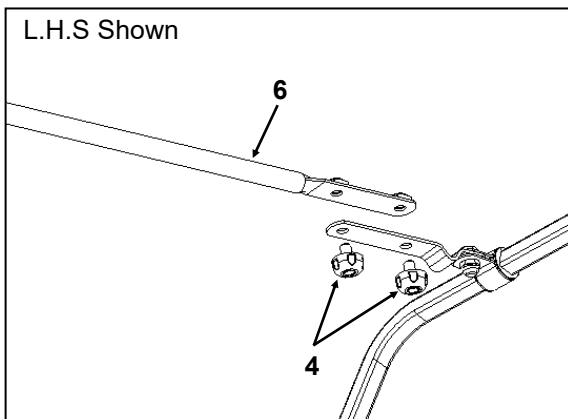


Step 15

- Attach 1 x tube strap extension (6) on the top straps using 2 x Milbolt M10 x 14mm (4).
- Repeat the same on the other side.

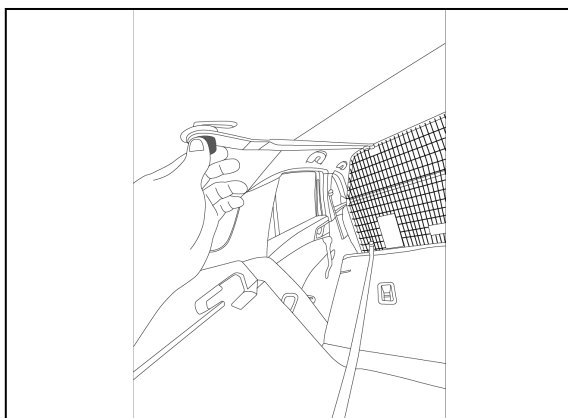


Step 16

- Attach free ends of tube strap extension (7) to the top mounts using the Milbolts with wave washers under the heads removed in step 4.
- Torque all the Milbolts to 1-2Nm.

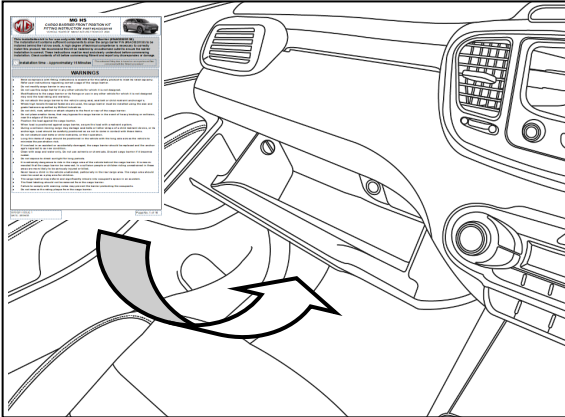

Step 17

- Place the User Instruction (9) documents into the glove compartment.

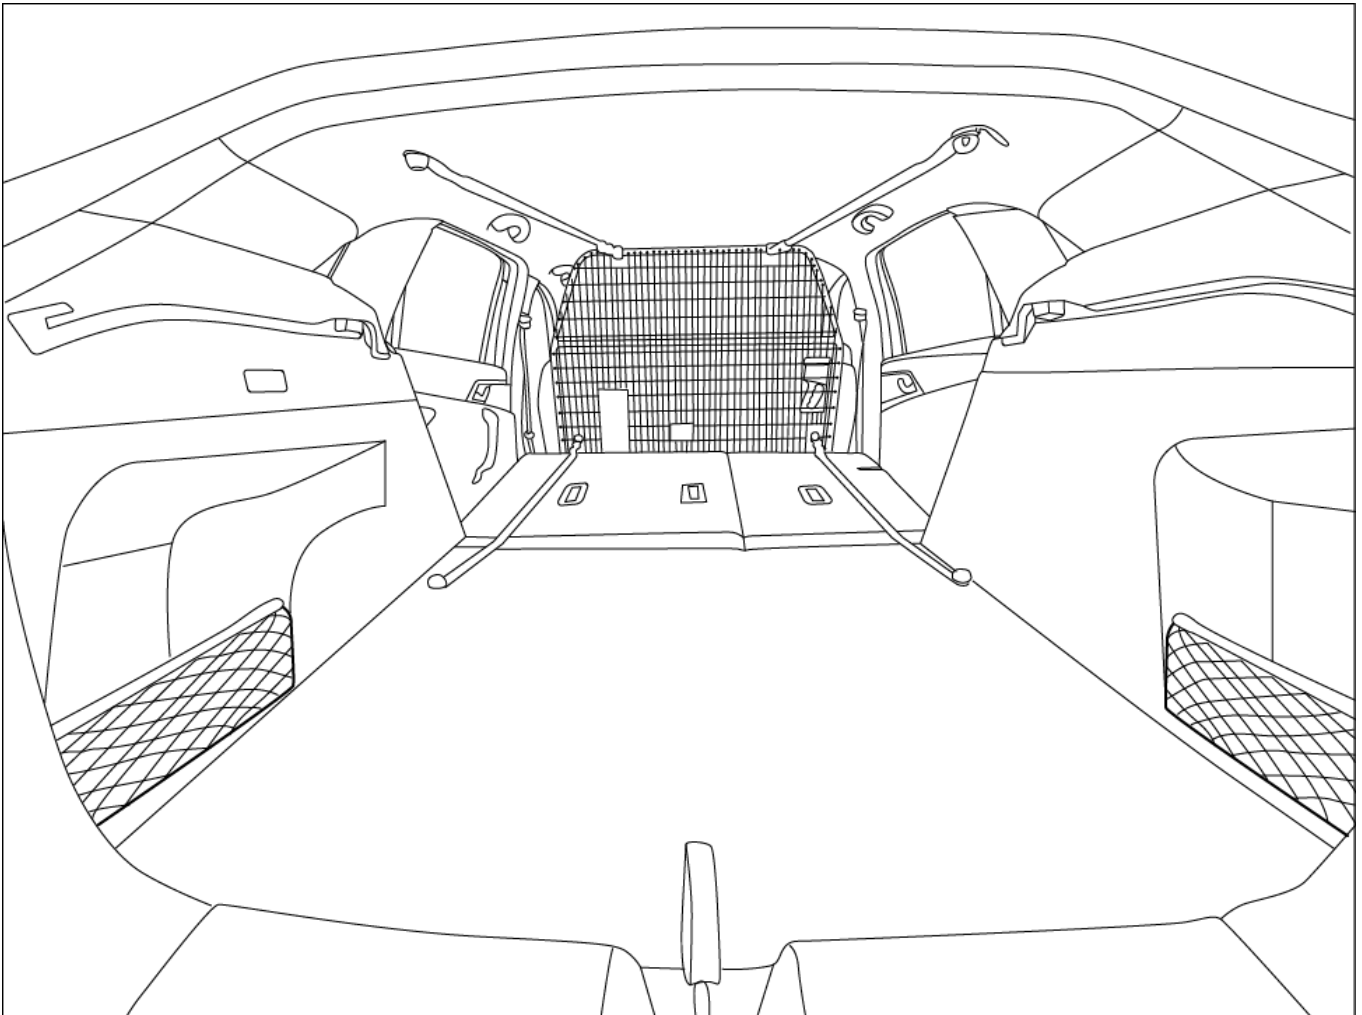

The Cargo Barrier Installation Is Now Complete for Front Position.