




Behind you all the way

SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

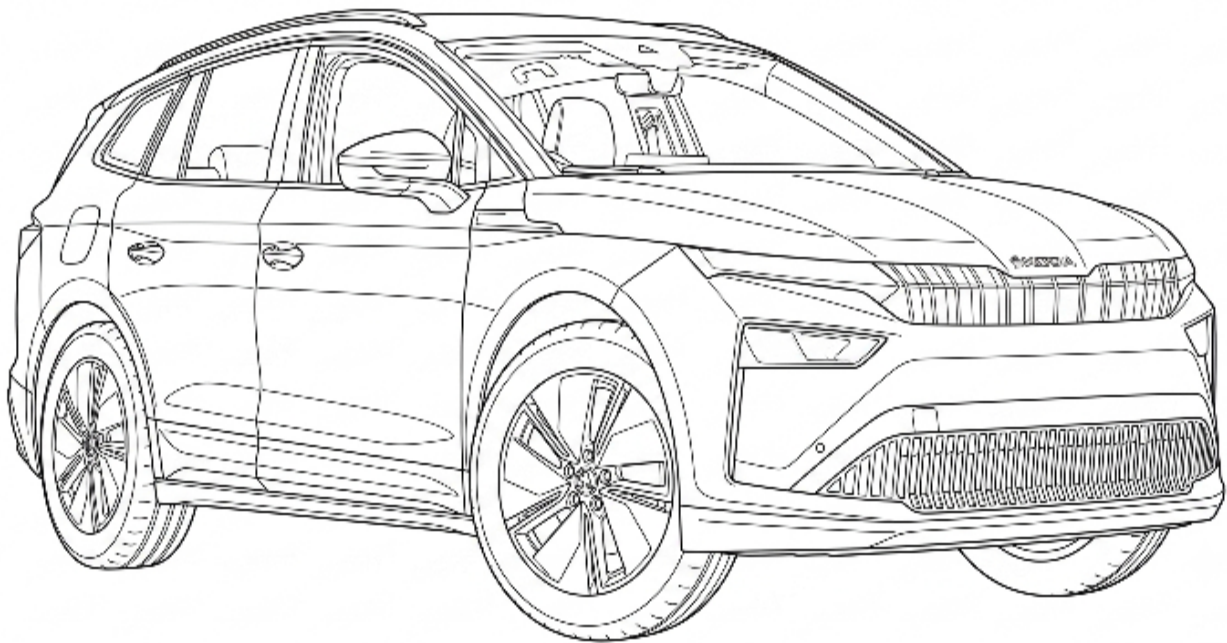

VEHICLE TYPE: SUV

MODEL YEAR: 2025 ONWARD



SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION Part #41440R

General Notes

- Read through the fitting instructions before installation of the accessory. Install the accessory following the fitting instructions. Failure to do so may cause damage to the vehicle or the accessory.
- Ensure all recyclable discarded vehicle accessory components and packaging are recycled following local recycling regulations.
- It is always recommended that this accessory is fitted by a qualified Technician.
- Safely store and protect any removed vehicle components.
- Ensure all bare metal surfaces are protected using suitable automotive rust inhibitor.
- Remove all metal swarf and dust from all vehicle surfaces if surface is used for accessory installation.

Safety Notes


- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.



Fitting Time

Est. 90 minutes

Tools






















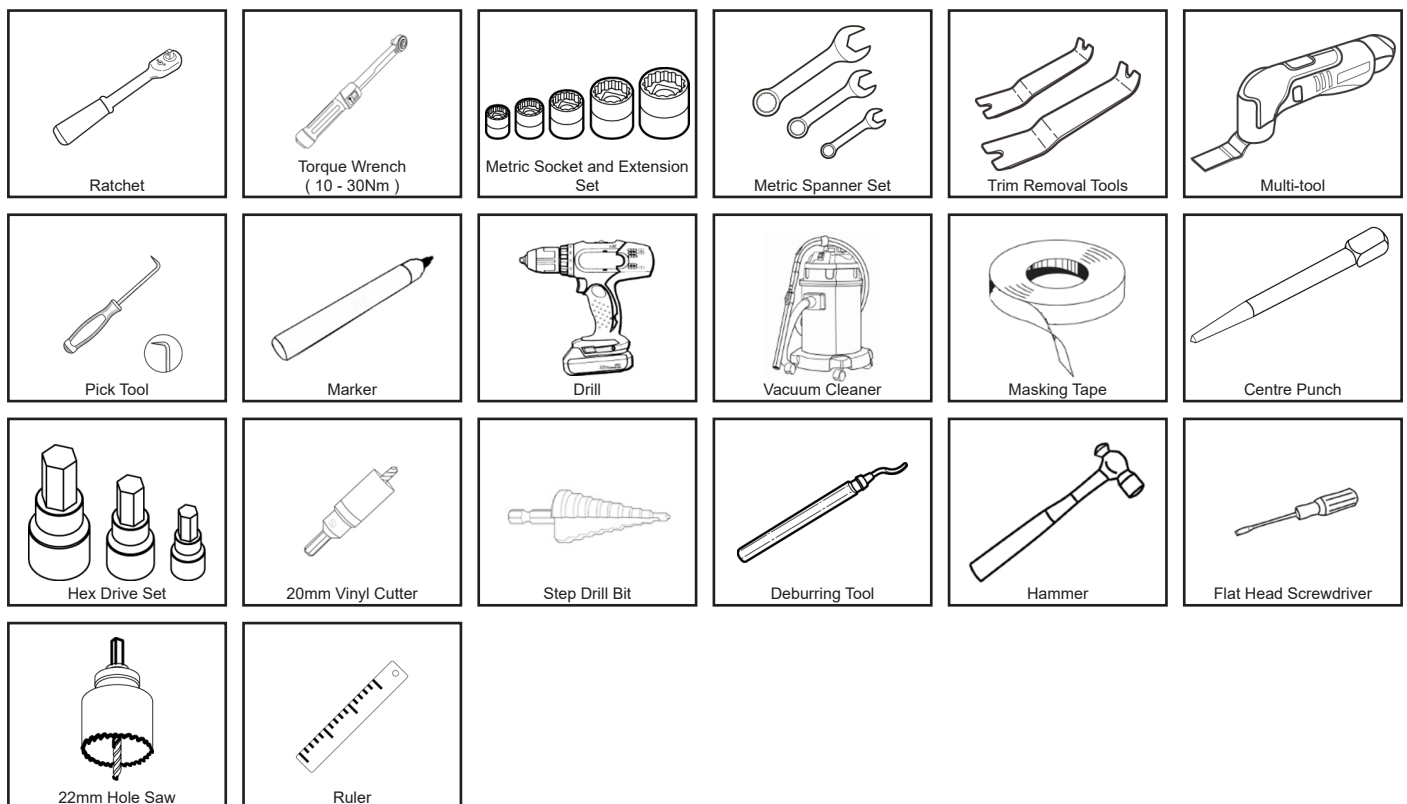




Behind you all the way

SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION Part #41440R

Parts

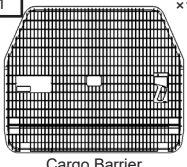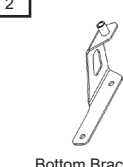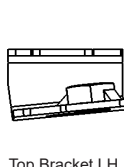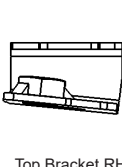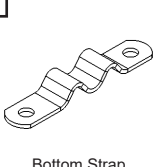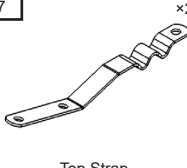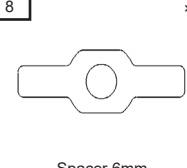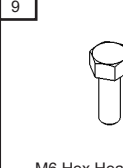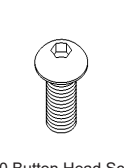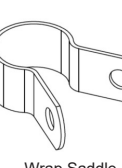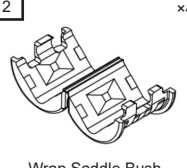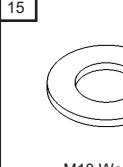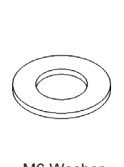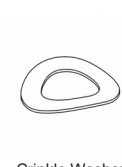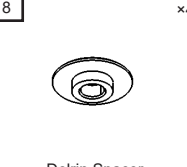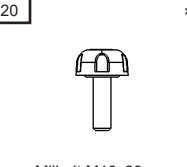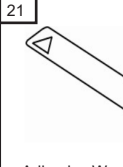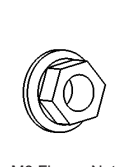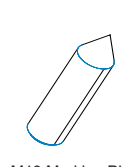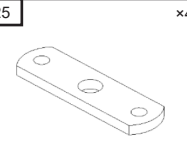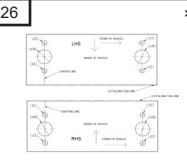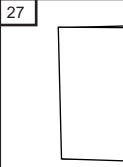1  Cargo Barrier x1	2  Bottom Bracket LH x1	3  Bottom Bracket RH x1	4  Top Bracket LH x1	5  Top Bracket RH x1	6  Bottom Strap x2
7  Top Strap x2	8  Spacer 6mm x4	9  M6 Hex Head Screw x8	10  M10 Button Head Screw x4	11  Wrap Saddle x4	12  Wrap Saddle Bush x4
13  M10 Hex Hex Screw x4	14  M10 Nylock Nut x4	15  M10 Washer x4	16  M6 Washer x8	17  Crinkle Washer x4	18  Delrin Spacer x4
19  Milbolt M10x34mm x2	20  Milbolt M10x29mm x2	21  Adhesive Warning Label x1	22  M8 Flange Nut x2	23  M10 Marking Pin x2	24  Rust Inhibitor x1
25  Mounting Plate x4	26  Drilling Template x2	27  Owner's Manual x1			



Behind you all the way


SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

Important



Always refer to Vehicle Workshop Manual when removing vehicle components.

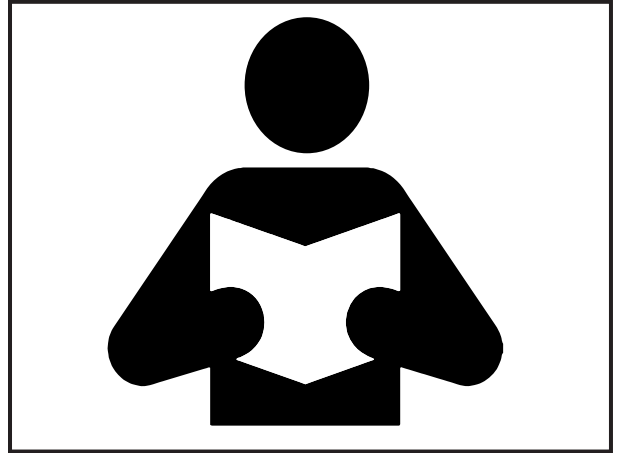


Step 1

Read through the fitting instructions before installation of accessory.

Install the accessory following the fitting instructions. Failure to do so may cause damage to the vehicle or the accessory.

Remove cargo blind from the vehicle.

Store in a safe place.

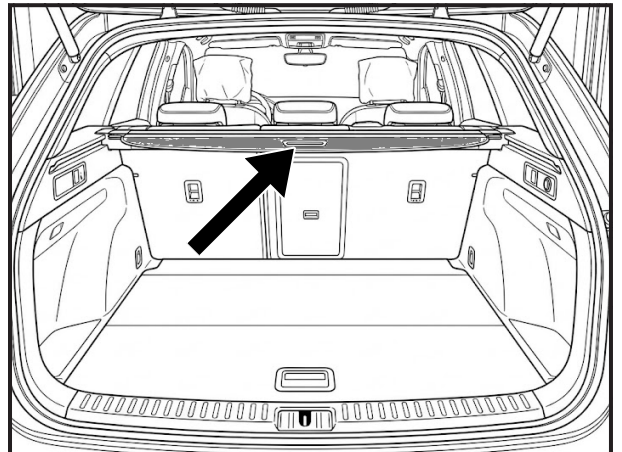


Step 2

Gain access to the cargo area of the vehicle.

Familiarise yourself with the cargo area.

Remove the cargo floor by gently lifting it upward and sliding it out.

Store in a safe place.

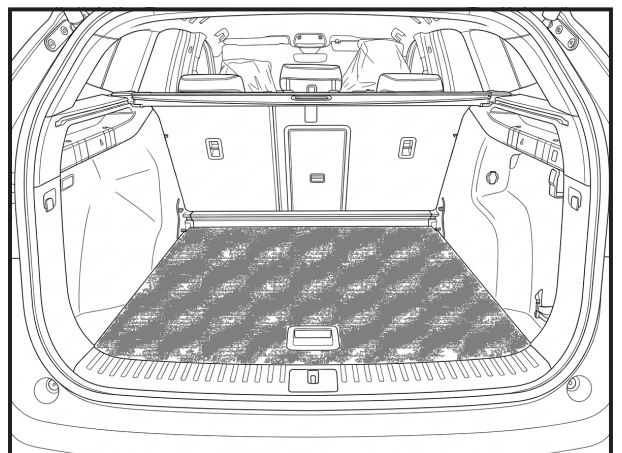





Behind you all the way

SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

Step 3


Remove the storage area below the cargo floor (as shown).

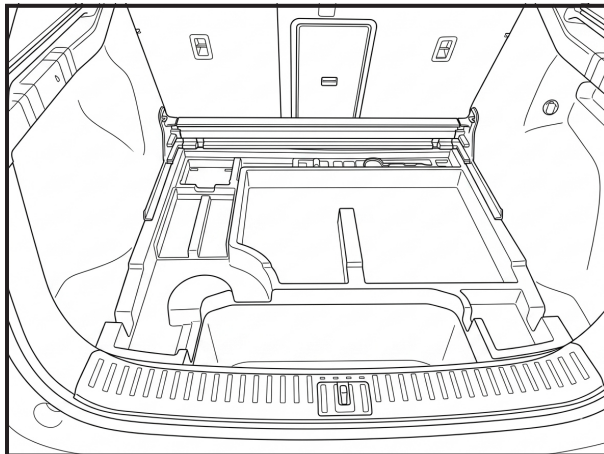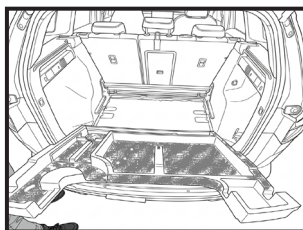

Step 4

Remove the tailgate trim by gently pulling it upwards.

Use trim removal tool if required.

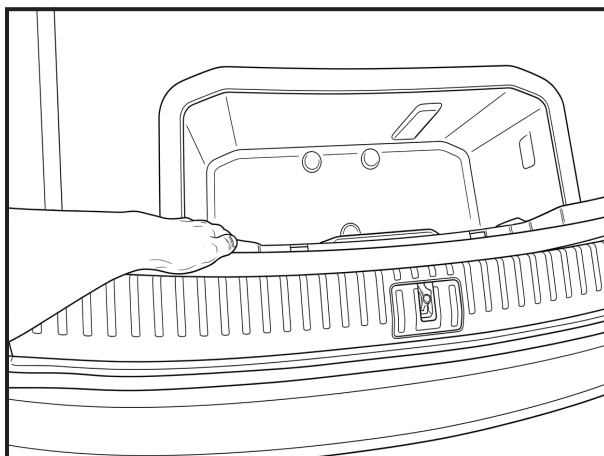


Tools Used

- Trim Removal Tools

Step 5

Using a trim removal tool, remove the D-pillar trim (LHS Shown)

Repeat process on the RHS.

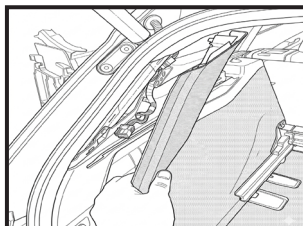

Tools Used

- Trim Removal Tools



SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

Behind you all the way



Step 6

Using trim removal tool remove the trim clip at the back of the roof liner securing the roof liner.

Gently pull down the roof liner.

Tools Used



- Trim Removal Tools

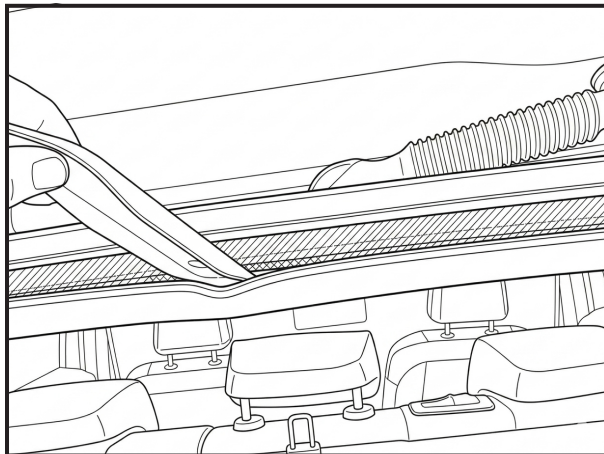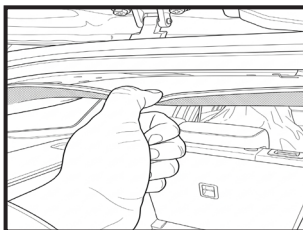

Step 7

Locate the single hinge stud on each side.

Apply masking tape to both the sides of the tailgate hinge.

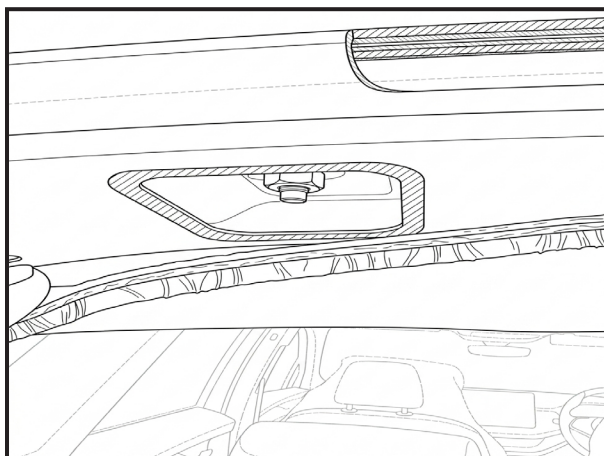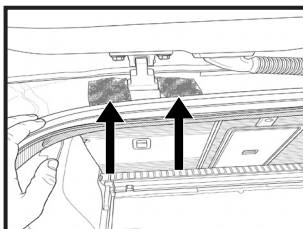



Step 8

With the assistance of a second installer, hold the tailgate in position while removing the hinge nut to prevent misalignment.

Undo and remove the tailgate hinge nut.

Tools Used

- Ratchet
- 13mm Socket

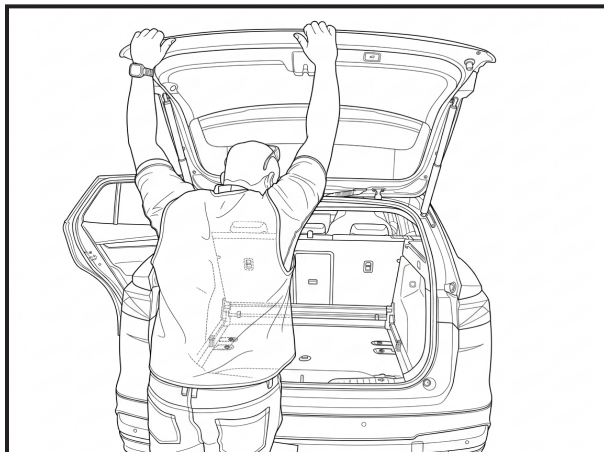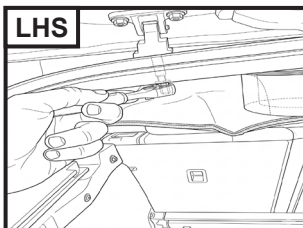



Behind you all the way

SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

Step 9

Install and secure the Top bracket LH (4) the hinge stud with M8 flanged hex nut (22).

Torque the nut to 20Nm.



Check if the tailgate hinge is in position.

Realign if required.

Repeat process for RHS.

Tools Used


- Ratchet
- 13mm Socket

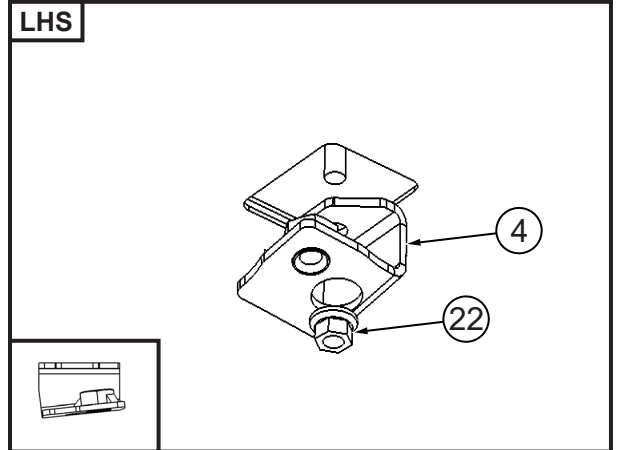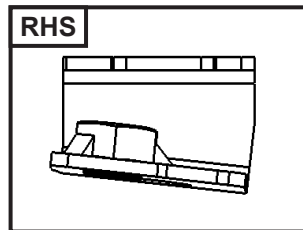

Step 10

Install marking pin (23) on the roof bracket leaving approximately 10-15mm exposed.

Repeat process on the RHS.

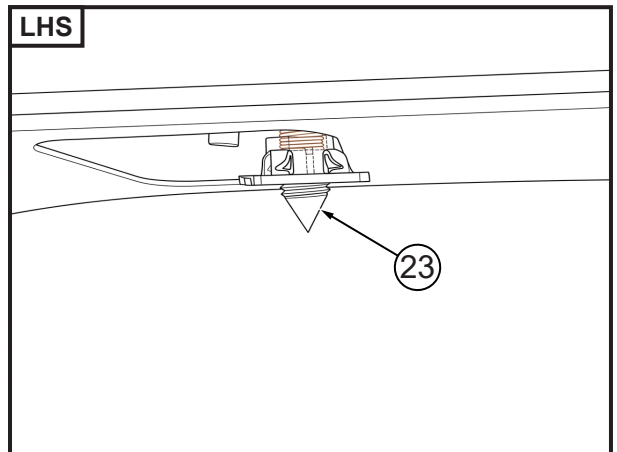


Step 11

Affix Masking Tape to the cabin side of the roof lining at the approximate location of the marking pins installed on the upper mounting brackets.

Tools Used

- Masking Tape

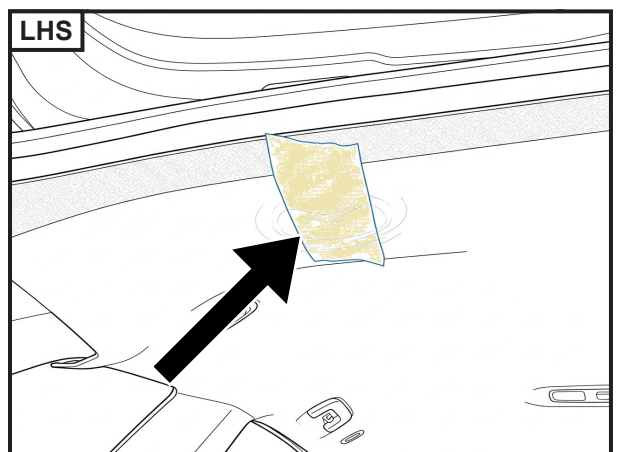



SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

Behind you all the way

Step 12


Apply pressure to the roof lining at the marking pin locations until the tip can be seen on the cabin side of the roof lining. Mark this location if required.

Remove the marking pin.

Repeat steps 11-12 for RHS.

Tools Used

- Marker

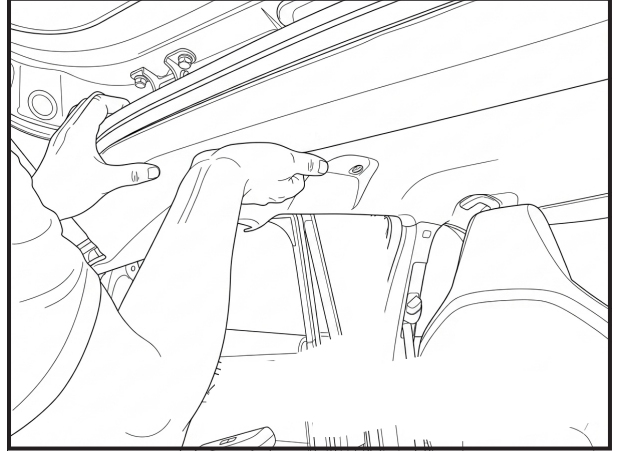

Step 13



At the marked location carefully drill a Ø5 mm pilot hole through the roof lining.

Using a Ø20mm vinyl cutter enlarge the pilot holes through the roof lining.

Repeat for RHS.

Tools Used


- Drill
- 5mm Drill Bit
- 20mm Vinyl Cutter

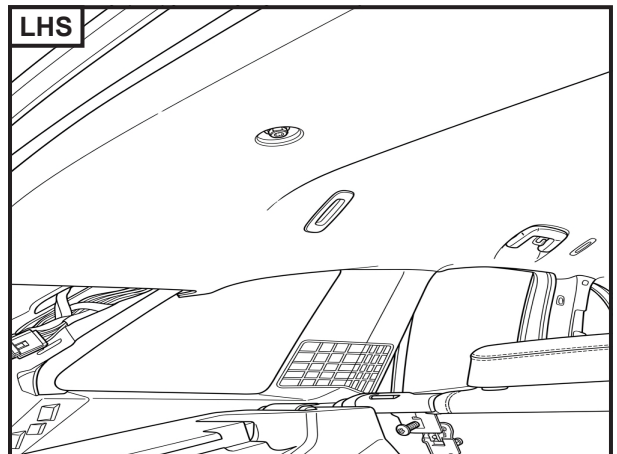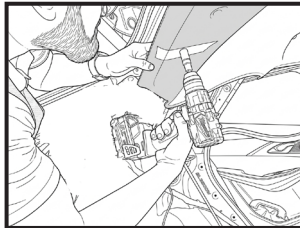

Step 14

Upon completion clean up and reinstall the roof lining using the trim plugs removed in step 6.

Reinstall D-pillar trims removed in step 5.

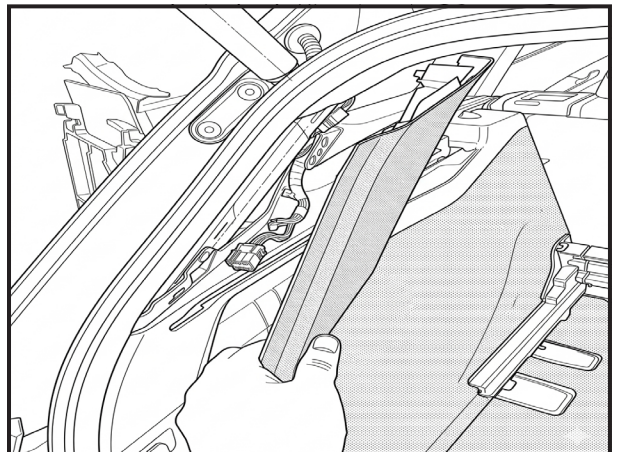



SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R



Behind you all the way

Step 15

Locate and familiarise yourself with the floor area near the wheel arch area for installing the bottom brackets LH (2).

The 2x raised sections will be used to install the brackets.

Apply masking tape on those raised sections (as shown).

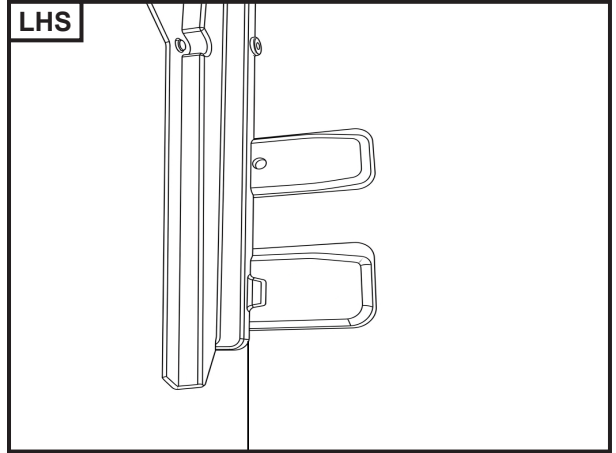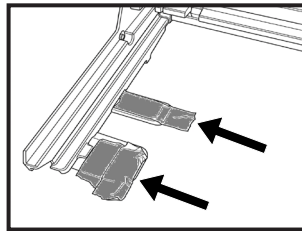



Step 16

Draw a centre line from the middle of the trim clip (as shown).

Position and align the centre line with the centre line of the drilling template (26)

The drilling template should be parallel to the side trim.

Secure the template with masking tape.

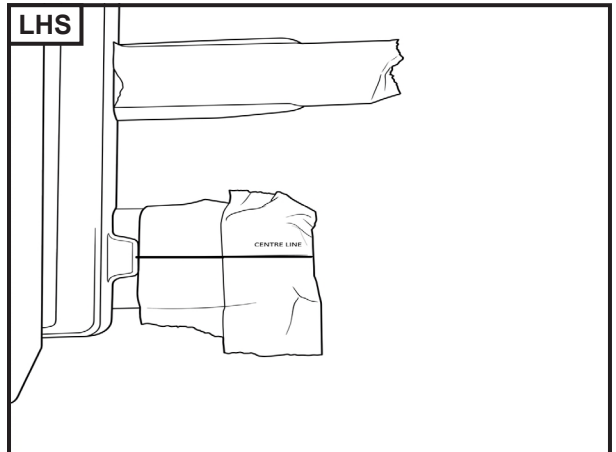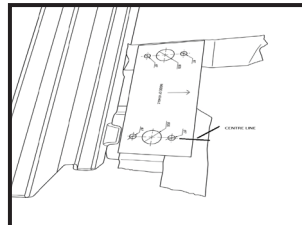


Tools Used

- Masking Tape

Step 17

Centre punch the 6x mounting hole positions onto the floor panel.

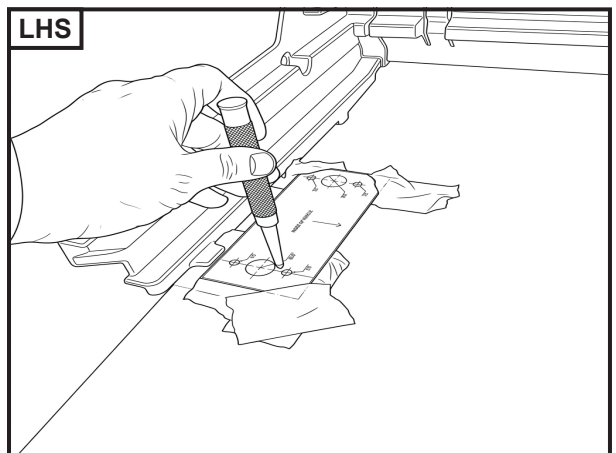

Tools Used

- Hammer
- Centre Punch



SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R


Behind you all the way

Step 18

Using a 5mm drill bit, drill a pilot hole at each of the centre punched locations.

Tools Used

- 5mm Drill Bit

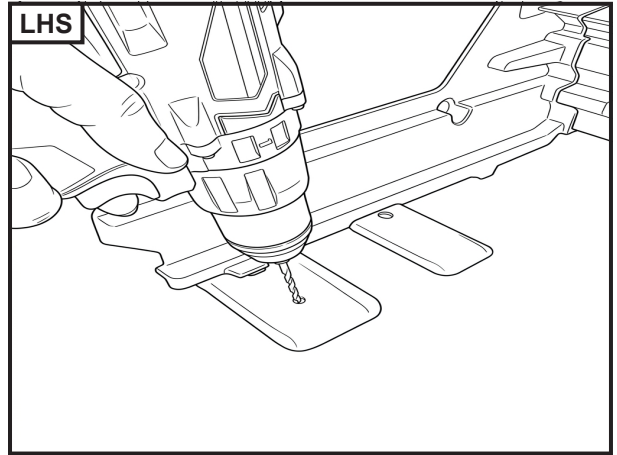


Step 19

Following the diameters designated on the template enlarge the 6x holes drilled in Step 18 with required drill bits.

Tools Used

- 7mm Drill Bit
- 20mm Drill Bit

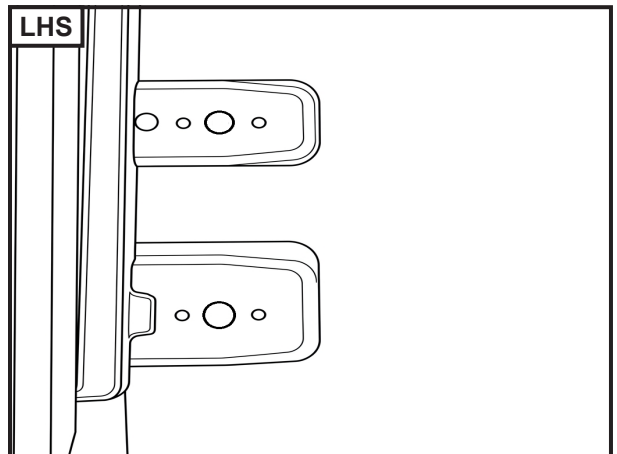


Step 20

Deburr the drilled holes in metal panel.

Vacuum away all drilling swarf.

Tools Used

- Deburring tool
- Vacuum cleaner

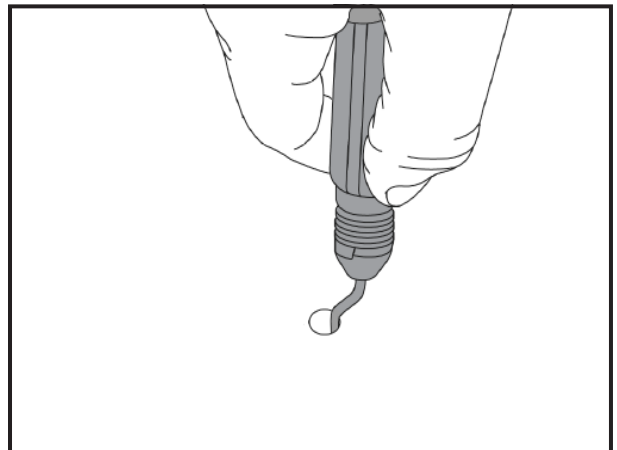



SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R


Behind you all the way

Step 21

Apply automotive rust inhibitor (24) to the raw edges of all the drilled holes in the metal panel using a small screwdriver.

Tools Used

- Flat Head Screwdriver

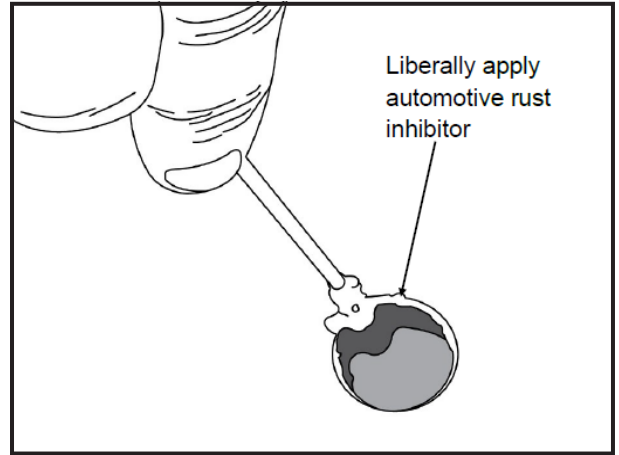

Step 22



Feed the Mounting plate (25) through the centre hole.

Gently hammer the end of the mounting plate to help it slide through.

Repeat the process on the other raised section.

Tools Used

- Hammer

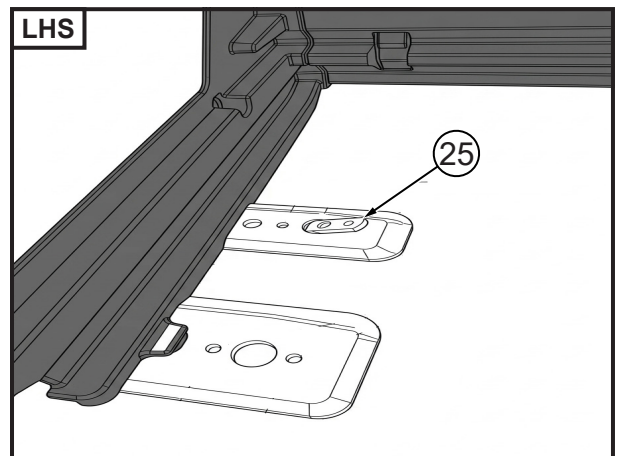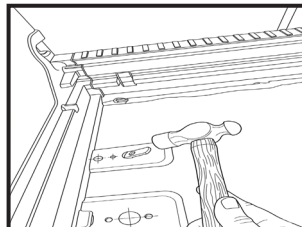

Step 23

Adjust and align the Mounting plate (25) with the drilled holes.



Secure the Mounting plate (25) with 2x M6 Hex Head screws (9) and 2x M6 Washers (16) beneath the head.

Repeat the process for the other raised section.

Torque all M6 Hex Head Screws to 10Nm

Tools Used

- Torque Wrench
- 10mm Socket
- Pick Tool

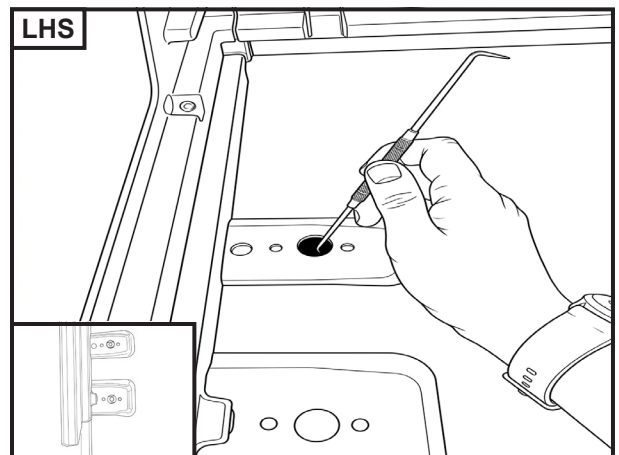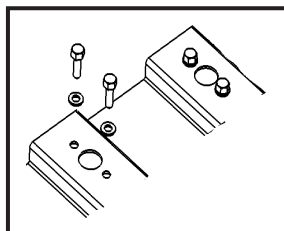



SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

Behind you all the way

Step 24

Place 2 x 6 mm spacer(8) in between the 2 x M6 Screws.

Place and align the Bottom mounting bracket (2) on top of the spacers.



Secure them using 2 x M10 Button Head Screws (10) and 2 x M10 Washers (15) underneath the heads.

Torque all M10 Button head screws to 20Nm.

Repeat steps 15 -24 for RHS.

Tools Used

- Torque Wrench
- 6mm Hex Bit

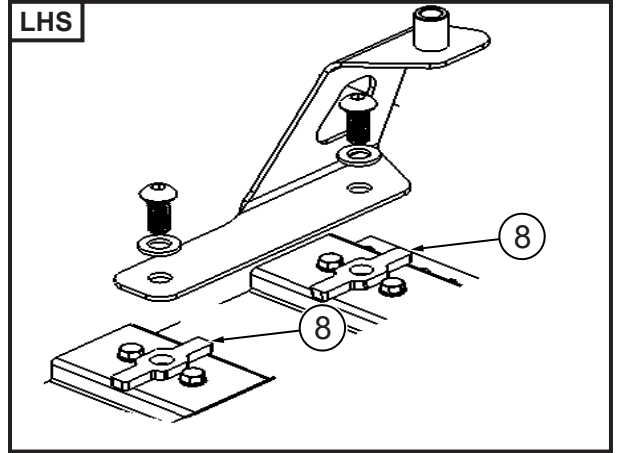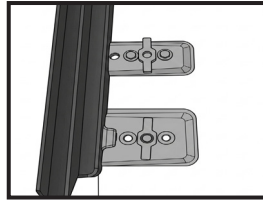


Step 25

Screw Marking pins supplied into the threaded spacers for the bottom bracket (23).

Repeat for RHS.

Tools Used

- Marking pin

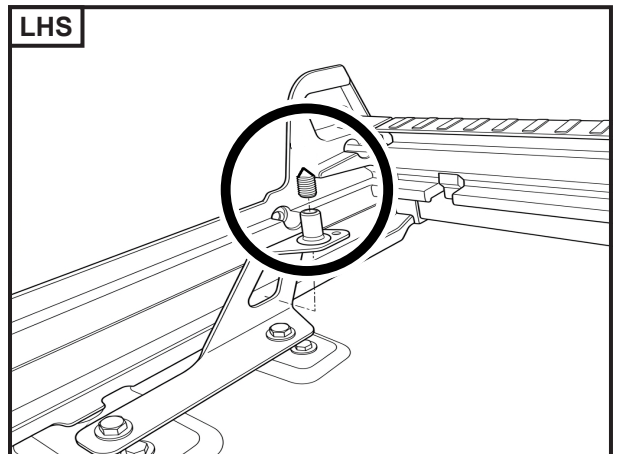


Step 26

Place the storage compartment exactly so it's on top of the brackets.

Push the compartment downward firmly so the marking pins create clear indentations on the foam surface.

Remove the cargo compartment.

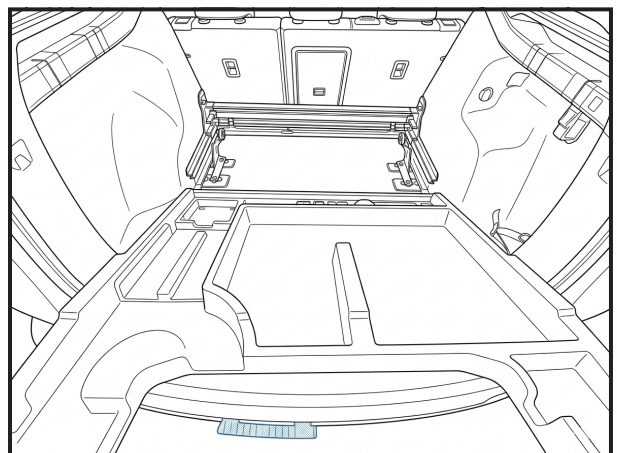



SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

Behind you all the way



Step 27

Place the cargo compartment upside down on a workbench.

Locate the indentation marks.

Using a white marking pen, mark and dimension as shown.

Repeat the process on the RHS.

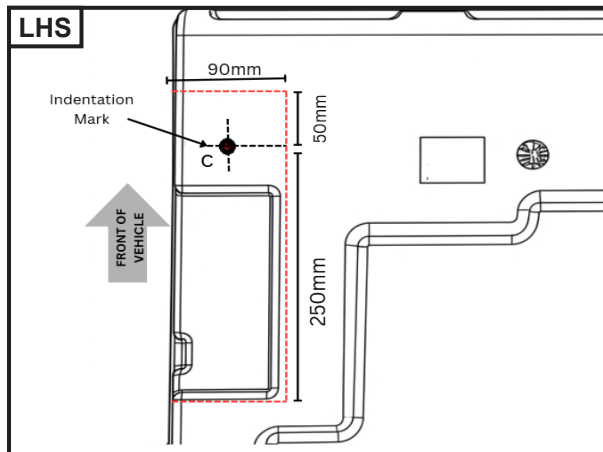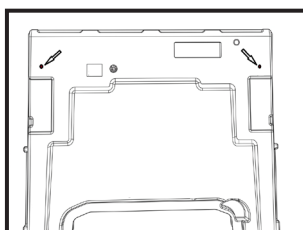

Tools Used



- Marker

Step 28

Using a multi-tool, cut and remove the marked section from the cargo compartment.

Repeat on the RHS.

Reinstall the cargo compartment.

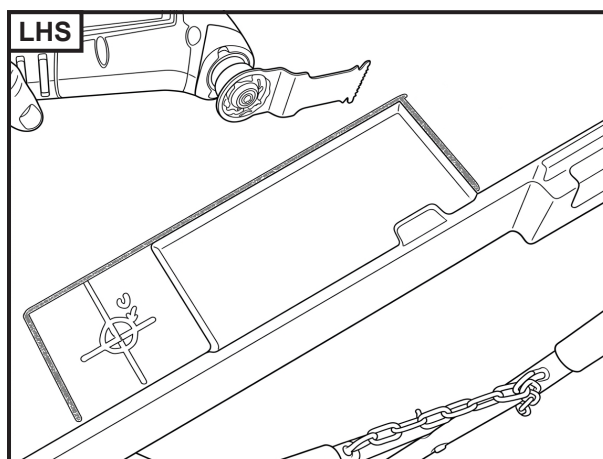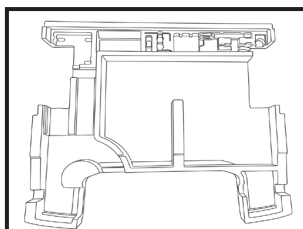

Tools Used

- Multi-tool
- Marker


Step 29

Remove the marking pins from the threaded spacers.

Measure the centre position of the spacer hole using a ruler, as shown.

Note: Make sure to measure it from the back & side walls where the floor sits

Repeat on the RHS.

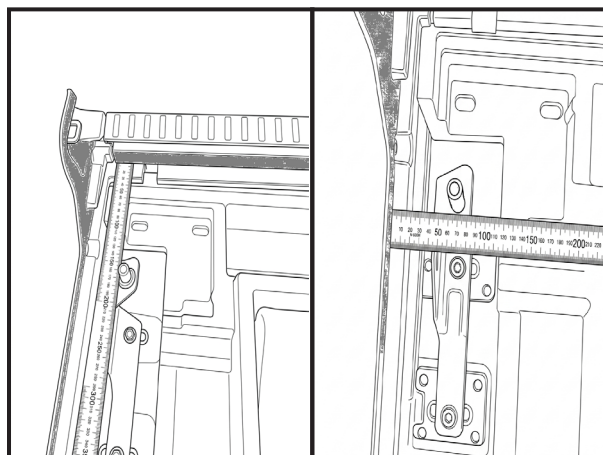

Tools Used

- Ruler



SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

Behind you all the way

Step 30



Place the floor upside down on a workbench.

Apply masking tape to the top corner area as shown.

Mark the hole centre using the measurements recorded in Step 29.

Drill a 22 mm hole using a hole saw.

Cut a 50 mm slot tangent to the drilled hole.

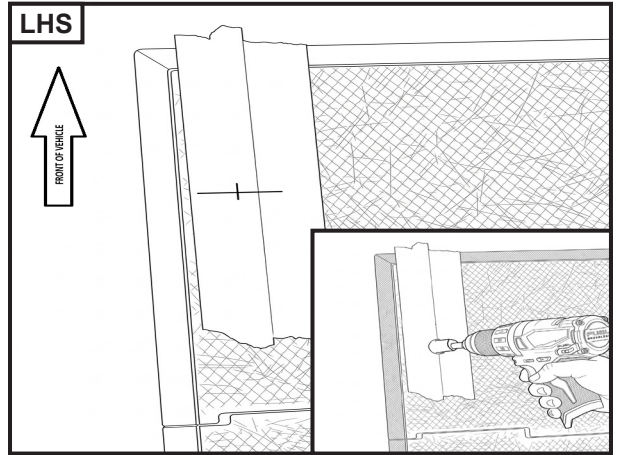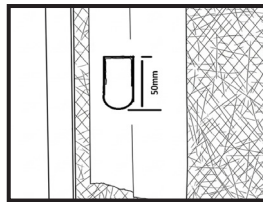


Tools Used

- Multi-tool
- 22mm Hole Saw
- Masking Tape

Step 31

Repeat the process on the RHS using the RHS measurements.

Remove the masking tape and reinstall the floor into the vehicle.


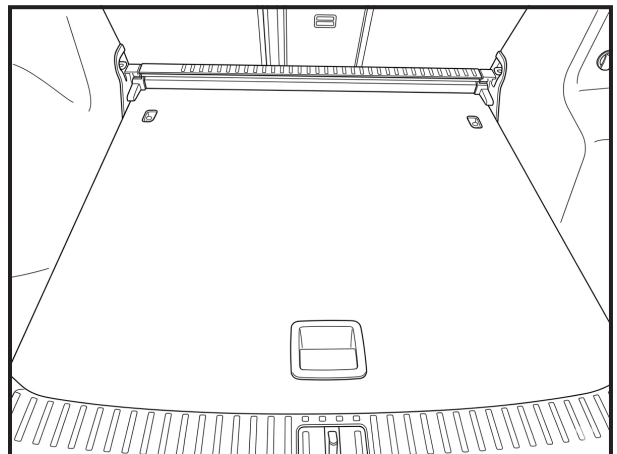


Tools Used

- Multi-tool
- 22mm Hole Saw
- Masking Tape

Step 32

At each of the cut-outs in the mesh on the perimeter at the side of the cargo barrier, place a pivot saddle bush (12).

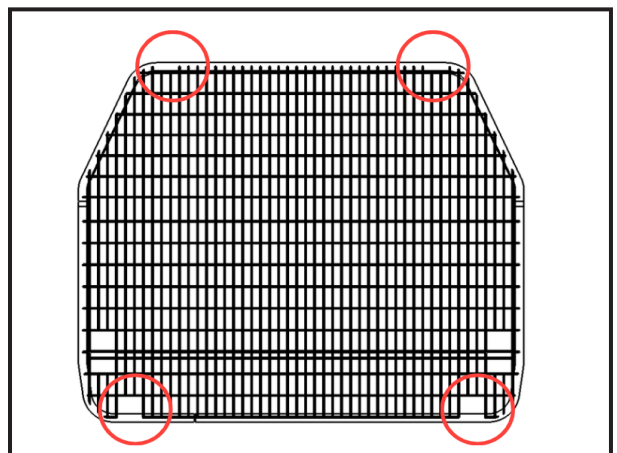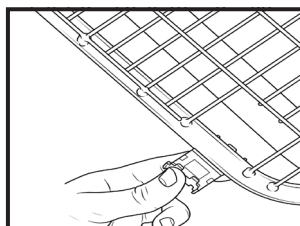




SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

Behind you all the way

Step 33

Place a pivot saddle (11) over each of the pivot saddle bushes (12) then push the ends together.

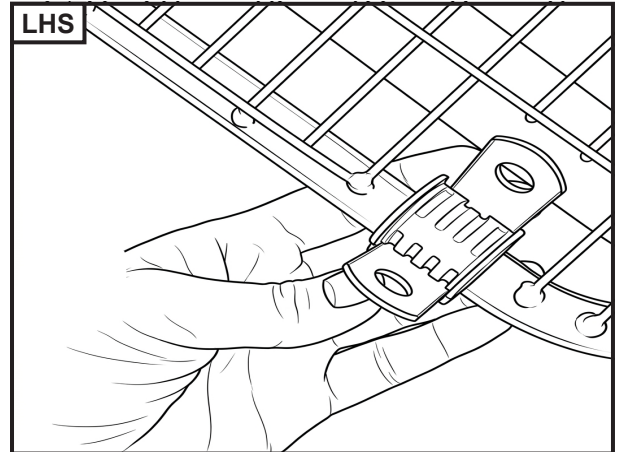


Step 34

Place the Bottom Strap (6) between the LHS pivot saddle ends then place a M10 x 20 mm Hex Head Bolt (13) through the saddle and strap.

Place a M10 Hex Head Nut (14) onto the Hex Head Bolt then tighten until the strap is firm in the saddle but can still be pivoted.

Repeat step on the RHS.

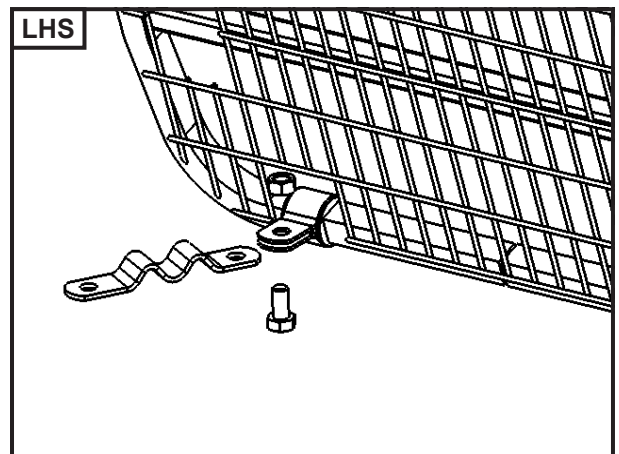

Tools Used


- Ratchet
- 17mm Socket
- 16mm Spanner

Step 35

Repeat step 34 to install the top straps (7).

Repeat process for RHS.

Reinstall cargo floor.

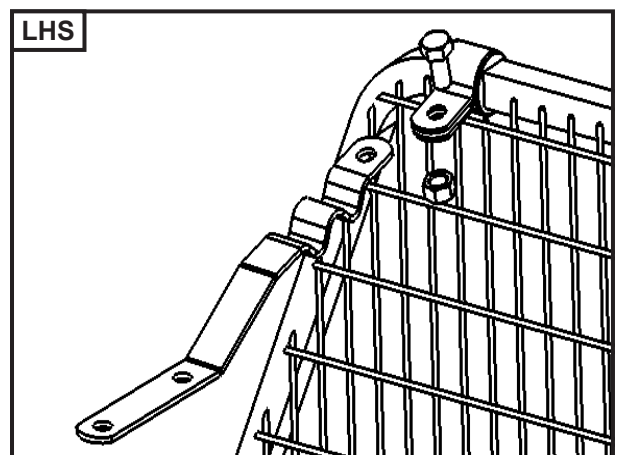

Tools Used

- Ratchet
- 17mm Socket
- 16mm Spanner




SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION

Part #41440R

Behind you all the way

Step 36

Position the cargo barrier in the vehicle with the meshed side facing the rear with the bottom of the cargo barrier sitting on top of the cargo floor.

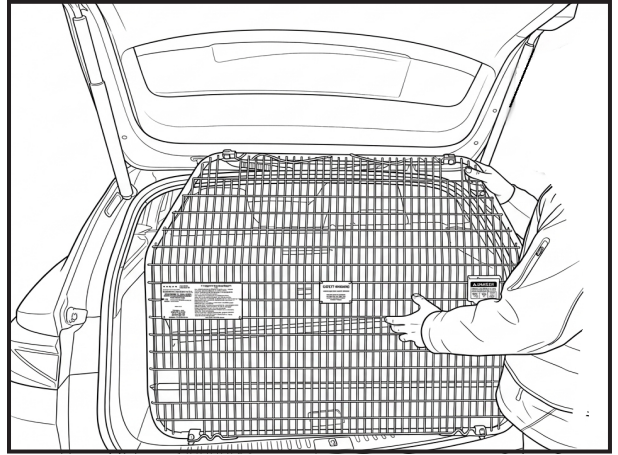


Step 37

Secure the top straps to the top mounts using Milbolt M10 x 29 mm (20) with wave washers (17) under heads and Delrin spacers (18) under the straps.

Tighten all Milbolts.

Repeat for RHS.

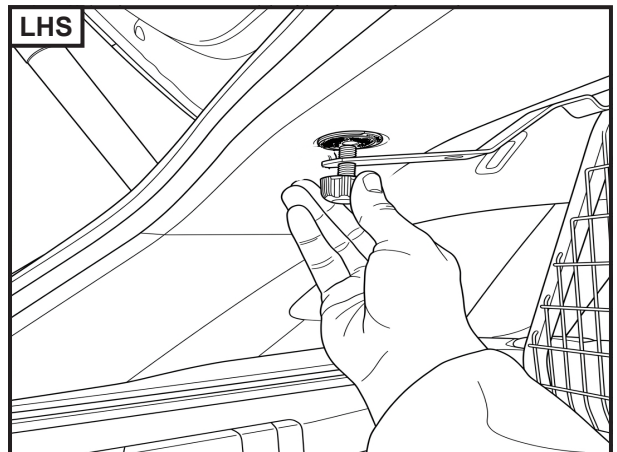


Step 38

Secure the bottom straps to the bottom mounts using Milbolt M10 x 34 mm (19) with Wave Washers (17) under heads and the Delrin spacer (18) under the strap.

Tighten all Milbolts.

Repeat for RHS.

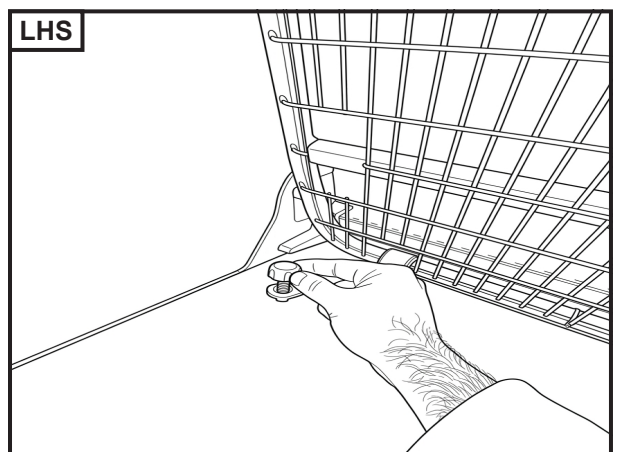



SKODA ENYAQ CARGO BARRIER FITTING INSTRUCTION


Part #41440R

Behind you all the way

Step 39

On the inside of the driver's door opening clean the area shown using a clean cloth.

Affix the orange warning label (21) in the location shown.

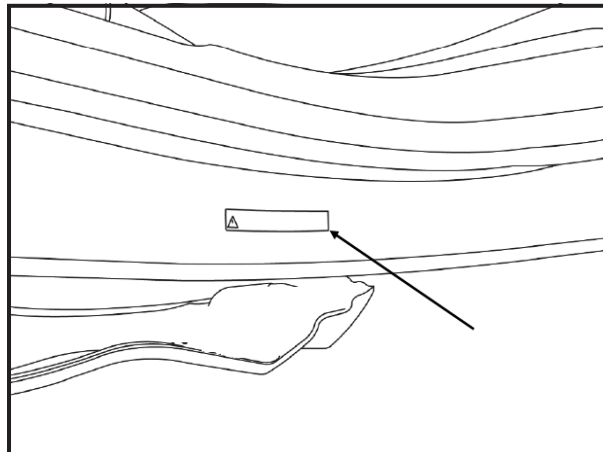

Tools Used


- Clean Cloth

Step 40

Important




Please place Owner's Manual in the glove box after installation is completed.

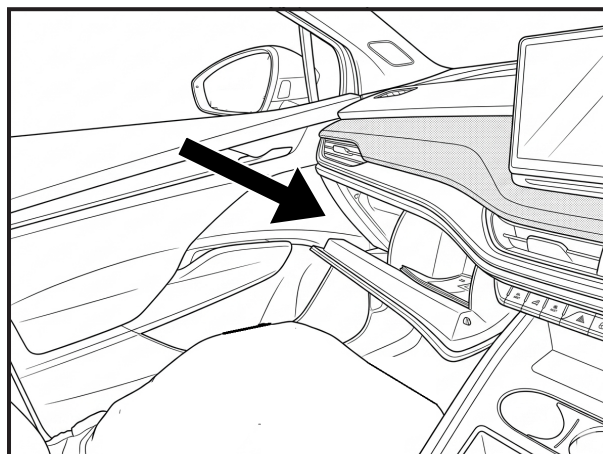

Step 41

The cargo barrier is now installed in the rear position.

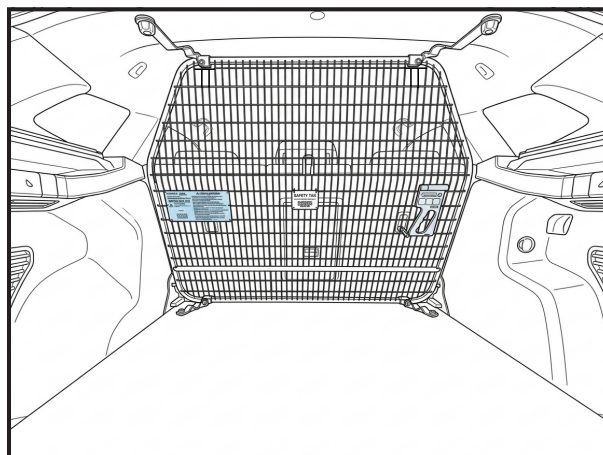





**SKODA ENYAQ CARGO BARRIER
FITTING INSTRUCTION**
Part #41440R

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK



SKODA ENYAQ CARGO BARRIER
FITTING INSTRUCTION
 Part #41440R

DRILLING TEMPLATE

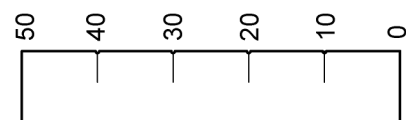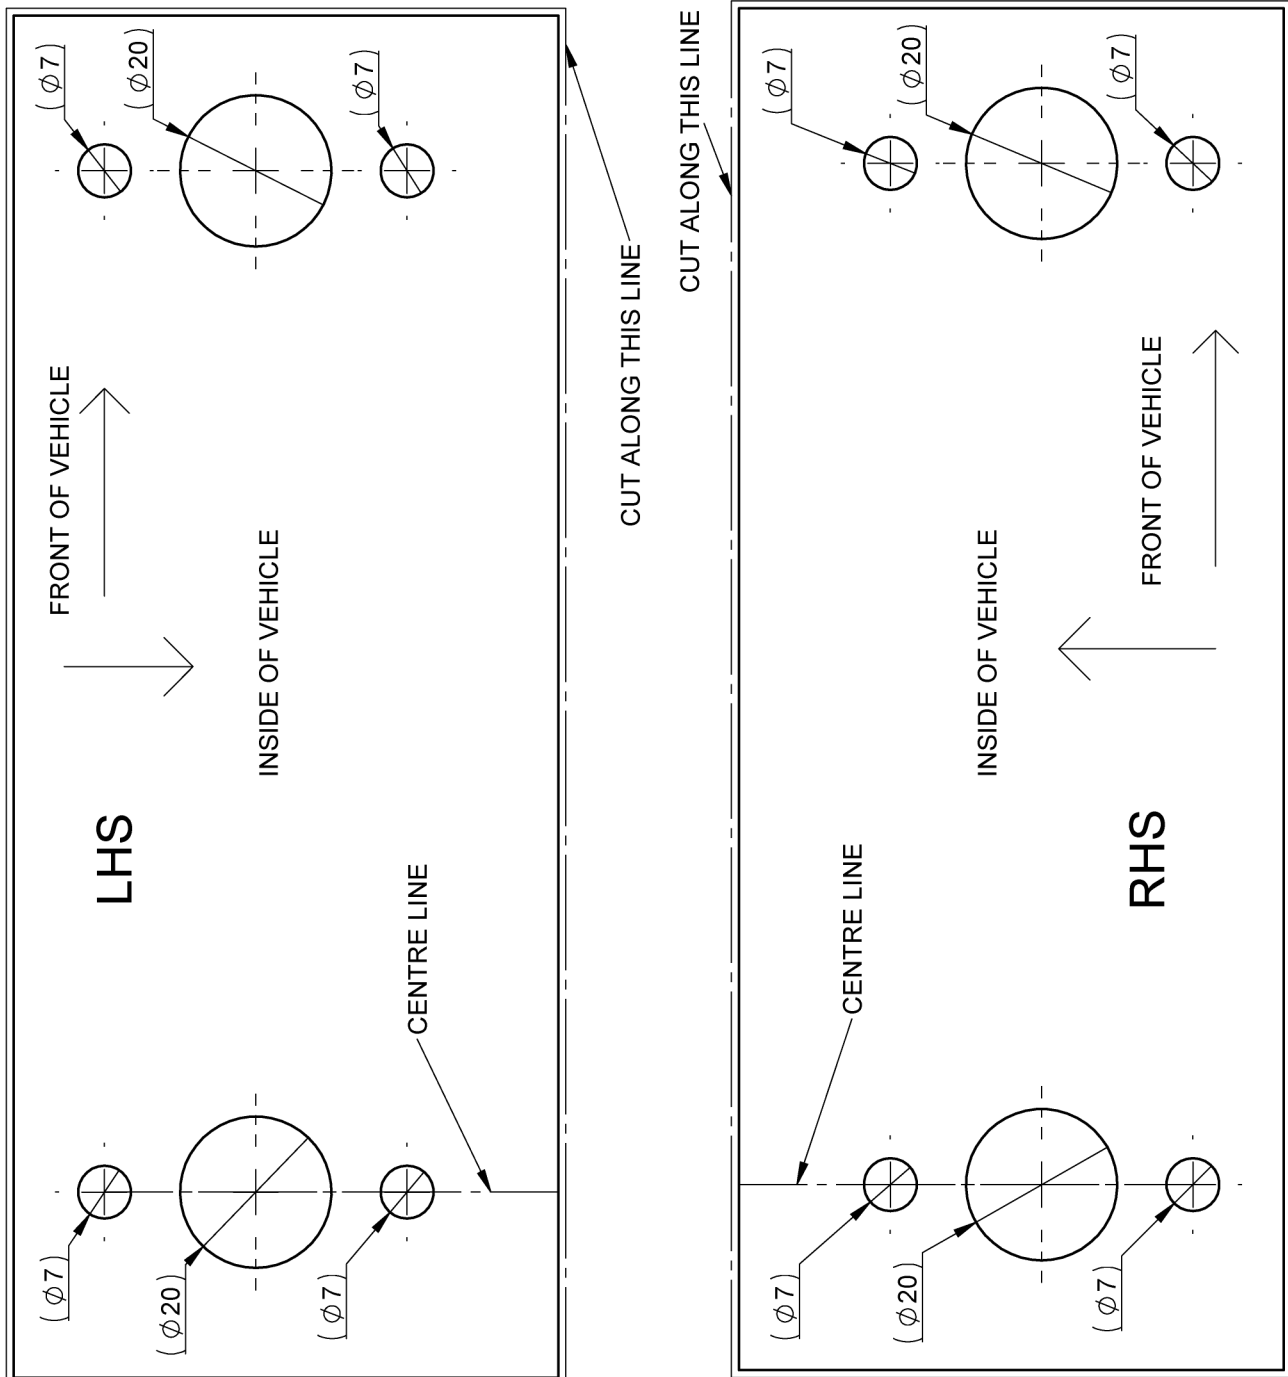

NOTE: Measurement in mm. Use this to verify the printed template is at 1:1 scale.