

Fitting Instructions



SKU

PRODUCT

TXR804

**TAG 4x4 Recovery Towbar to suit
Mazda BT-50 (09/2011 - 10/2020),
Ford Ranger (09/2011 - 05/2022)**



Scan for latest
version of these
instructions


SPECIFICATIONS

- Towbar Class: Extreme Recovery
- Towing Capacity: 3500kg

IN THIS GUIDE

- Fitment Instructions
- Torque Settings
- Warranty Info

Towbar Fitting Instructions

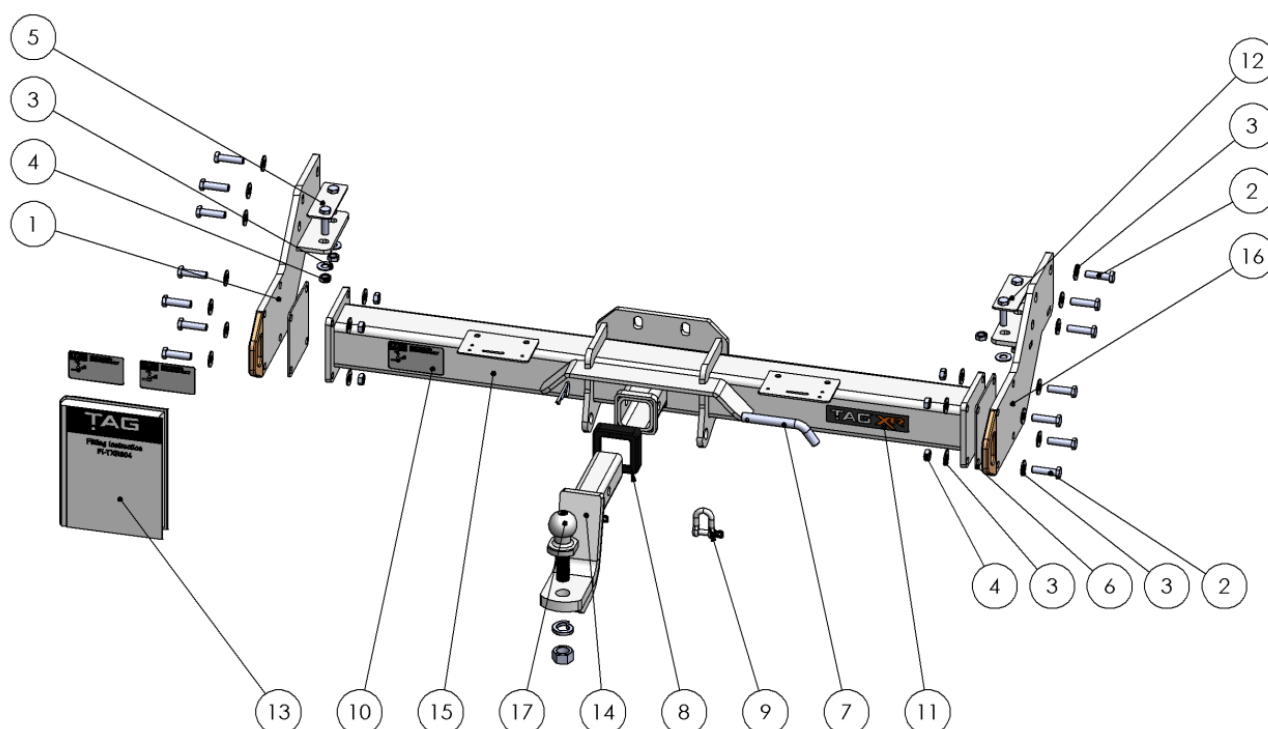

Tools required: 18mm Spanners and or Sockets, 33mm Socket, Torque wrench, Impact Wrench

ITEM NO.	DESCRIPTION	QTY.	ITEM NO.	DESCRIPTION	QTY.
1	End Plate Assembly (PS)	1	10	TAG Compliance plate	3
2	M12 x 1.25 x 45 Bolt	14	11	TAG XR Sticker	1
3	M12 Flat Washer	26	12	Top Plate Assembly DS	1
4	M12 x 1.25 Nut	12	13	Fitting Instruction	1
5	Top Plate Assembly PS	1	14	PC Ball Mount	1
6	3mm End Plate Spacer	2	15	Welded Assembly TXR804	1
7	Class 4 Pin & Clip	1	16	End Plate Assembly (DS)	1
8	TAG Hitch Receiver Cover	1	17	TAG Tow Ball 50mm 3.5t	1
9	TAG D-Shackle	2			

Step-By-Step Instructions

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owner's Manual.
- This towbar is NOT to be drilled, cut, welded, or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present
- All load ratings shown are under the assumption your trailer has a functional braking system installed
- When installed in positions other than the one depicted in these instructions the Tow Ball Mount may interfere or obstruct certain features of your vehicle (tailgate opening, chassis clearance, etc.)

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar. (Tray, Canopy, Suspension etc.)
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- The high tensile fasteners supplied with this product are an integral feature to achieving the specified rating, if replacement is required ensure that fasteners of the same grade (8.8) & quality are used. Contact an authorised TAG distributor or the TAG fitment centre - (07) 3208 3022 - if further information is required.

Towbar Maintenance and Care:

It is recommended, when not in use, the Tow Ball Mount assembly and class 4 Pin and Clip is stored inside the car away from moisture to prevent standing water from forming rust. Inspect to ensure, on regular basis, fasteners are torqued to the specifications below and in good condition.

Ensure that the fitting instructions are read and understood prior to fitment

Place these instructions in the vehicle's glovebox after installation is completed

Towbar Fitting Instructions



Step 1. Fit Towbar

- a. Lay out the fitting kit next to the towbar with the fasteners in their respective positions on the towbar and ensure all hardware to be included is in the kit and correct
- b. Mate the endplate assembly to the side of the chassis rail loosely securing from the side with 3 X M12 x 1.25 x 45 bolts, shakeproof and flat washers
- c. From the inside of the chassis rail mount the top plate assemblies through the chassis and endplate assembly and secure with flat washers followed by a nuts
- d. Repeat for the other side
- e. Lift welded assembly in-between the endplates and loosely secure with 8 X M12 x 1.25 x 45 bolts, shakeproof and flat washers and a nut

NOTE: if a gap between the endplates and welded assembly is present and larger than 6mm use provided spacer plates

- f. Using the torque chart (see table) torque all fasteners to the corresponding value of the bolts used

Step 2. Apply Door Sticker

- a. Apply one of the compliance labels to the pillar of the driver's door. Leave the remaining label & the fitting instructions in the vehicle handbook.



Torque table for bolt tightening

Diameter	Pitch	Grade	Torque	Unit
M8	1.25	8.8	29	Nm
M10	1.25	8.8	57	Nm
M10	1.50	8.8	44	Nm
M12	1.25	8.8	101	Nm
M12	1.50	8.8	97	Nm
M12	1.75	8.8	77	Nm
M14	2.00	8.8	122	Nm
M16	2.00	8.8	190	Nm

TAG Warranty Statement

SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit www.swd.com.au