

430 Issue A

www.rola.com.au

page 1 of 2



RMX Series Roof Racks

FORD

BA-BF Falcon Sedan 09/02 - 04/08

PART No:

50 kg

CARRYING CAPACITY

ENSURE LOWER STRAP IS FITTED CORRECTLY BEFORE PROCEEDING

FITTING CROSS-BARS TO VEHICLE

12. Open all four vehicle doors. Hook the upper strap on to the already mounted lower strap (Refer to previous page of this fitting instruction) with the cage nut facing inwards (Fig.6). Place the rubber mount pads onto the roof of the vehicle and tuck under each strap - the pointier end of the mount pad must face towards the front of the vehicle (Fig.7). Gently close the doors to temporarily hold the upper straps in place while fitting the crossbar assemblies.



Do not to flex the brackets forcefully as to prevent permanently deforming the strap bracket profile.
Please be careful as not to stratch/damage the paint when installing the strap brackets.

13. Place the crossbar onto the mount pads with the sloping face of the End Supports facing towards the front of the vehicle. Loosely fit the bolt (with washer) through the End Support (Fig.7) and into the strap cage nut. Give the bolts 3 or 4 turns with the security key provided. Go to the other side of the vehicle and pull on the End Support and fit the same. This will allow correct alignment of the strap and bolt thread.

14. Tighten the Strap Brackets via the Security Bolts whilst pushing the straps hard up against the vehicle body. Alternate sides whilst tightening for even retention across both sides.

Note: Leave a gap of approximately 3 to 5mm between the bottom of End Support and the top of the Strap bracket(Fig. 9). Over-tightening the bolts may result in damage to your vehicle and/or roof-rack.

15. Proceed to follow steps 13 and 14 when mounting the Rear Cross-bar Assy.

16. You are now ready to mount your "Accessories" set onto the cross-bars using the Global Mount Channel. Once installed, insert the 'Global Channel' Covers into the End Supports.

Note: You have a choice of 2 - (a) quick access snap-on cover or (b) long term mounting - security cover to cap off and lock the mount channel. (Fig. 8)

General Usage Information

It is essential for the proper assembly, operation and use of the Roof Rack that the instructions and safety precautions supplied are strictly observed. Read any fitting, care and usage instruction carefully.

The maximum permissible load for your Roof Bar is the lower of the maximum load capacity specified in your vehicle operation manual, or specified as applying to the Roof-Rack. Do not exceed the maximum specified load capacity. Maximum permissible load = weight of the Roof Rack + weight of accessories + weight of load (cargo).

When fitting the Roof-Rack and transporting a load, ensure the vehicle's functions are not impaired (eg, sunroof, aerials, windscreen wipers, mirrors). Rear doors on Hatch- and Wagon-type vehicles should be inspected for adequate clearance for full opening operation of the boot/tailgate.


Stop and check all screw connections, bolts and retaining straps after a short distance of travel. Repeat these checks at regular intervals.

Warnings

Remember that the fitting of a Roof Rack and the transport of a load increases the overall height of the carrying vehicle.

Where the Roof-Rack is to be used in off-road conditions, a safety weight reduction of 1.5 should be observed from the total carrying capacity. (eg. 60kg becomes 40kg)

Cequent will not be liable to the purchaser or any other person for any consequential, incidental, direct or indirect loss, damage or costs incurred of suffered by the purchaser or any other person including but not limited to damage to persons or property, loss of turnover, loss of profits, loss of business or goodwill, arising from or in relation to the assembly and use of the Roof rack, or the non-observance of the fitting and care instructions.

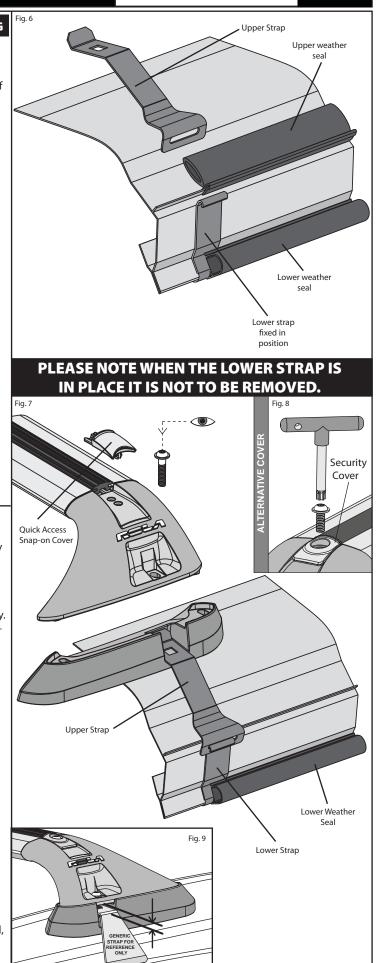

www.rola.com.au